
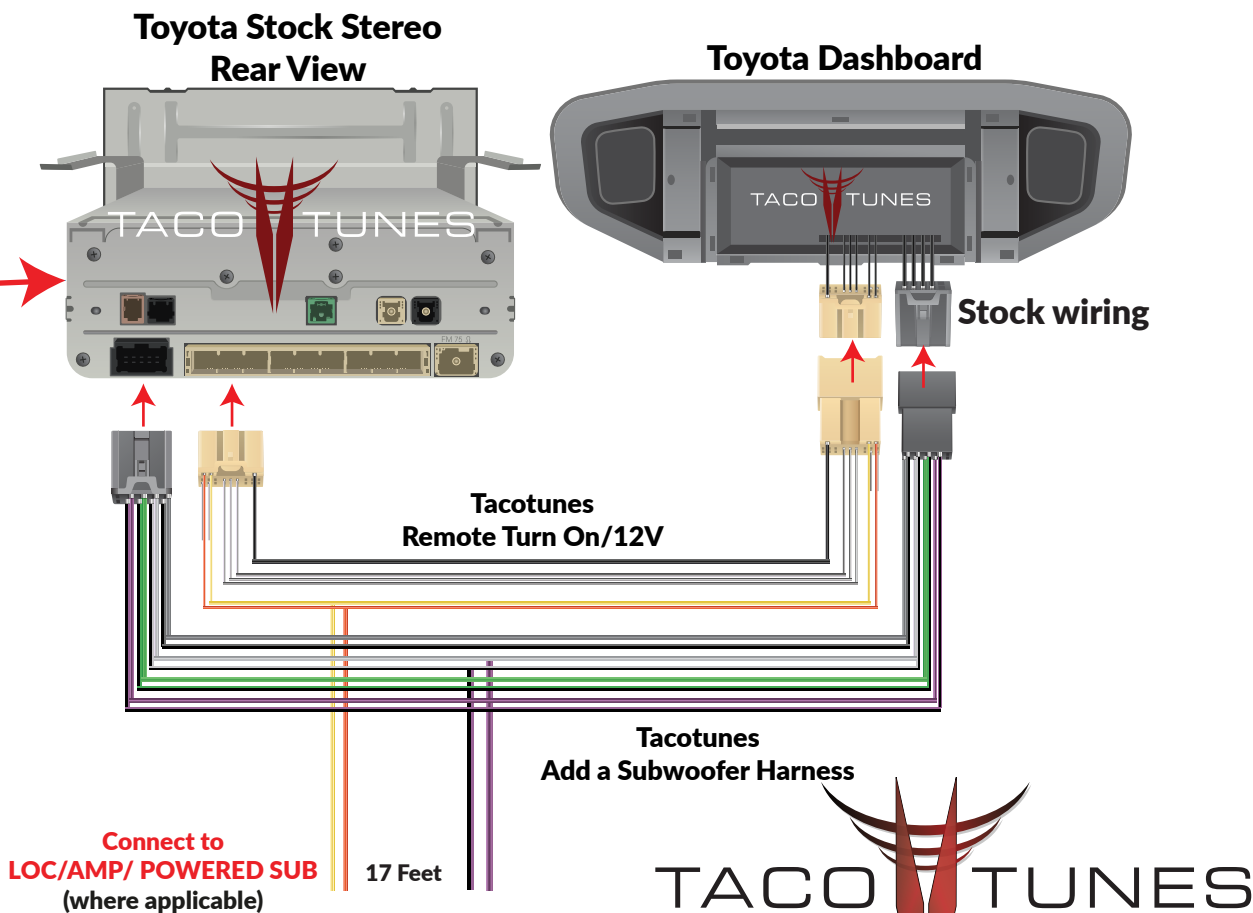



2019+ Toyota Rav4

Add Subwoofer(s) to stock stereo -
mono subwoofer amplifier installation diagrams.



- No cutting or splicing factory wires!
- Works with most amplifier brands.

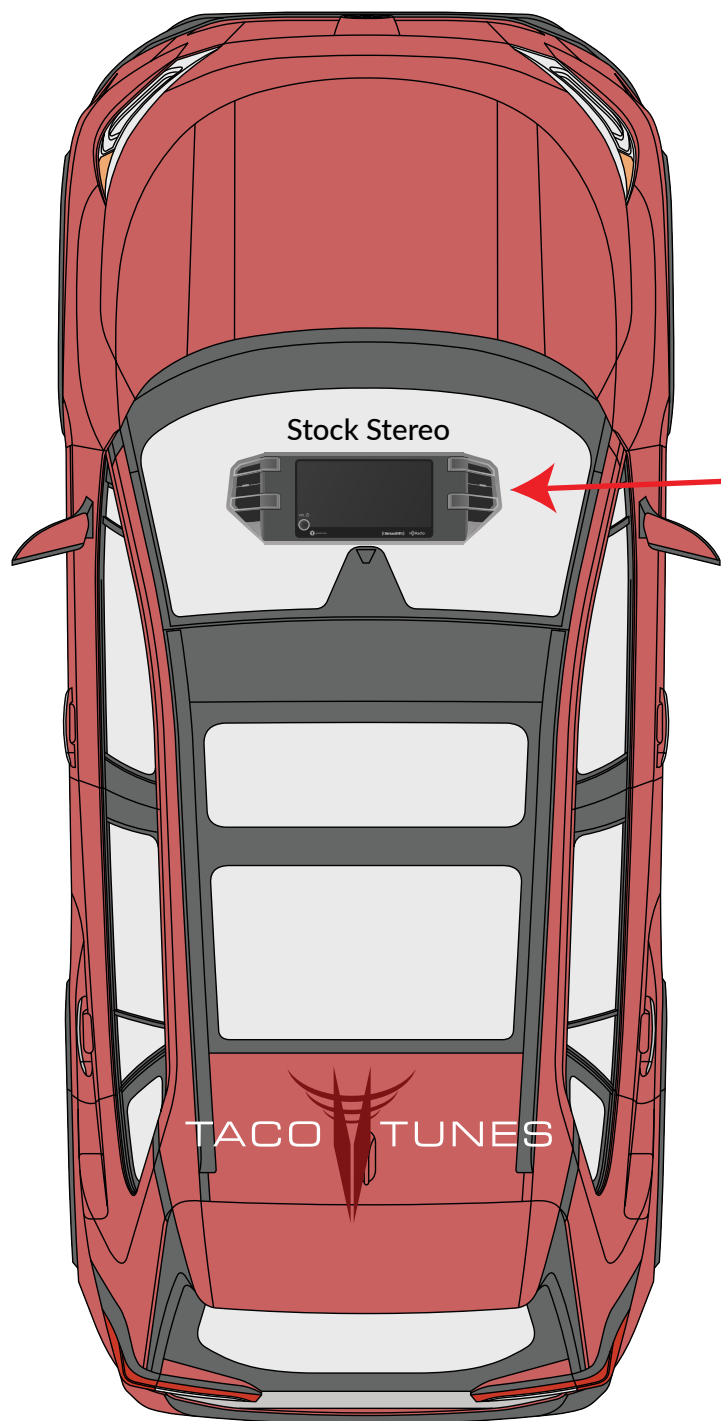

[CLICK HERE](#)
Plug & Play Harnesses

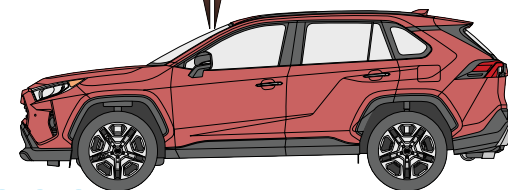

Example 1A:
Mono amp with high level input & autostart

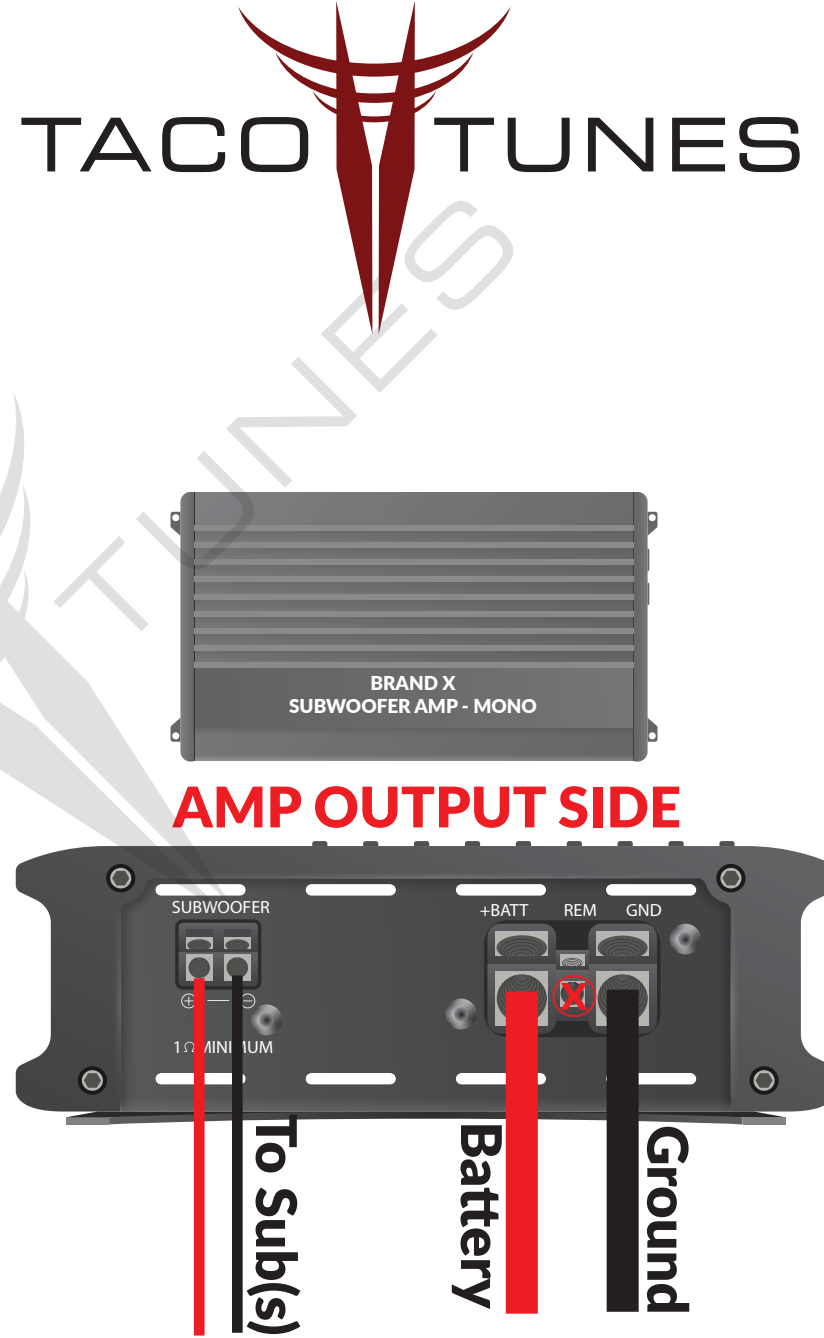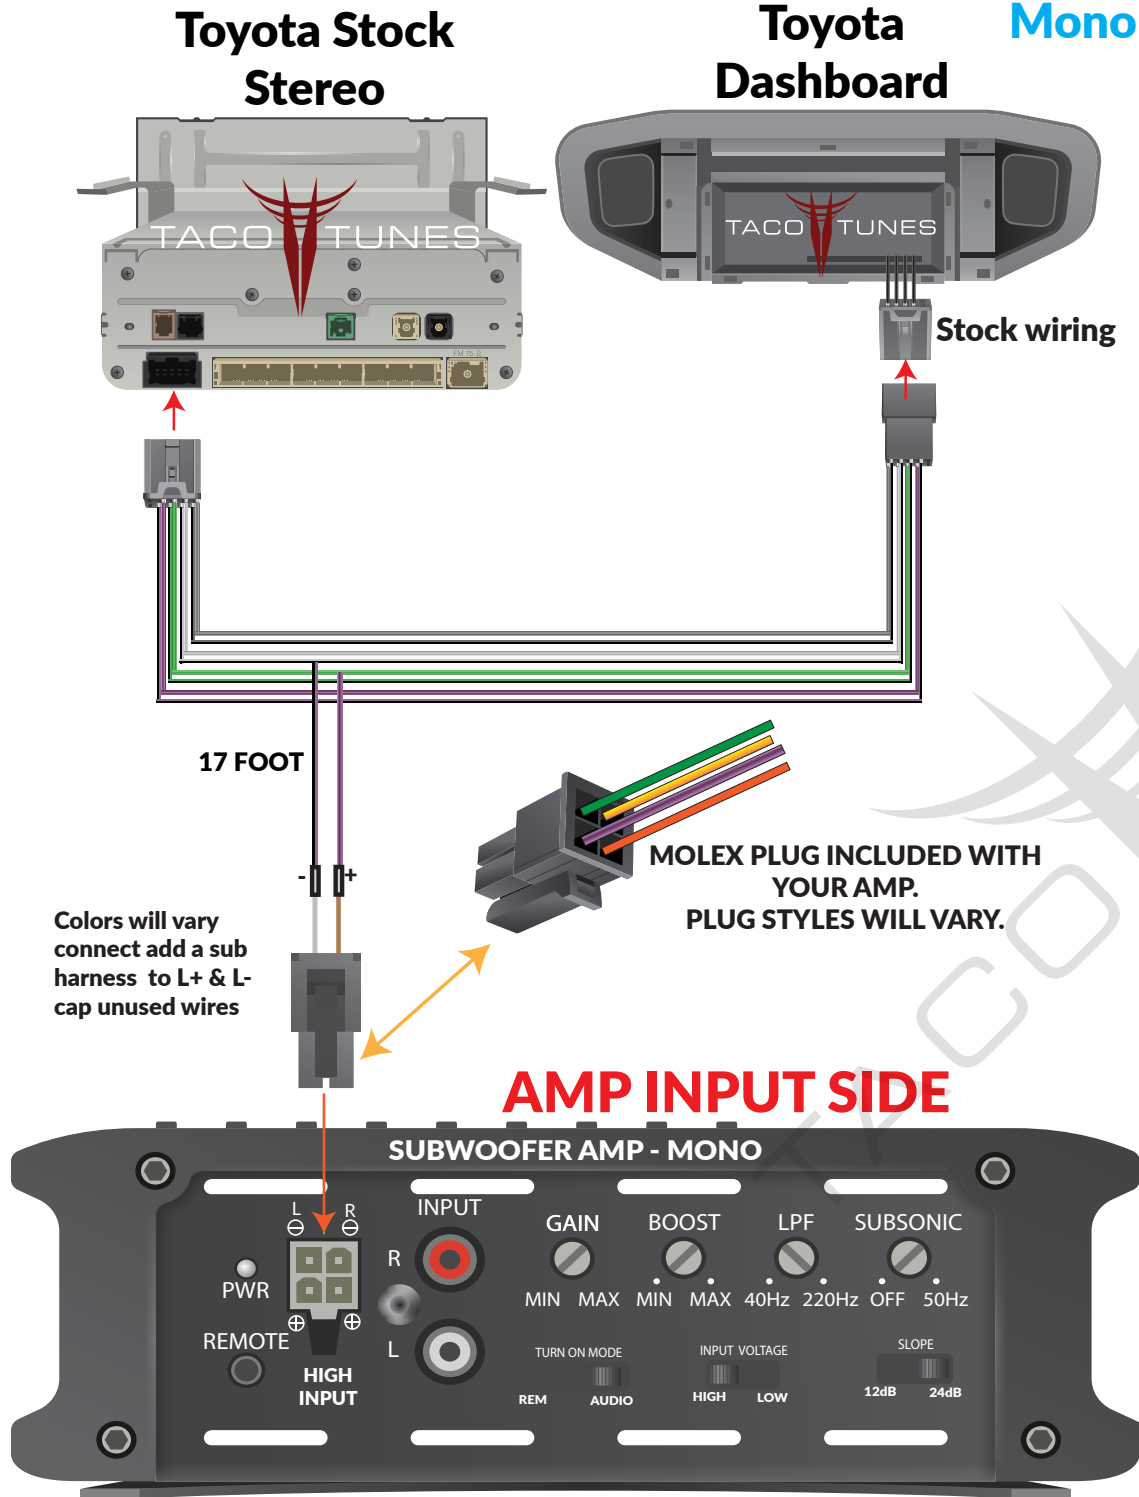


Example 1B:

Mono amp with high level input & autostart

Toyota Stock Stereo


Toyota Dashboard

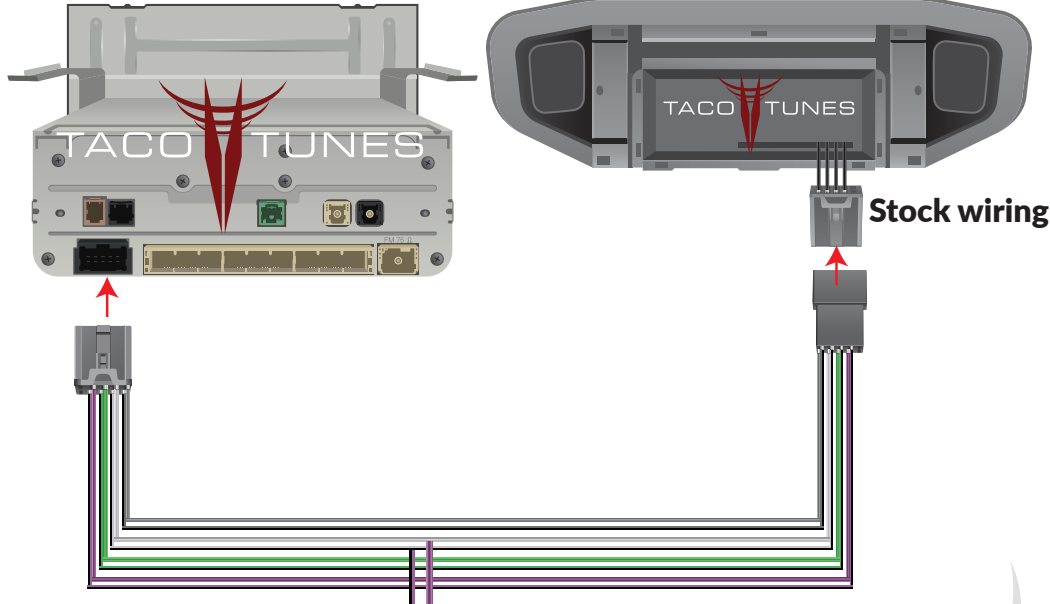


17 FOOT

High Level to RCA
Available on our website.

AMP INPUT SIDE

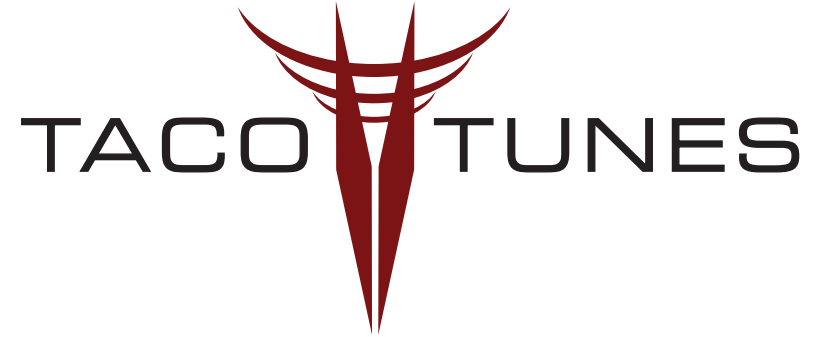


AMP OUTPUT SIDE

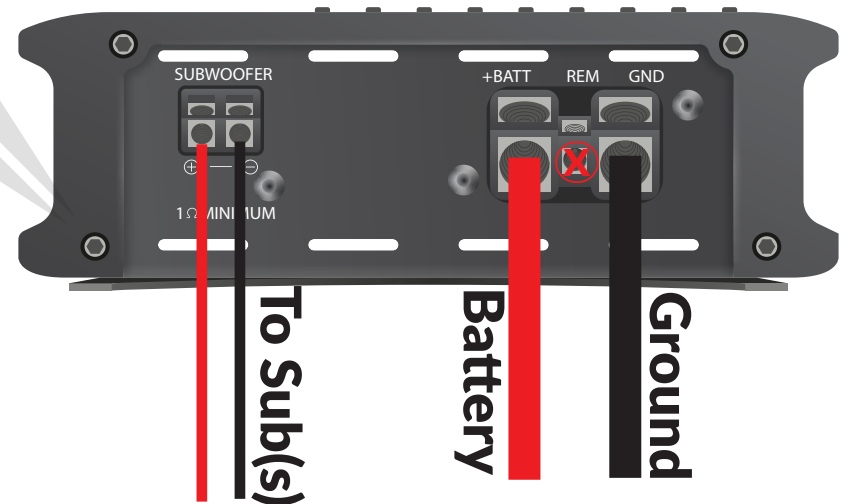

Toyota Stock Stereo Rear View


Toyota Dashboard

Example 2A: Mono amp with low level input Audio Control LC2i Pro

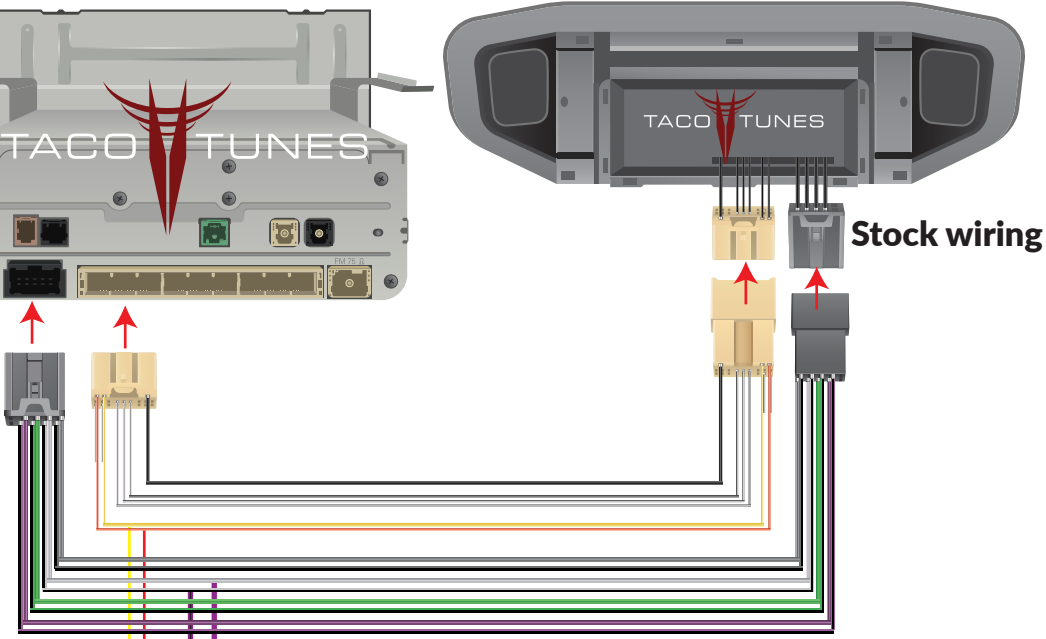

Stock wiring

AMP OUTPUT SIDE


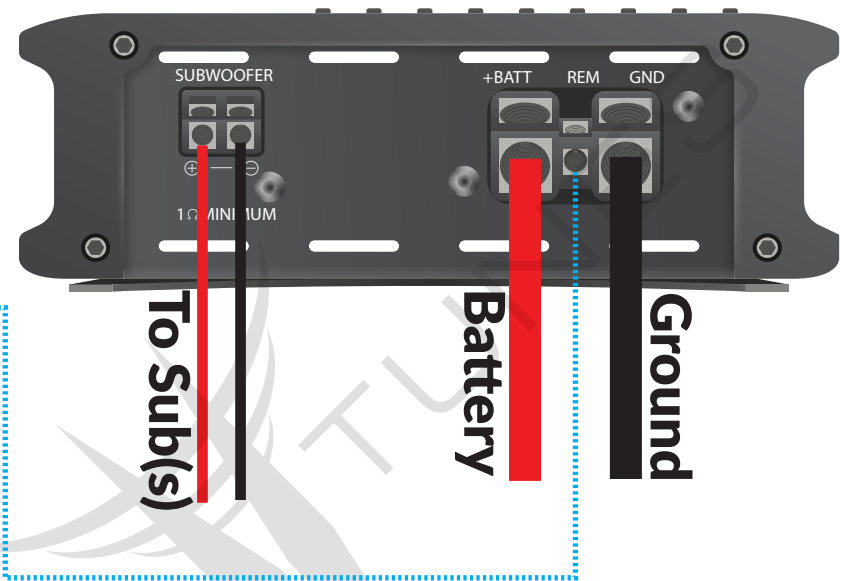


To Sub(s)

Battery

Ground



AMP INPUT SIDE

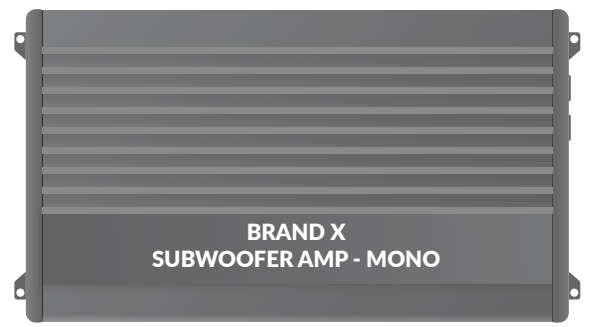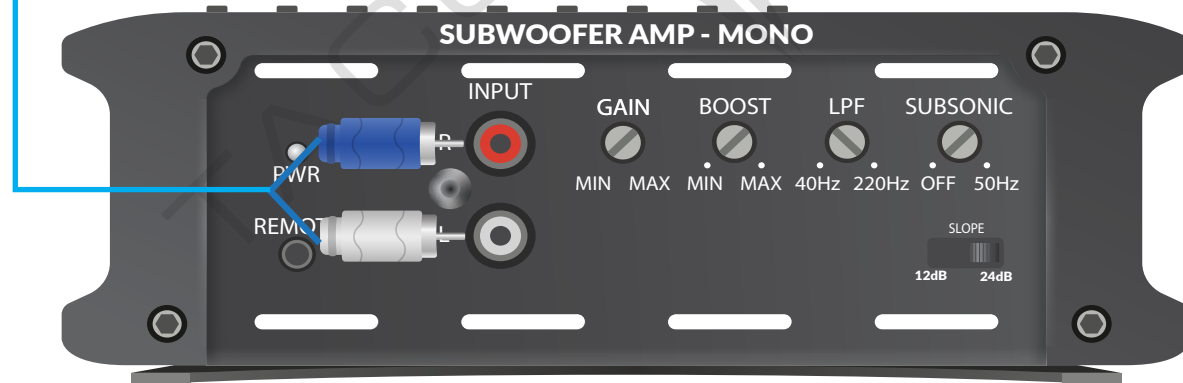



Toyota Stock Stereo Rear View

Toyota Dashboard


Example 2B: Mono amp with low level input Powered Line Out Converter (LOC)

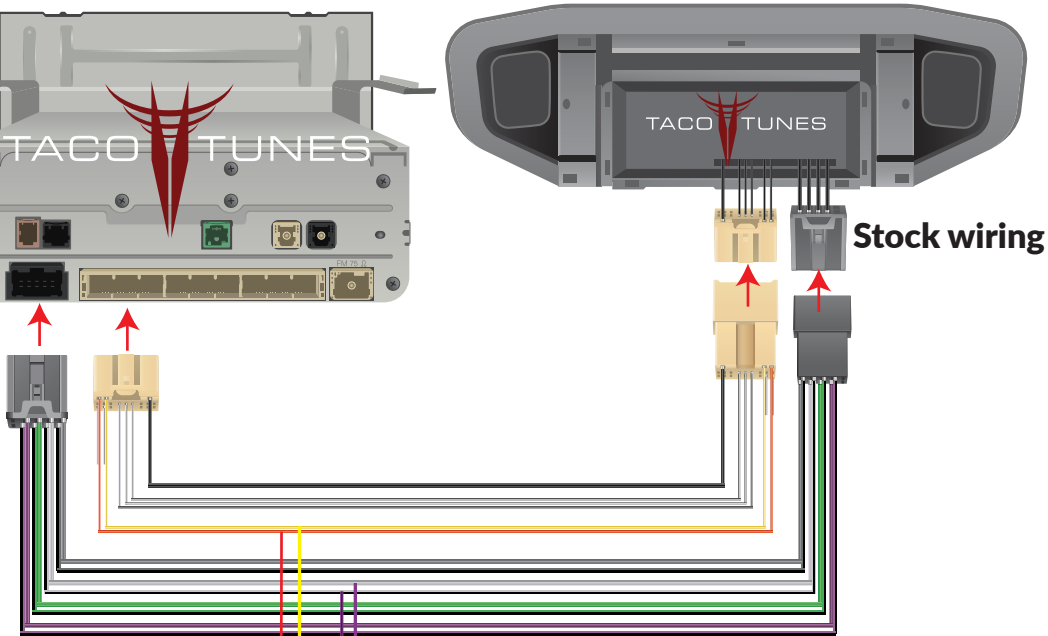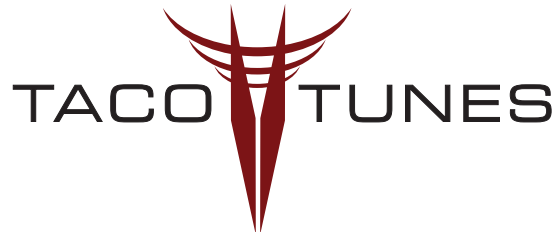

AMP OUTPUT SIDE

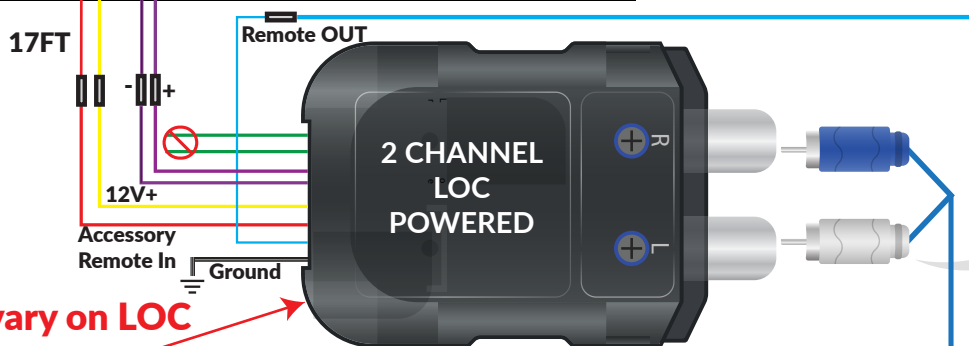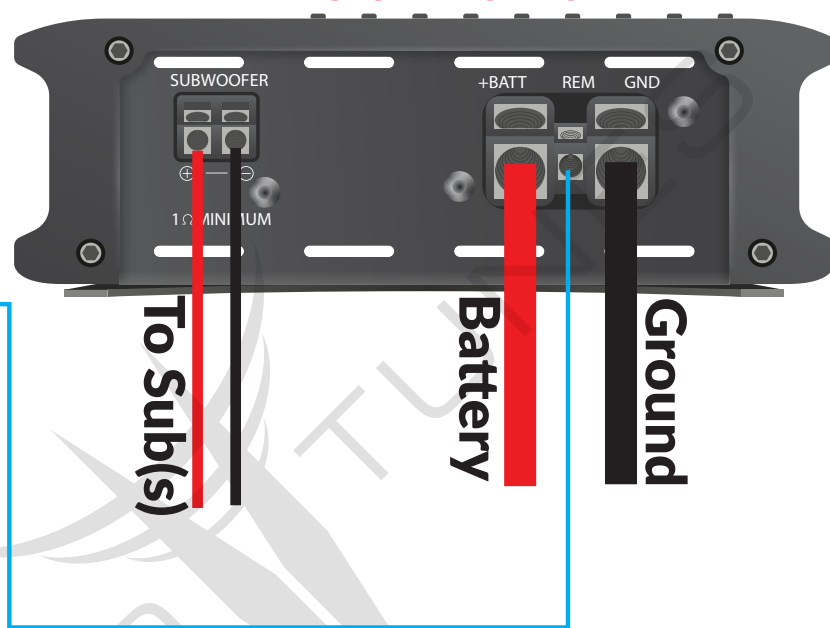


AMP INPUT SIDE

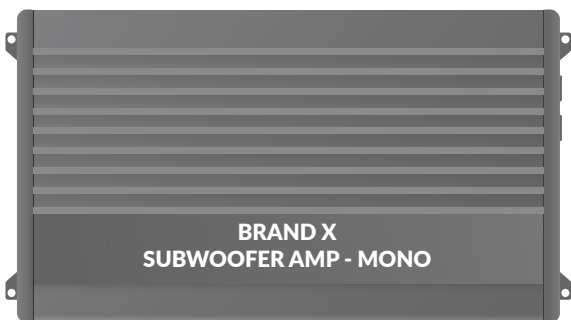

Example Subwoofer amplifier.

[Click here for notes on how to setup your amplifier and a list of FAQ.](#)

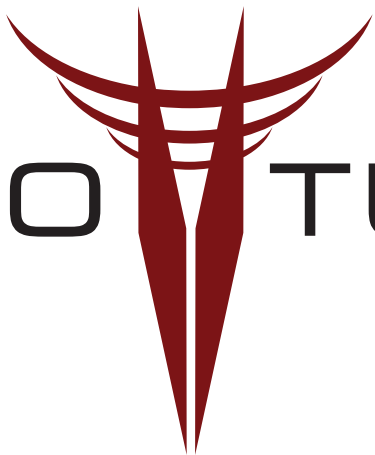

TACO  TUNES