




# 2018+ Toyota Sienna

Add Subwoofer(s) to stock stereo -  
mono subwoofer amplifier installation diagrams.

- No cutting or splicing factory wires!
- Works with most amplifier brands.

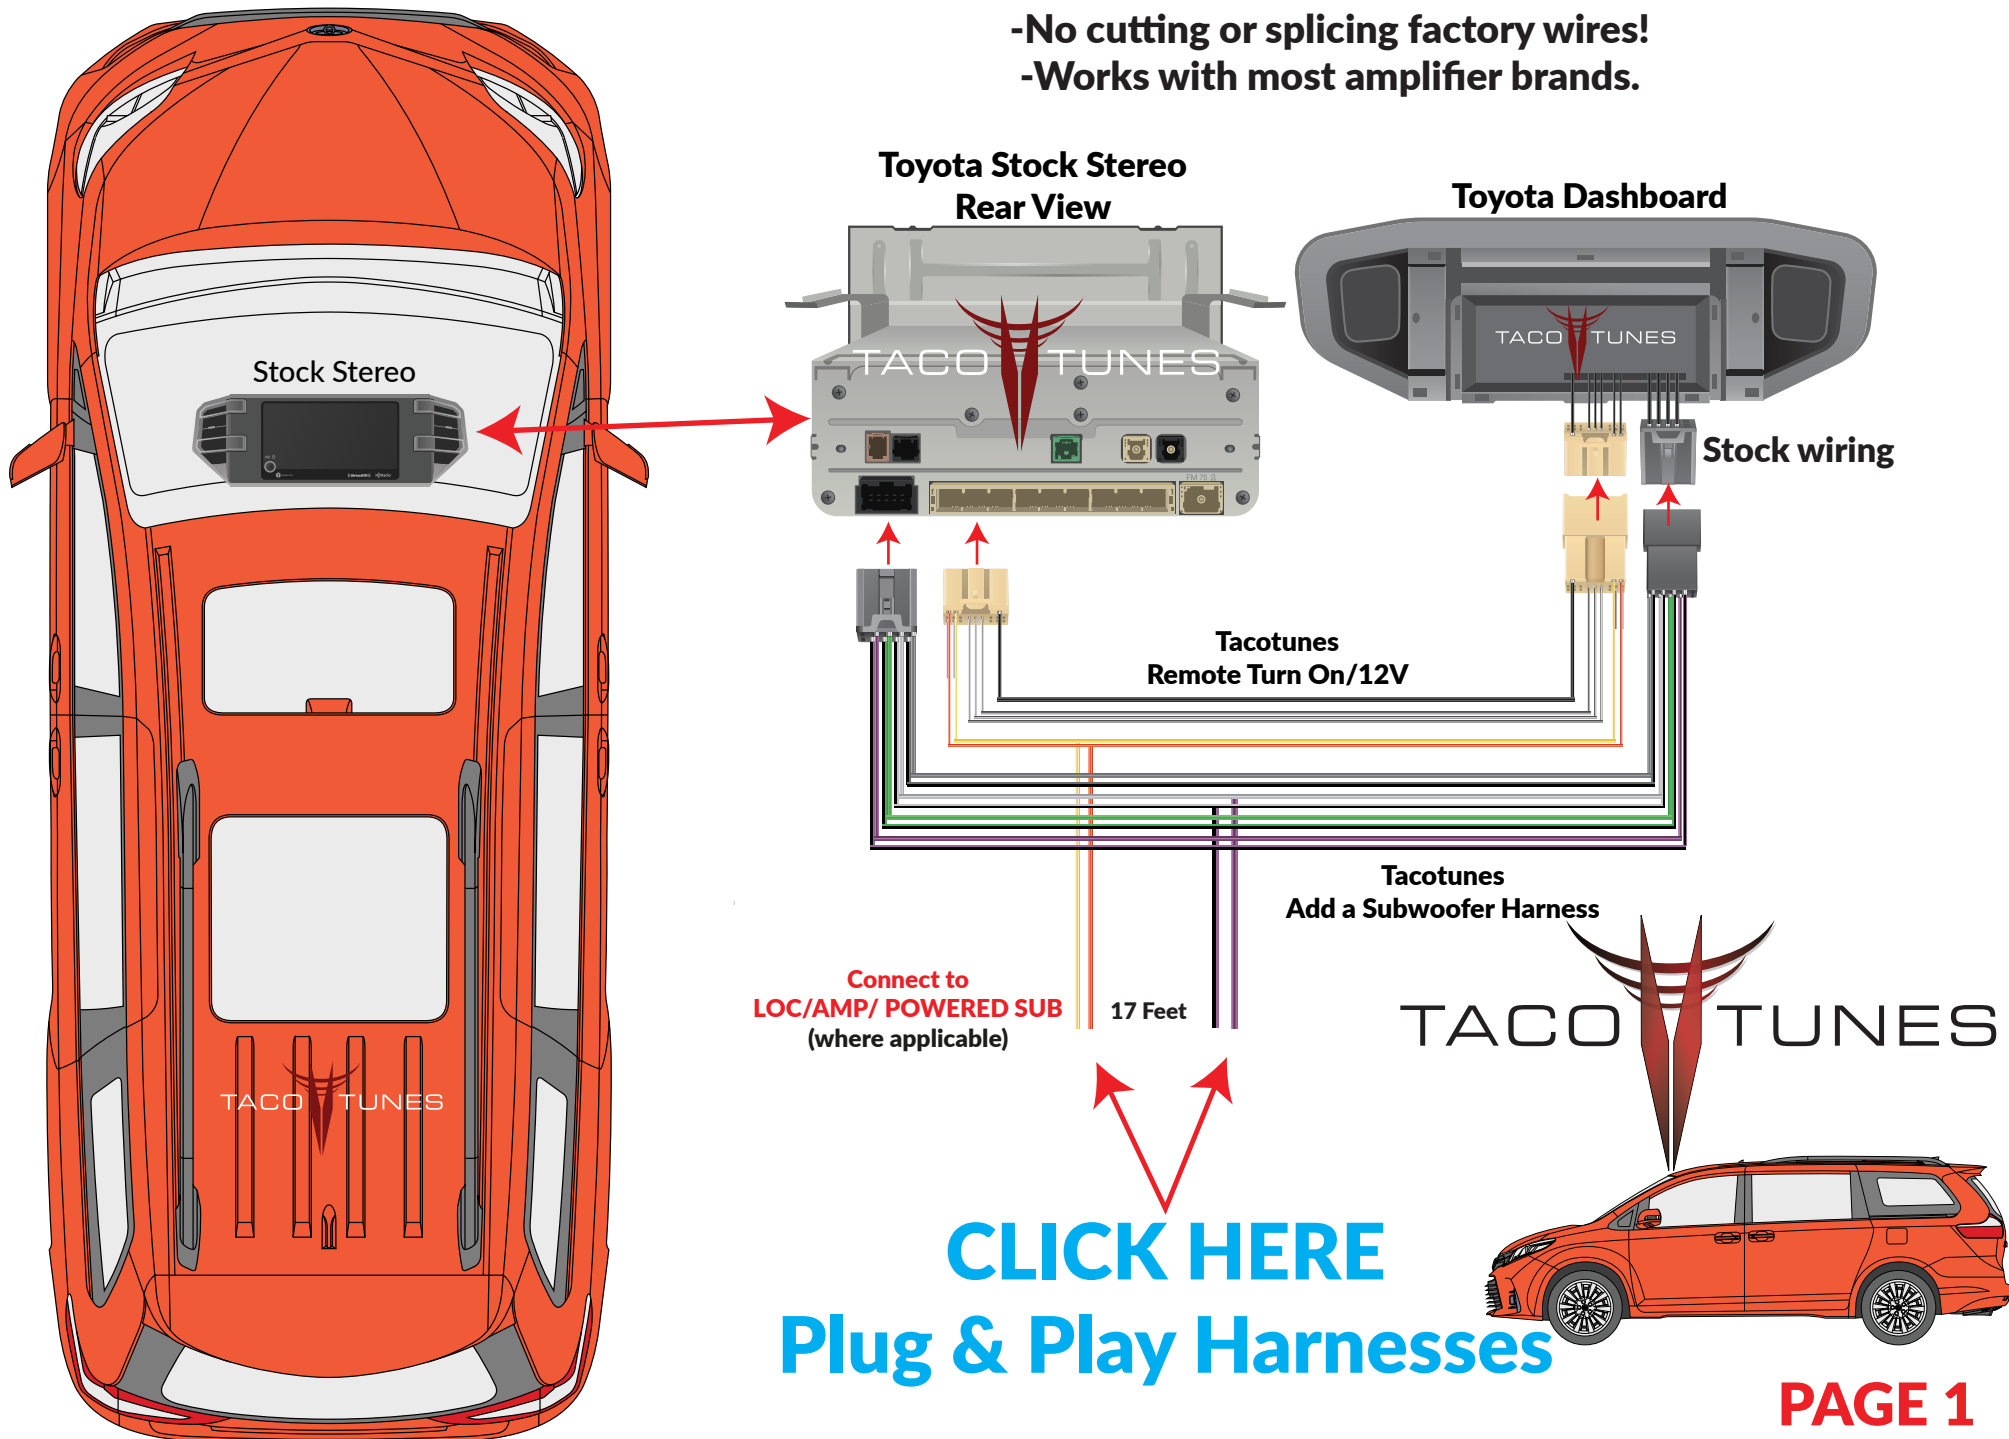

**Example 1A:**  
**Mono amp with high level input & autostart**

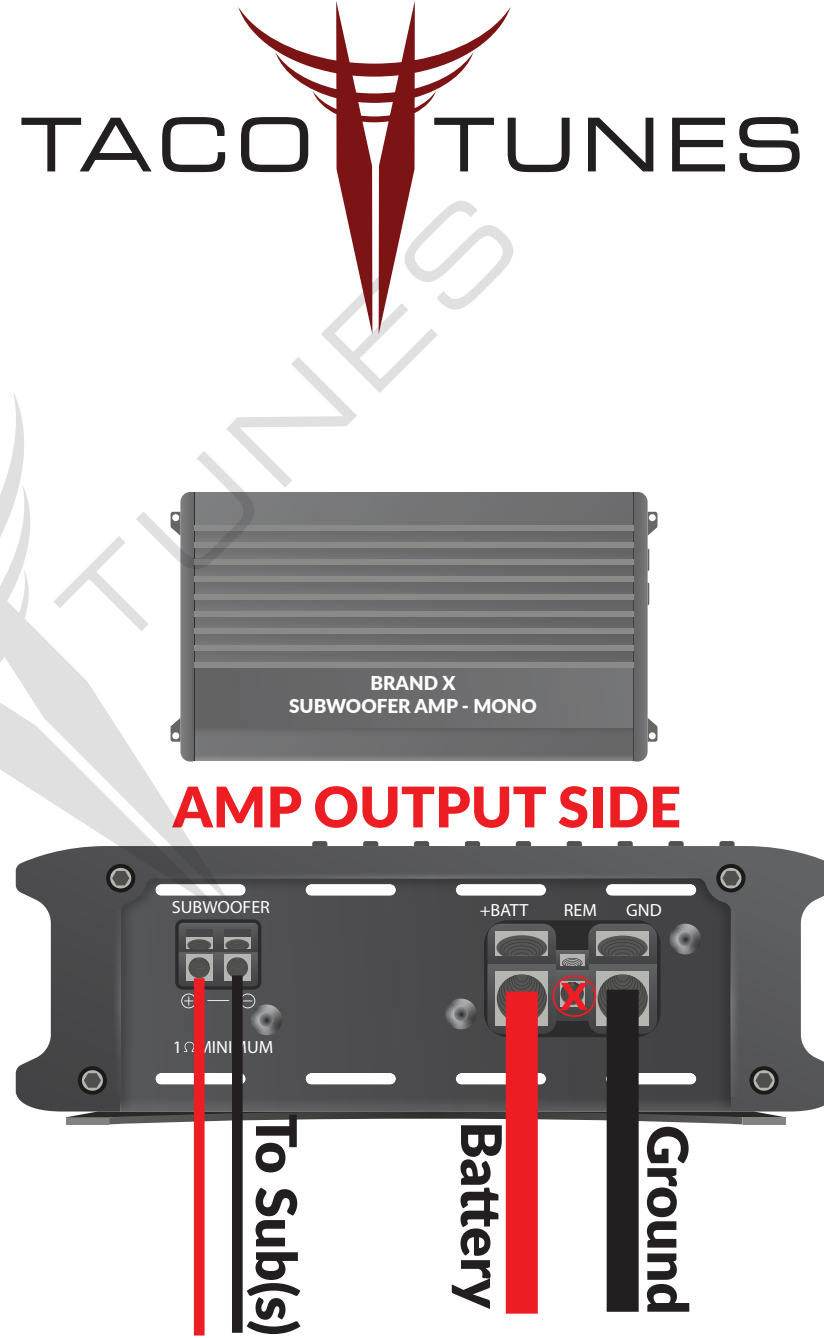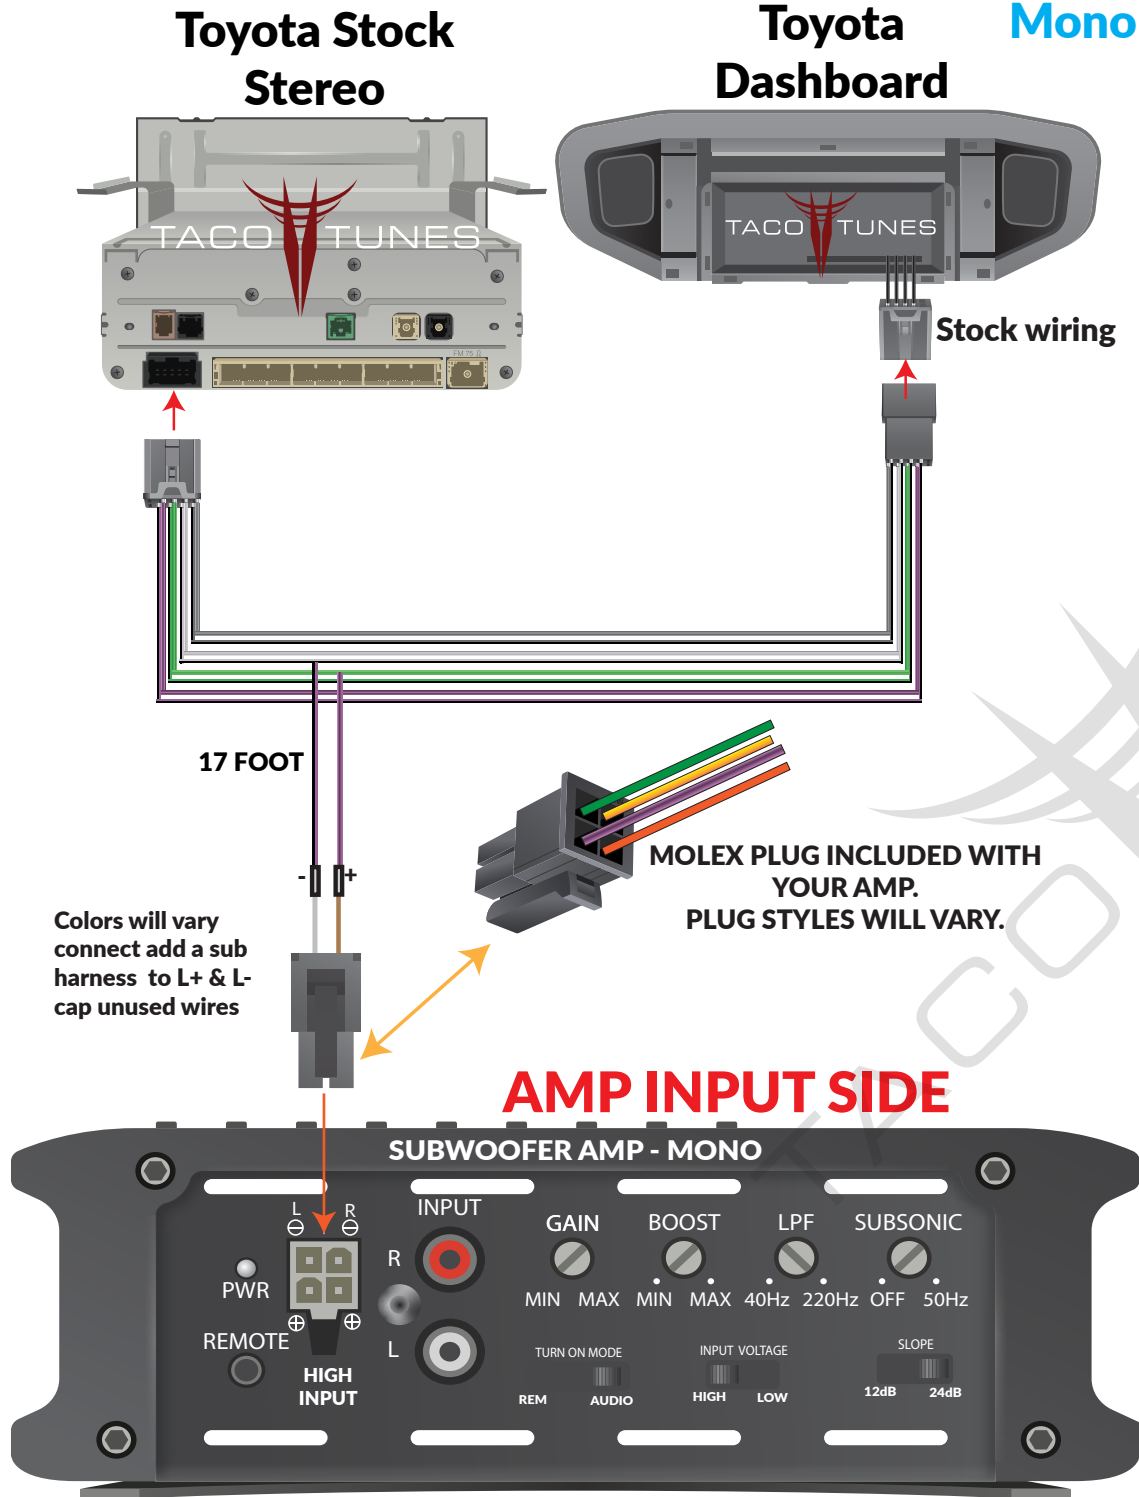


# Example 1B:

## Mono amp with high level input & autostart

Toyota Stock Stereo


Toyota Dashboard

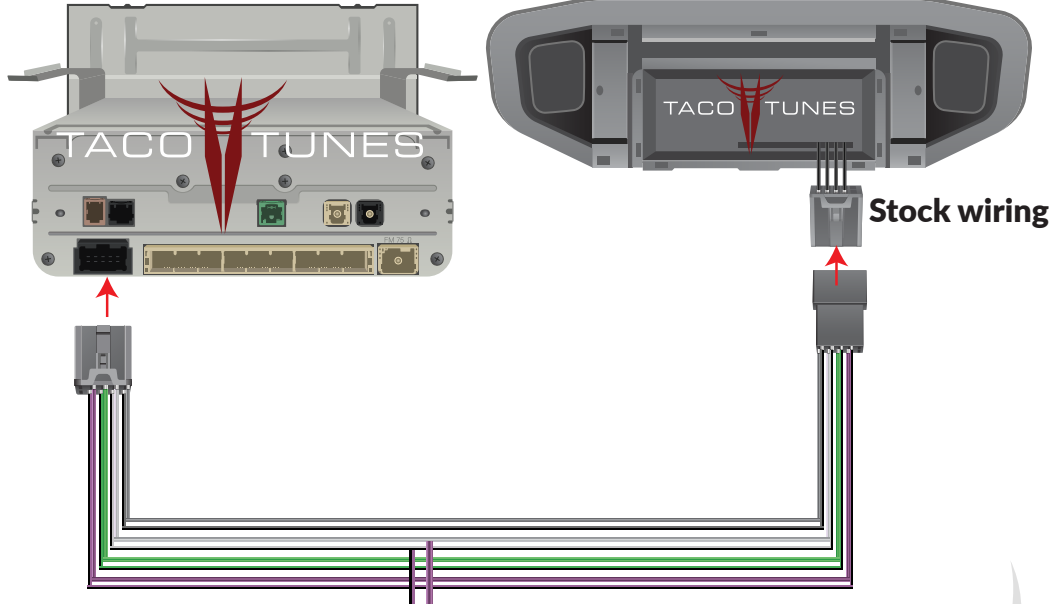


17 FOOT

High Level to RCA  
Available on our website.

### AMP INPUT SIDE

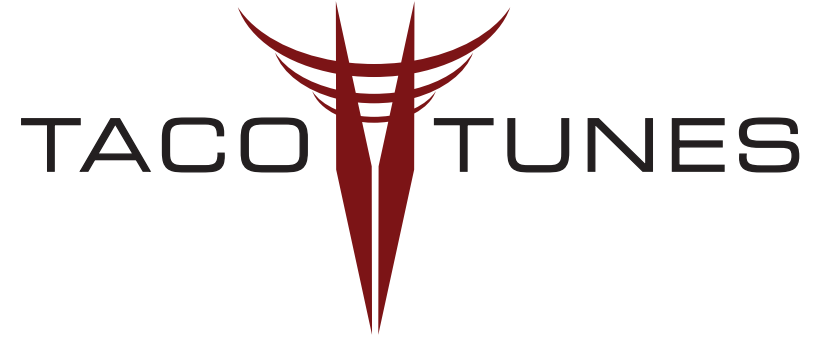

### AMP OUTPUT SIDE

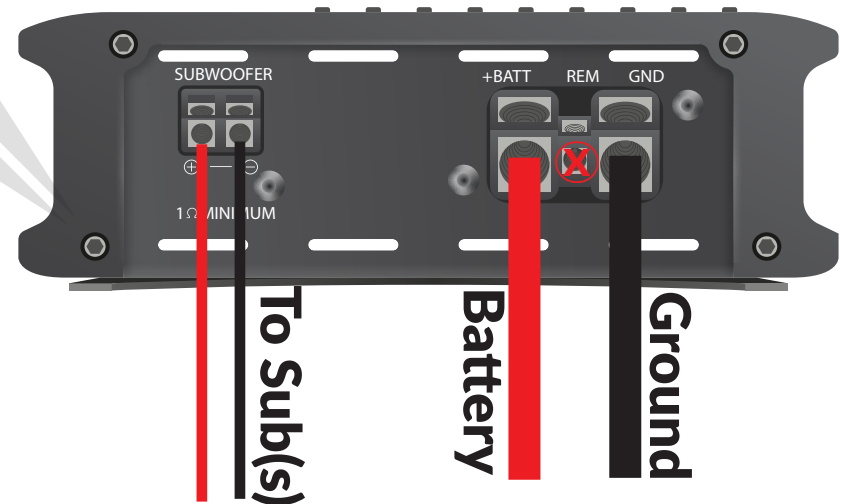


# Toyota Stock Stereo Rear View

# Toyota Dashboard



# Example 2A: Mono amp with low level input Audio Control LC2i Pro



## AMP OUTPUT SIDE

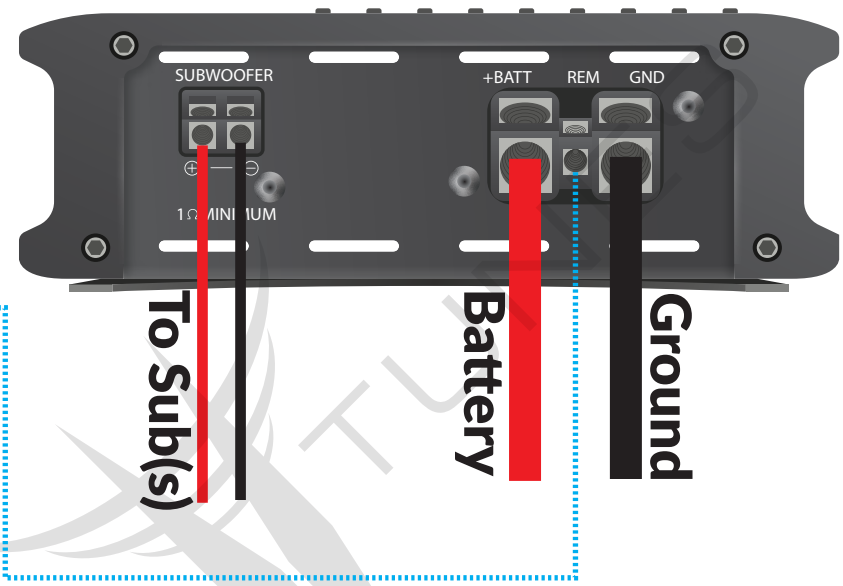



## AMP INPUT SIDE

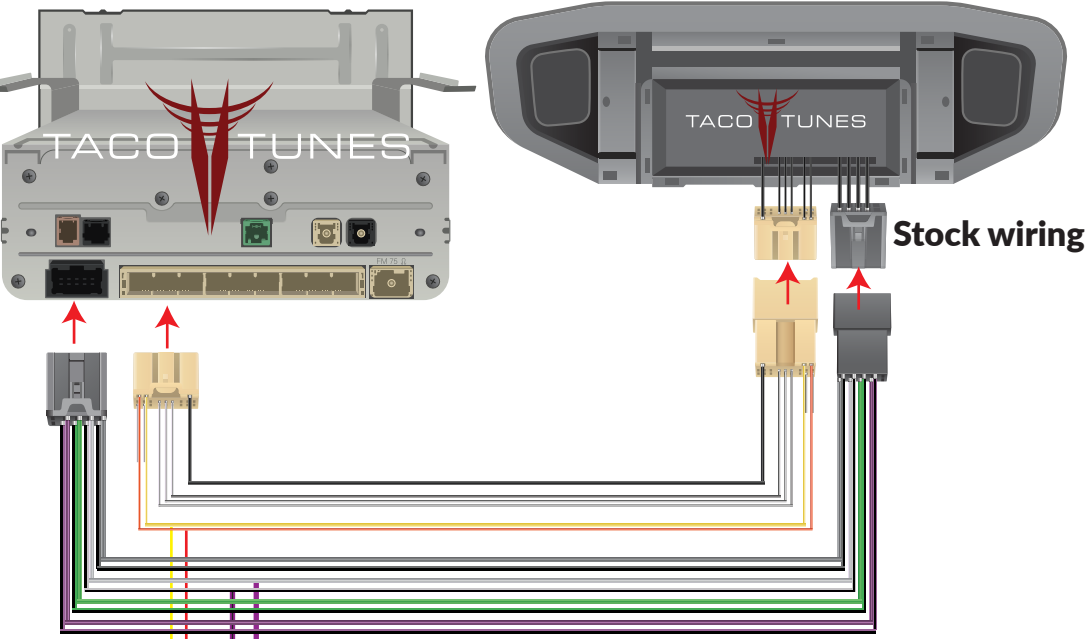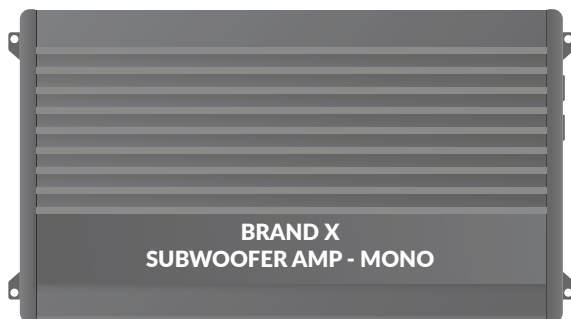



# Toyota Stock Stereo Rear View

# Toyota Dashboard


# Example 2B: Mono amp with low level input Powered Line Out Converter (LOC)

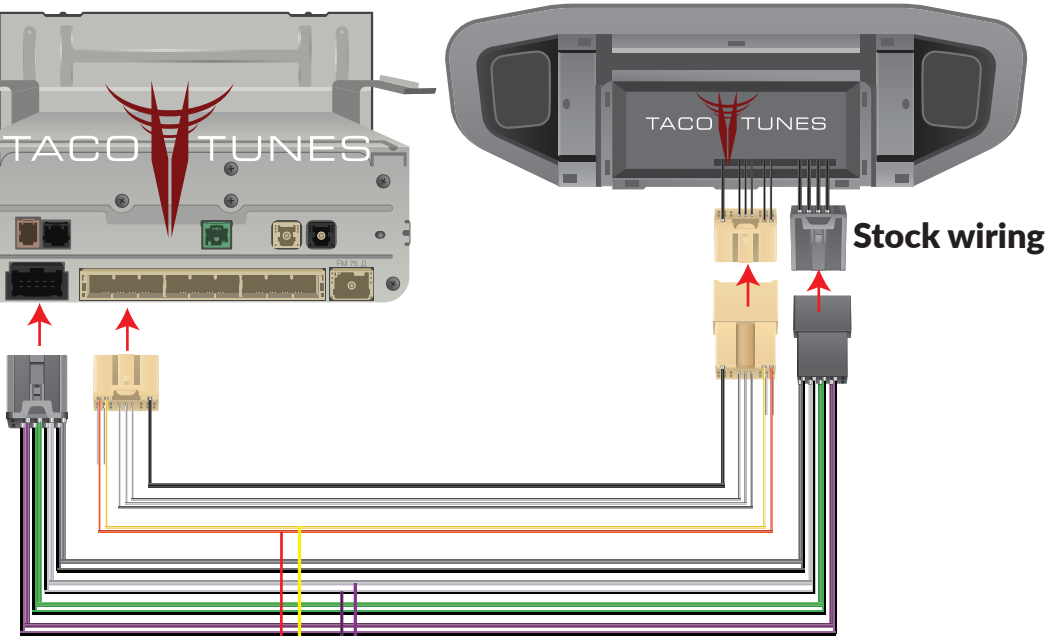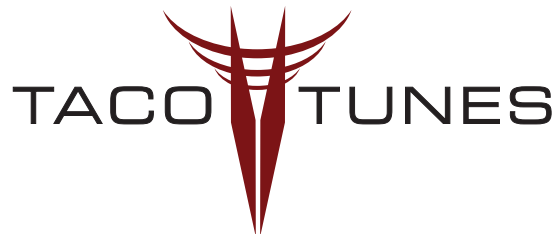

## AMP OUTPUT SIDE

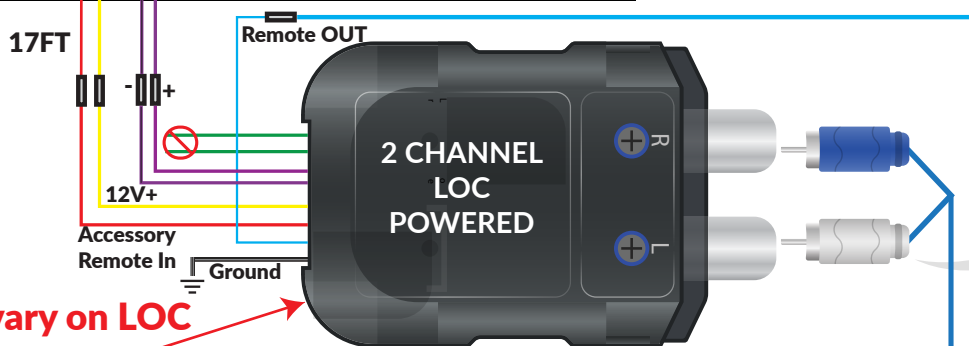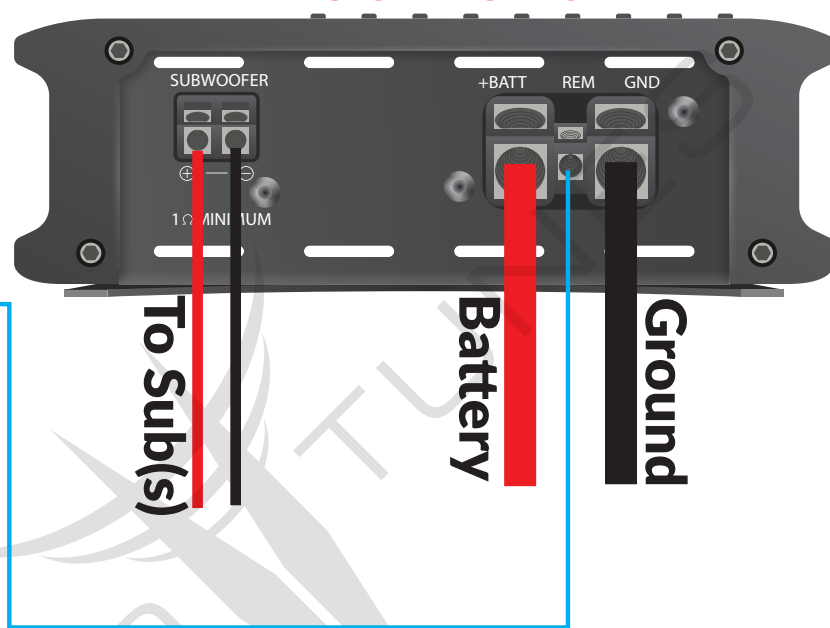


## AMP INPUT SIDE

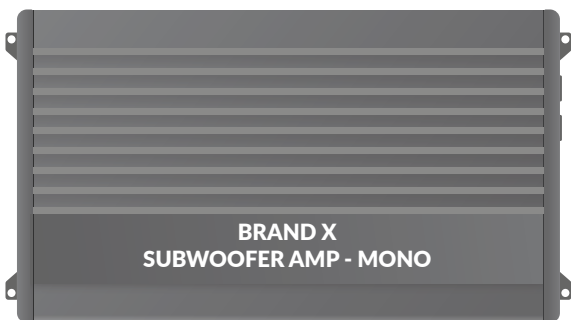

Example Subwoofer amplifier.

[Click here for notes on how to setup your amplifier and a list of FAQ.](#)

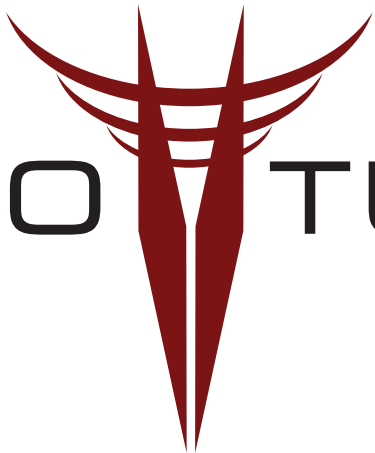

TACO  TUNES