
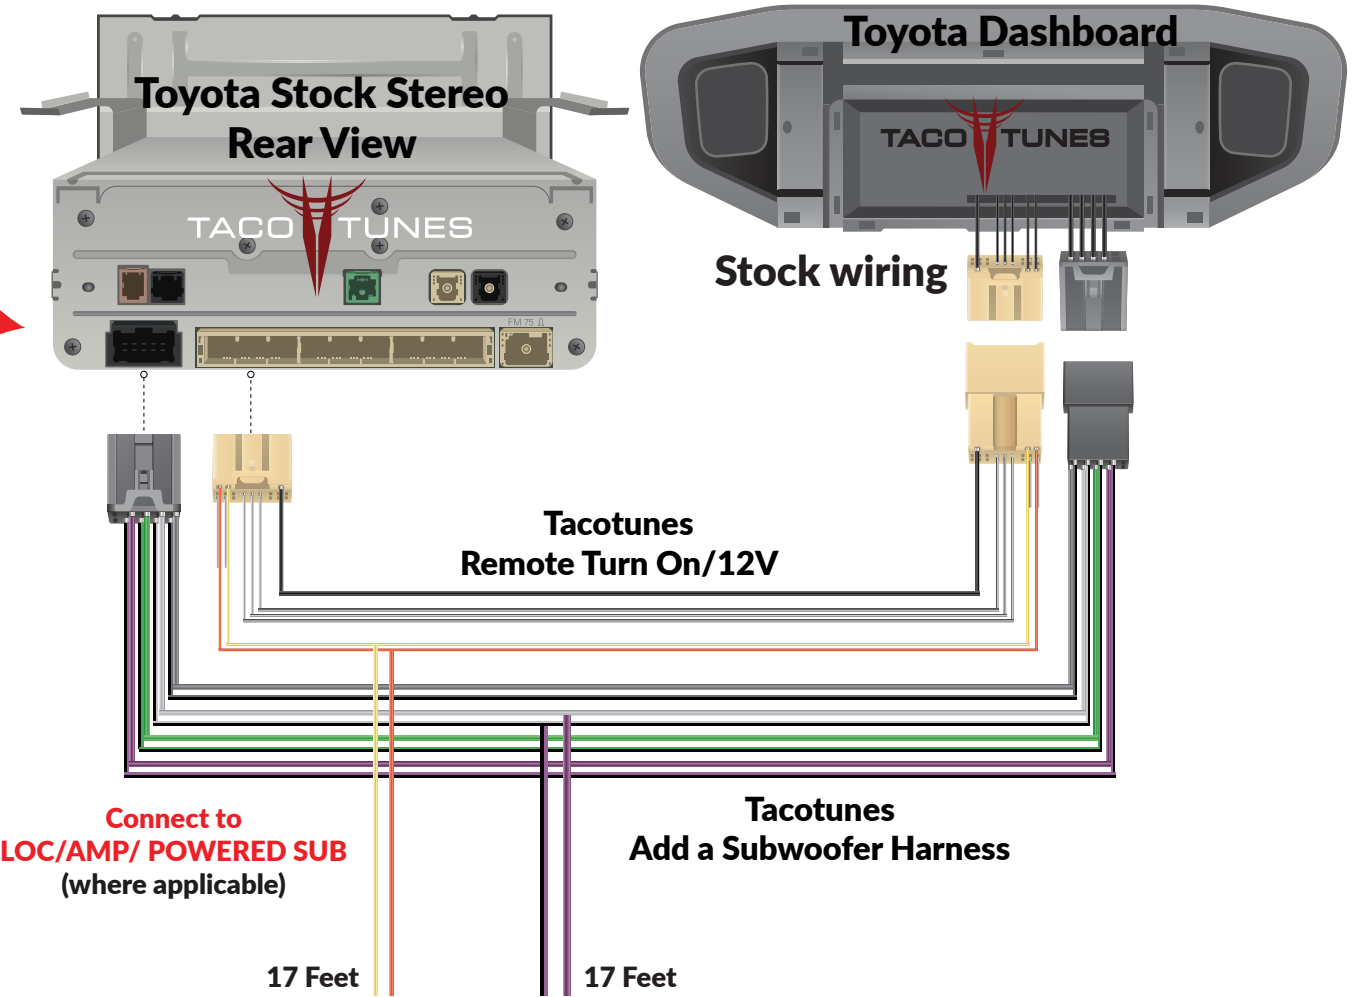


# 2018+ Toyota Sienna


**Add Subwoofer(s) to stock stereo - fast & easy!**

- No cutting or splicing factory wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

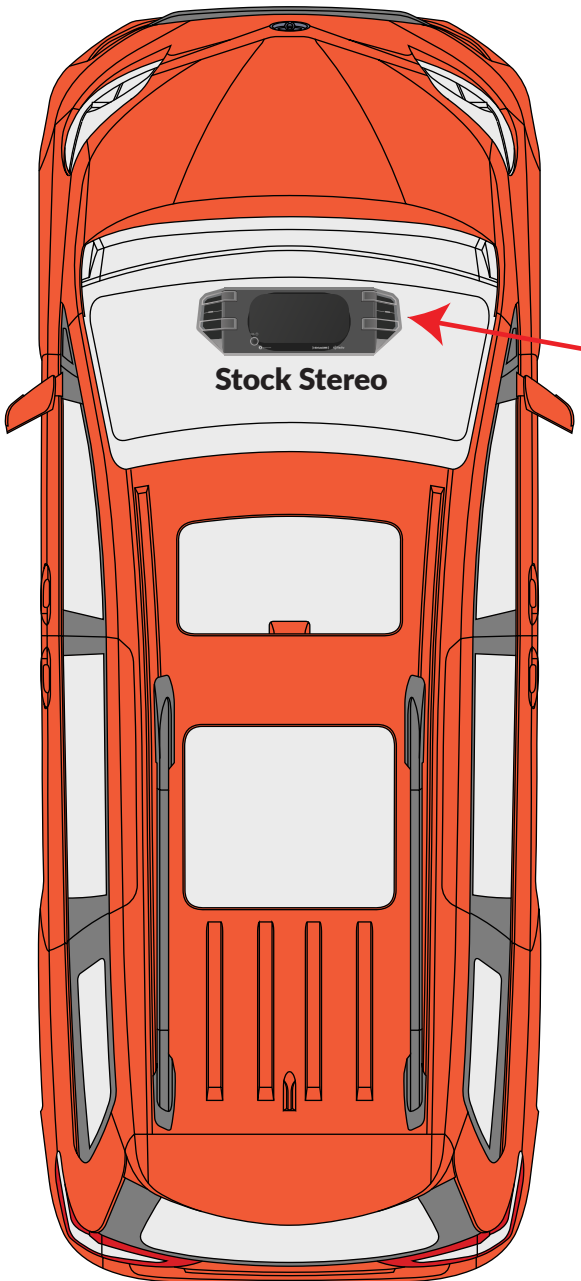


**CLICK HERE**  
Plug & Play Harnesses

# How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness **HIGH LEVEL INPUT WITH MOLEX PLUG**

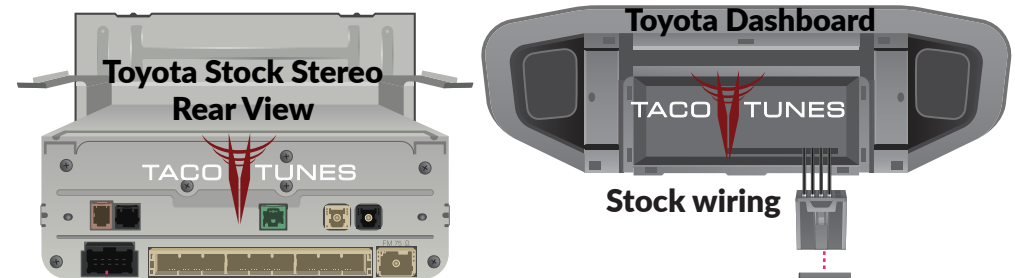

**Connect to  
LOC/AMP/ POWERED SUB  
(where applicable)**

17 Feet

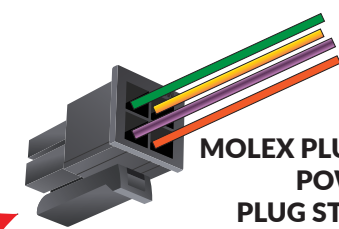

**MOLEX PLUG INCLUDED WITH  
POWERED SUB.  
PLUG STYLES WILL VARY.**

Molex plug wire colors will vary.  
Connect purple/black (-) to Left negative  
Connect purple (+) to Left positive



**High level input amp setting  
(where applicable)**


**Power  
(from battery)**

**Ground**

**TACO TUNES**

# How to add a powered sub to stock stereo using


## **tacotunes Add a Subwoofer Harness** **HIGH LEVEL INPUT WITH** **RCA ADAPTER**

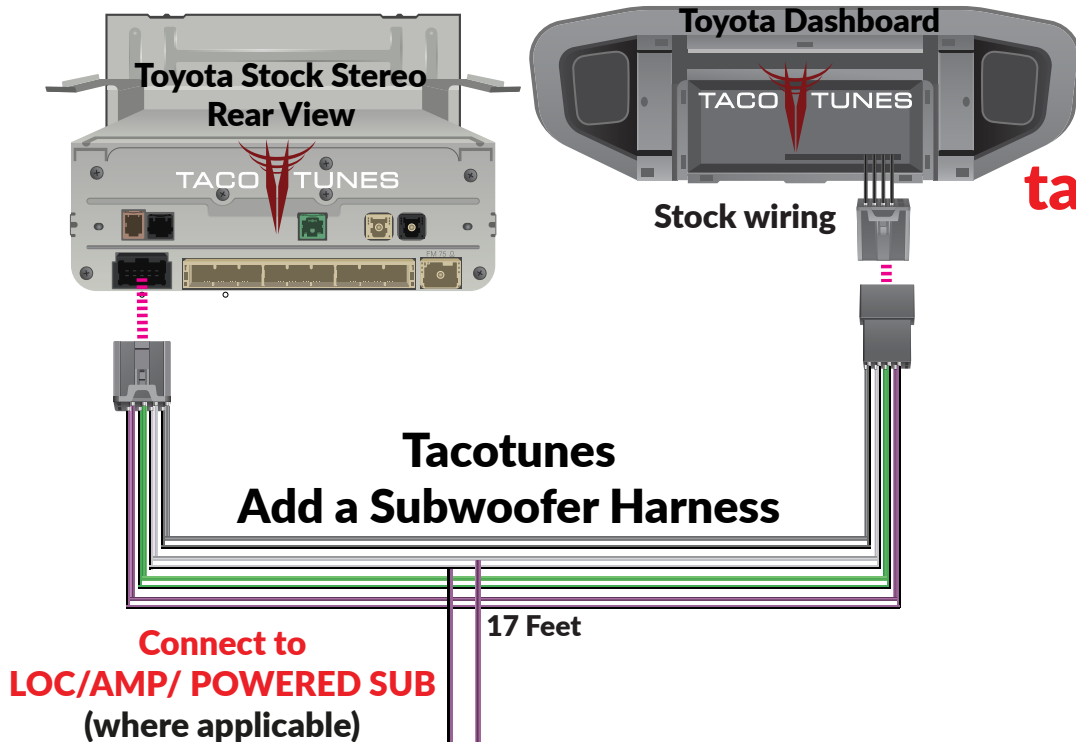

Connect harness to RCA adapter accordingly:

**Purple (+) : Positive**  
**Purple/Black (-) : Negative**



RCA adapters available on our website

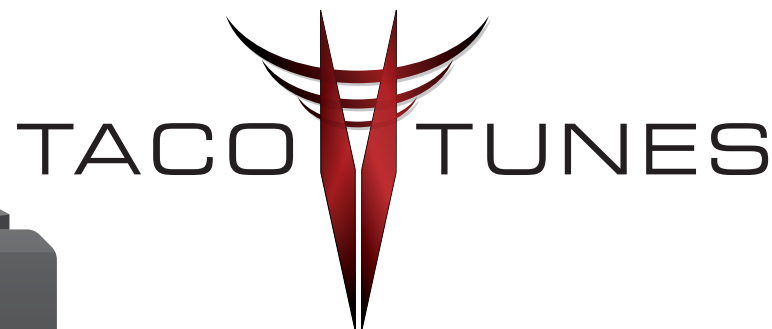

**Power**  
(from battery)



**Ground**

# How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness. **LOW LEVEL INPUT WITH AUDIO CONTROL LC2i PRO**

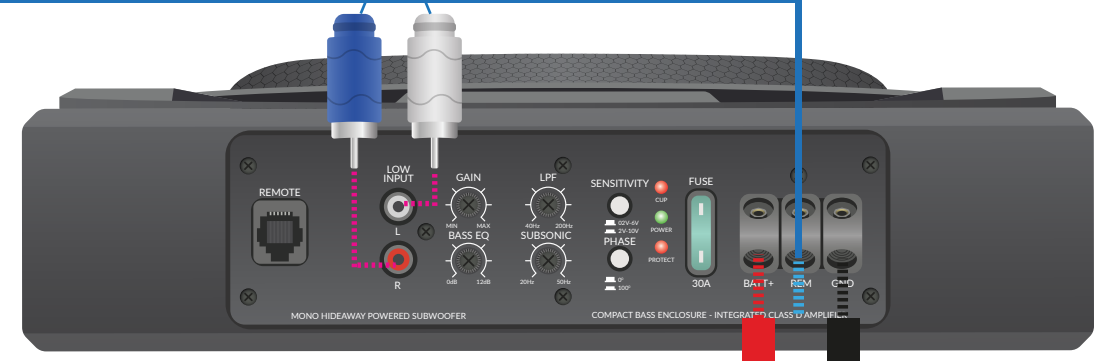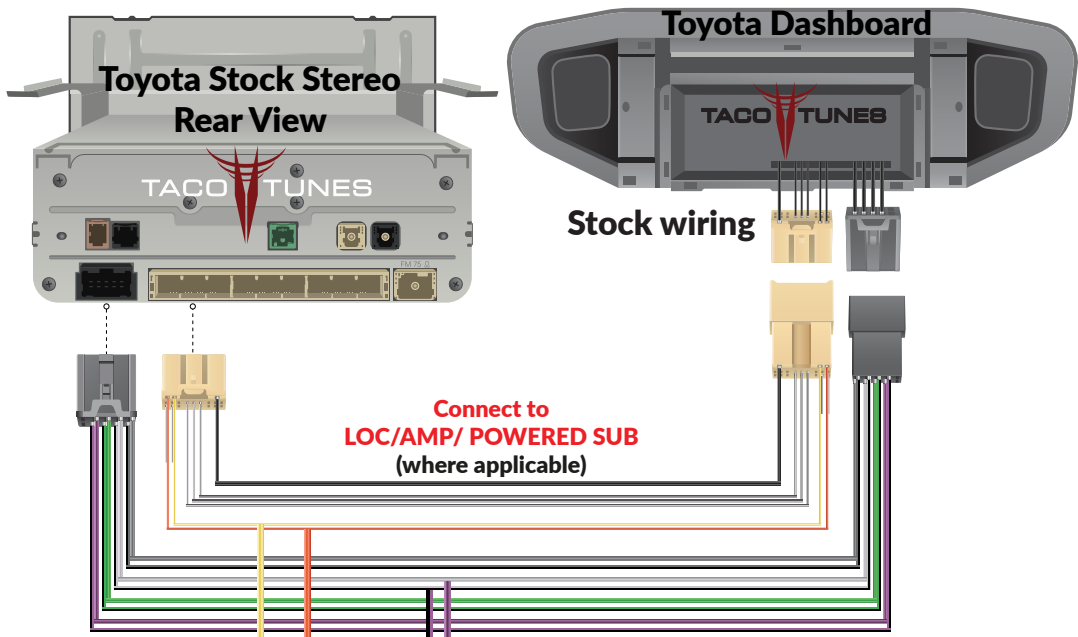

# How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness.

## LOW LEVEL INPUT WITH POWERED 2 CHANNEL LOC

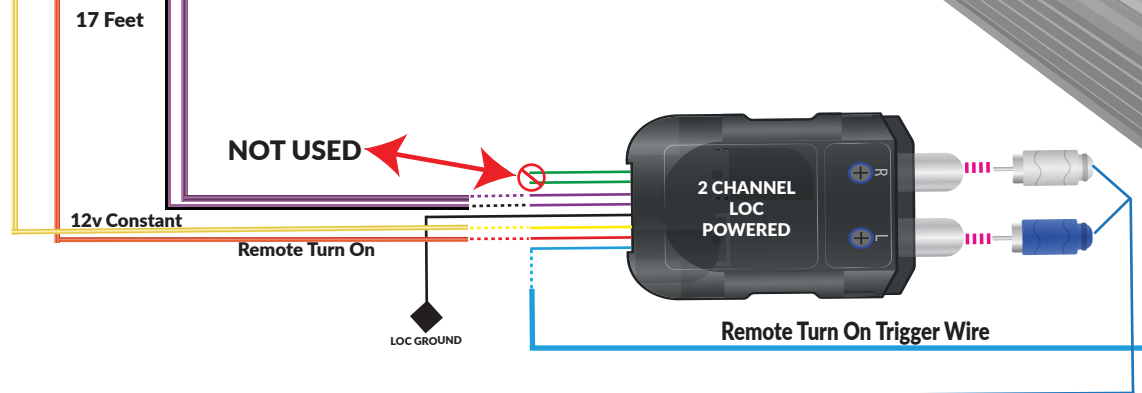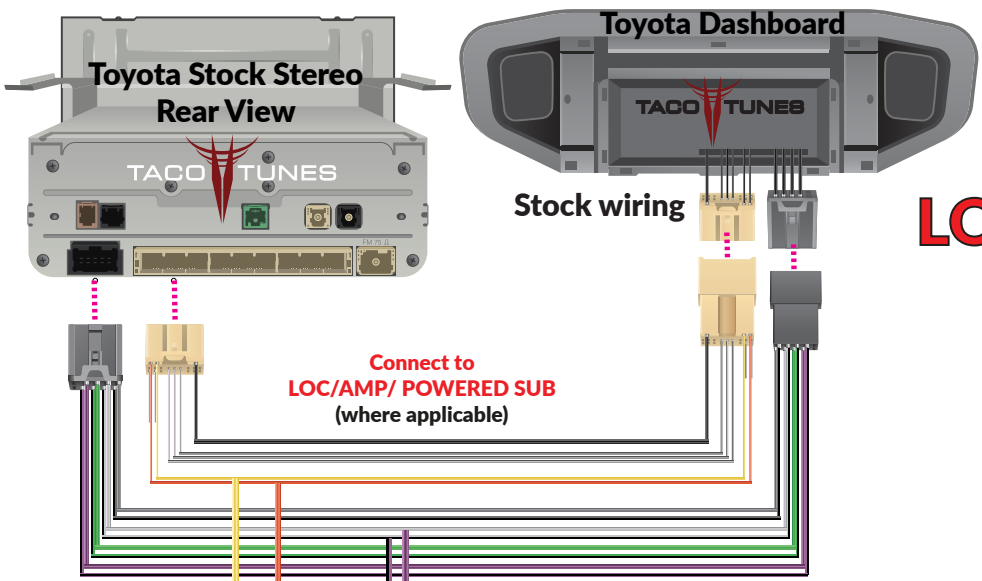


POWER (FROM BATTERY)

Ground

# How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness.

## LOW LEVEL INPUT WITH 2 CHANNEL LOC

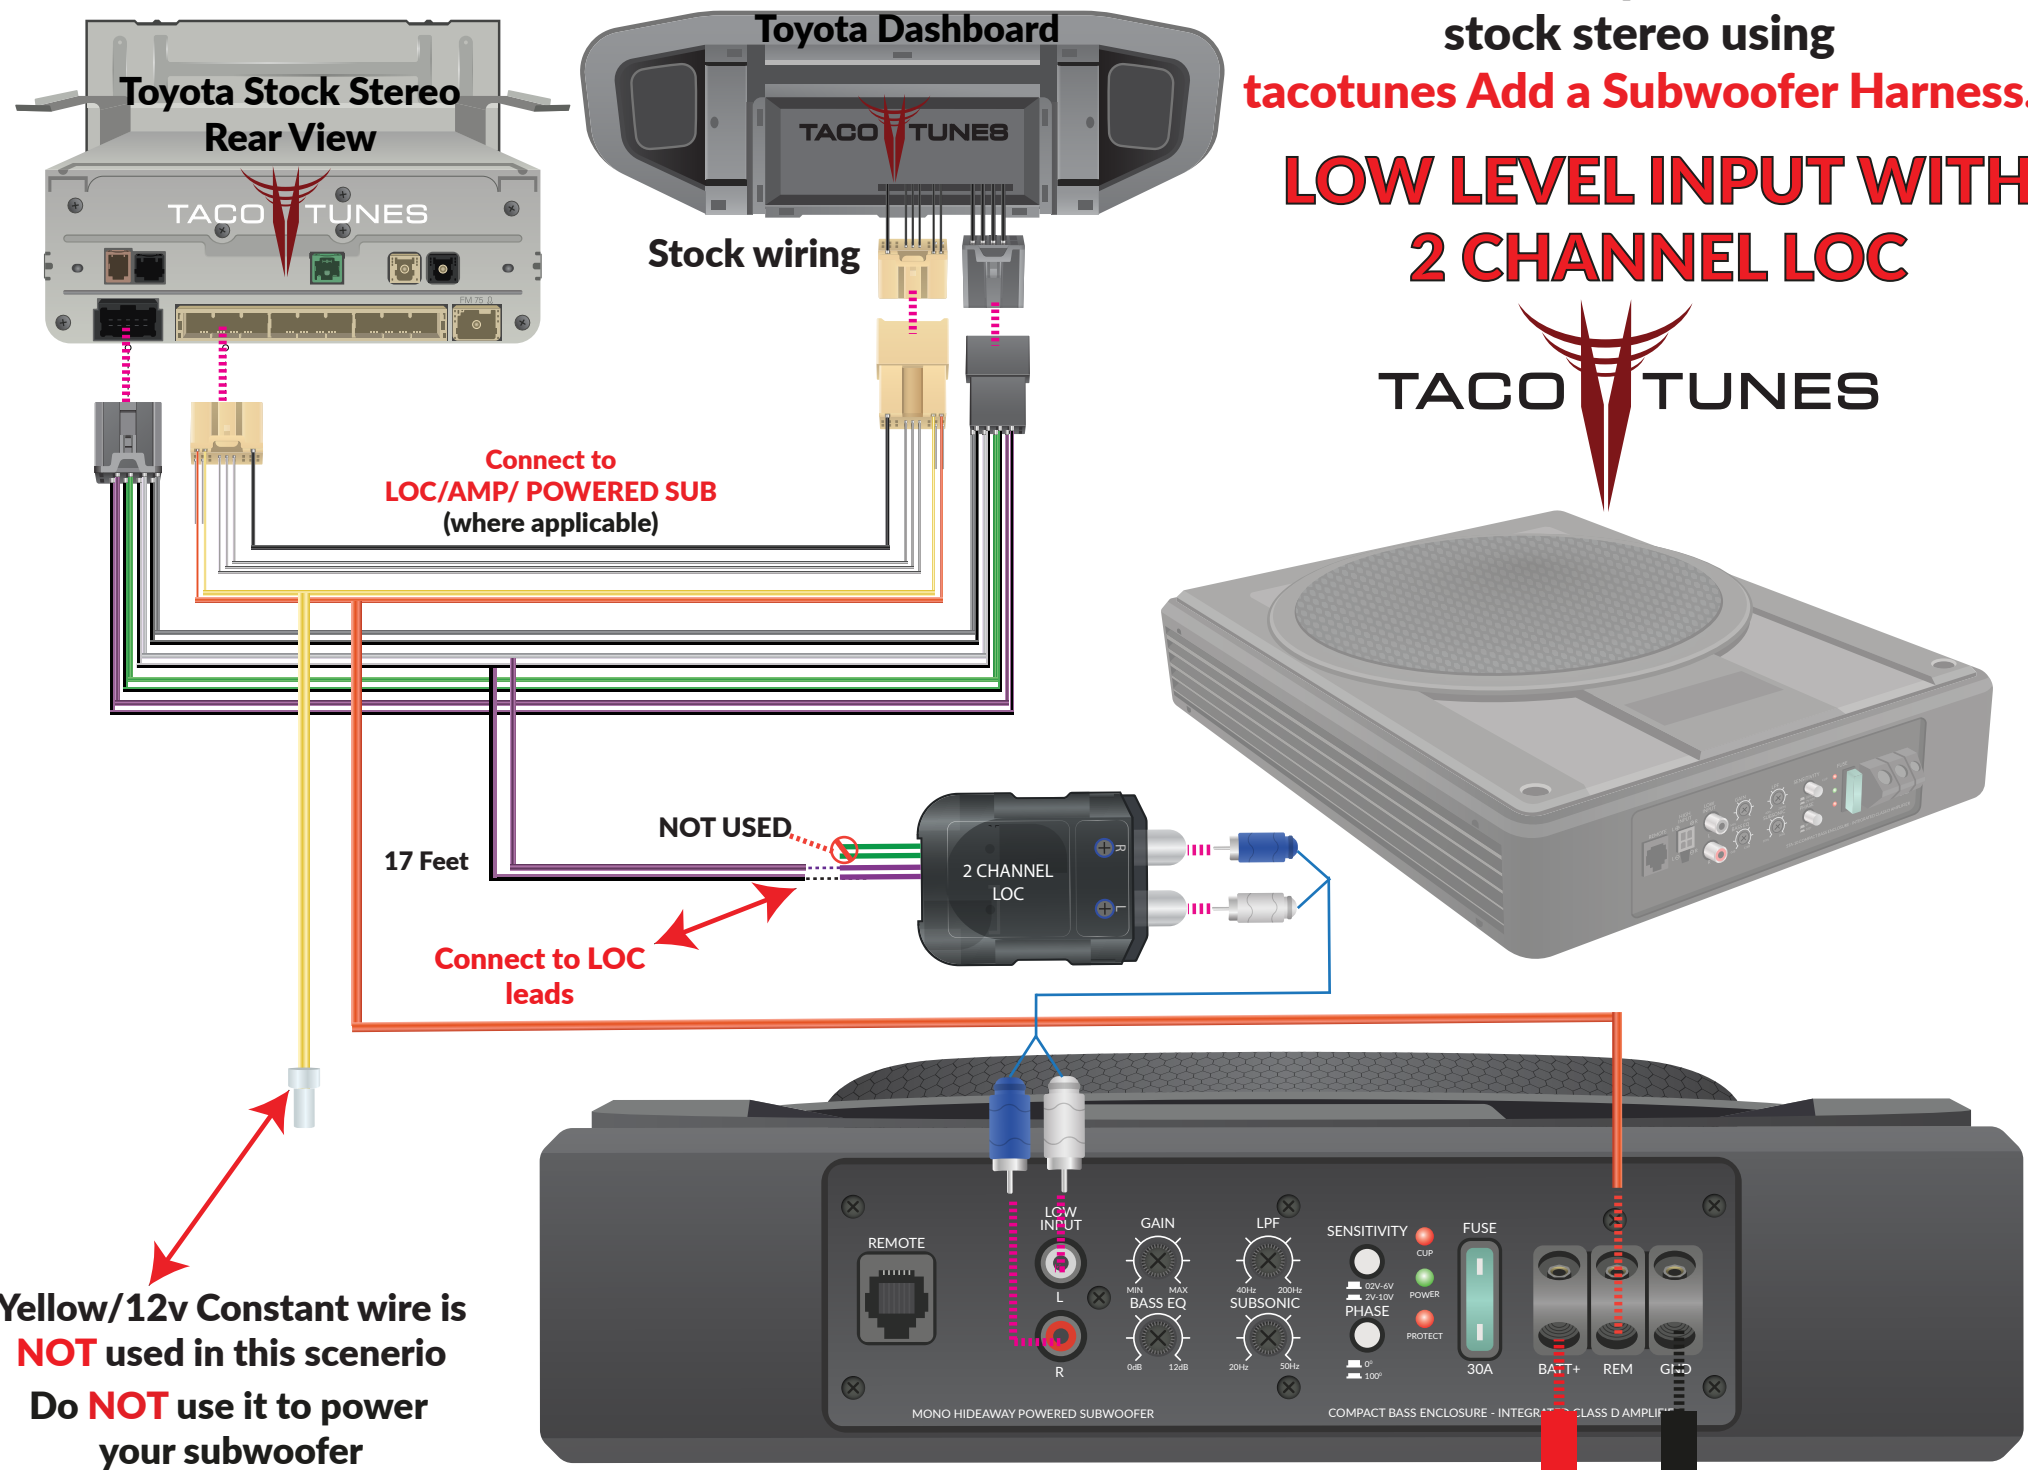

Yellow/12v Constant wire is **NOT** used in this scenerio  
Do **NOT** use it to power your subwoofer

Power (from battery) Ground

# Click here for notes on how to set up your powered sub and list of FAQ

Example Powered Subwoofer

