

# 2018+ Toyota Camry

Add amplifier(s) to stock stereo - fast & easy!

- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!



Stock Stereo

Toyota Stereo  
Rear View



Toyota Dashboard



Stock wiring

tacotunes  
Harness 2

tacotunes  
Harness 1

tacotunes  
Harness 3

17 Feet


17 Feet  
18 Gauge  
Connect to  
LOC/DSP

17 Feet  
16 Gauge  
(thicker than 18 Gauge)  
Connect to  
4 Channel Amp


Plug & Play  
Harnesses



# How to connect tacotunes plug & play wiring to: tacotunes NTUNE6

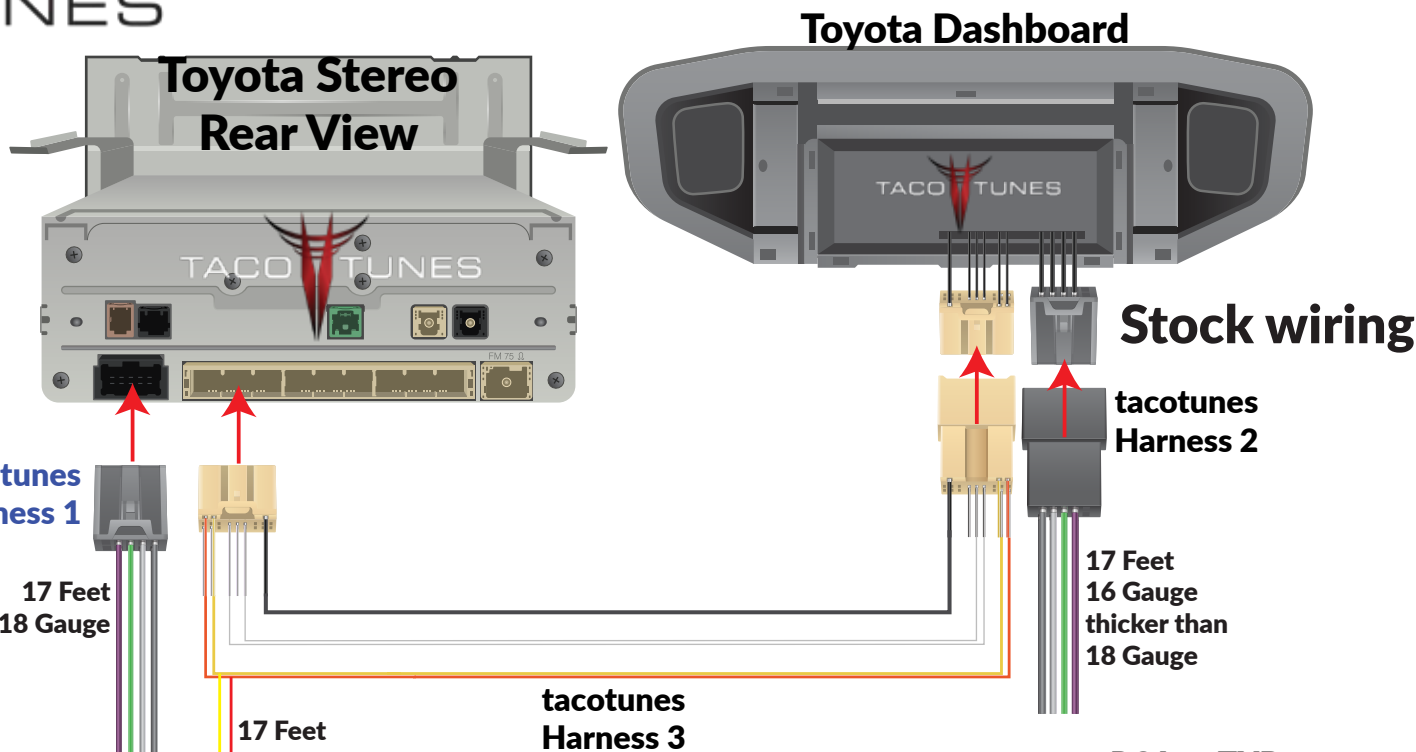




**Connect to NTUNE6  
(Color coded  
Installation)**

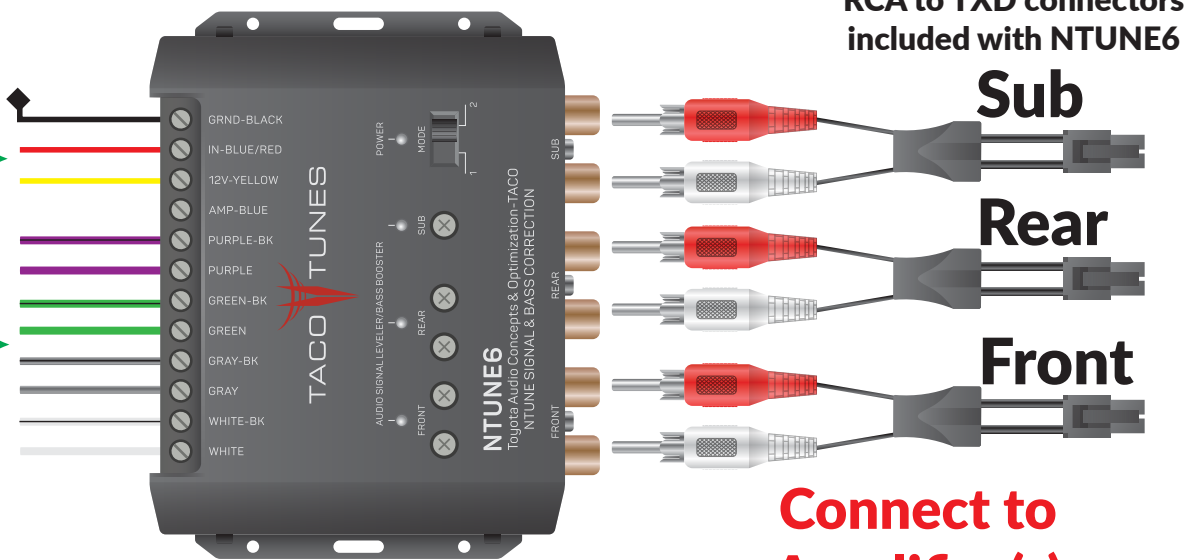

# How to connect tacotunes NTUNE6 to amplifiers




RCA to TXD Connectors, included with NTUNE6

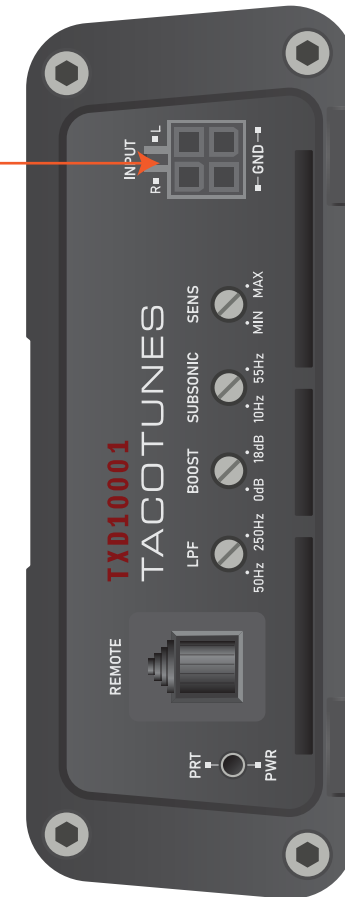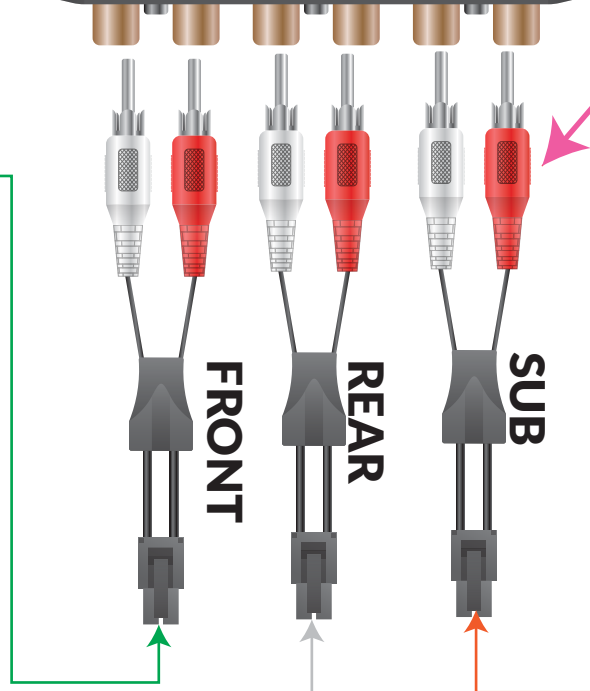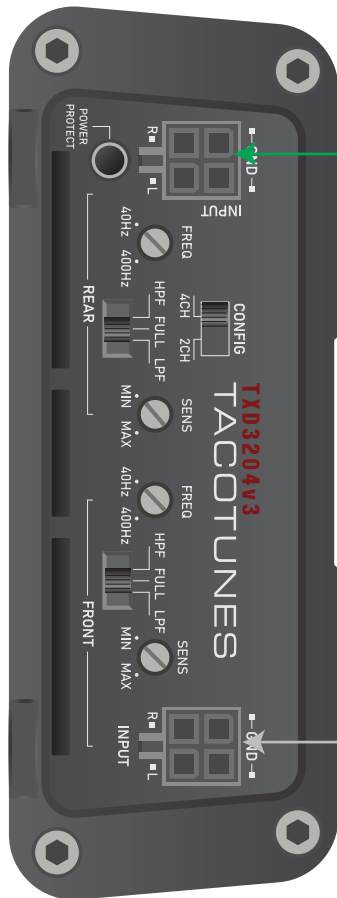


# 4 Channel & Subwoofer amplifier overview

TACOTUNES TXD 4 CHANNEL

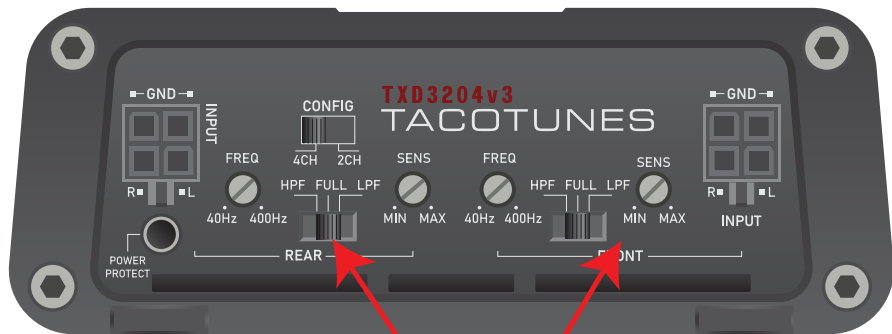

Tuning/Configuration knobs & switches:  
Check out our video(s) on how to properly  
adjust these settings.

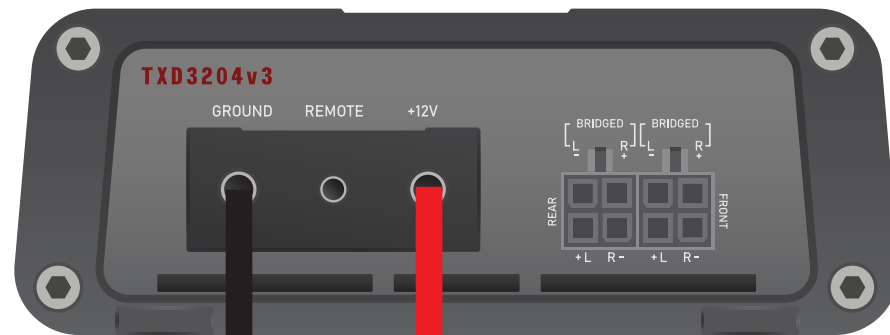


Power Wire:

We offer TXD Amp Kits designed for our TXD  
amps! Check out our website for more info.

Direct Connect  
Molex Plugs



TACOTUNES TXD SUBWOOFER AMP

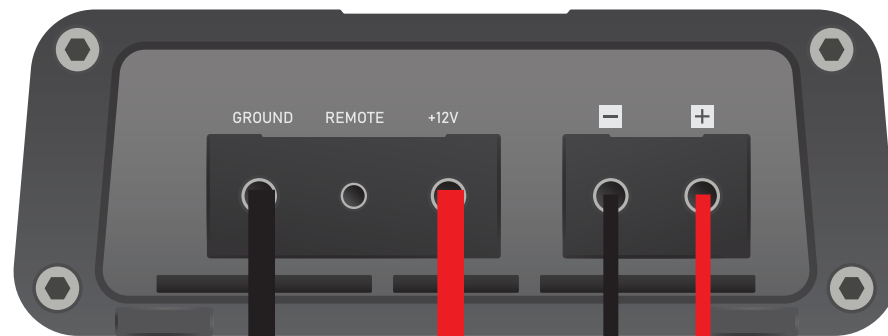

Subwoofer Output



[Link to YouTube Channel](#)

# 2018+ Toyota Camry

How to add tacotunes amplifiers to stock stereo using Ntune6.

Plug and Play, easy install,  
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

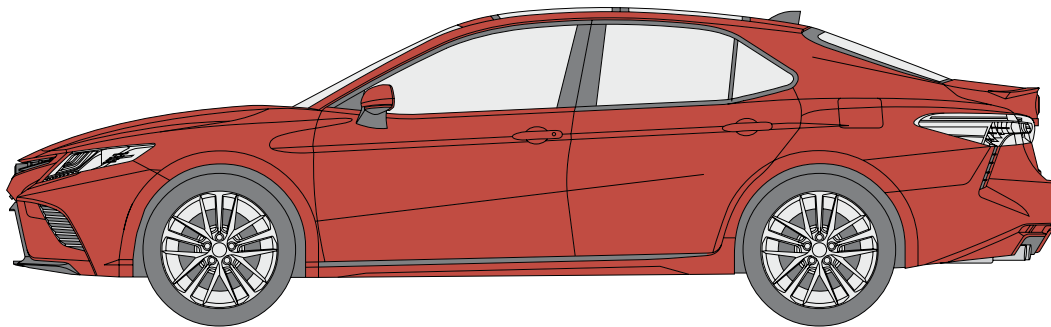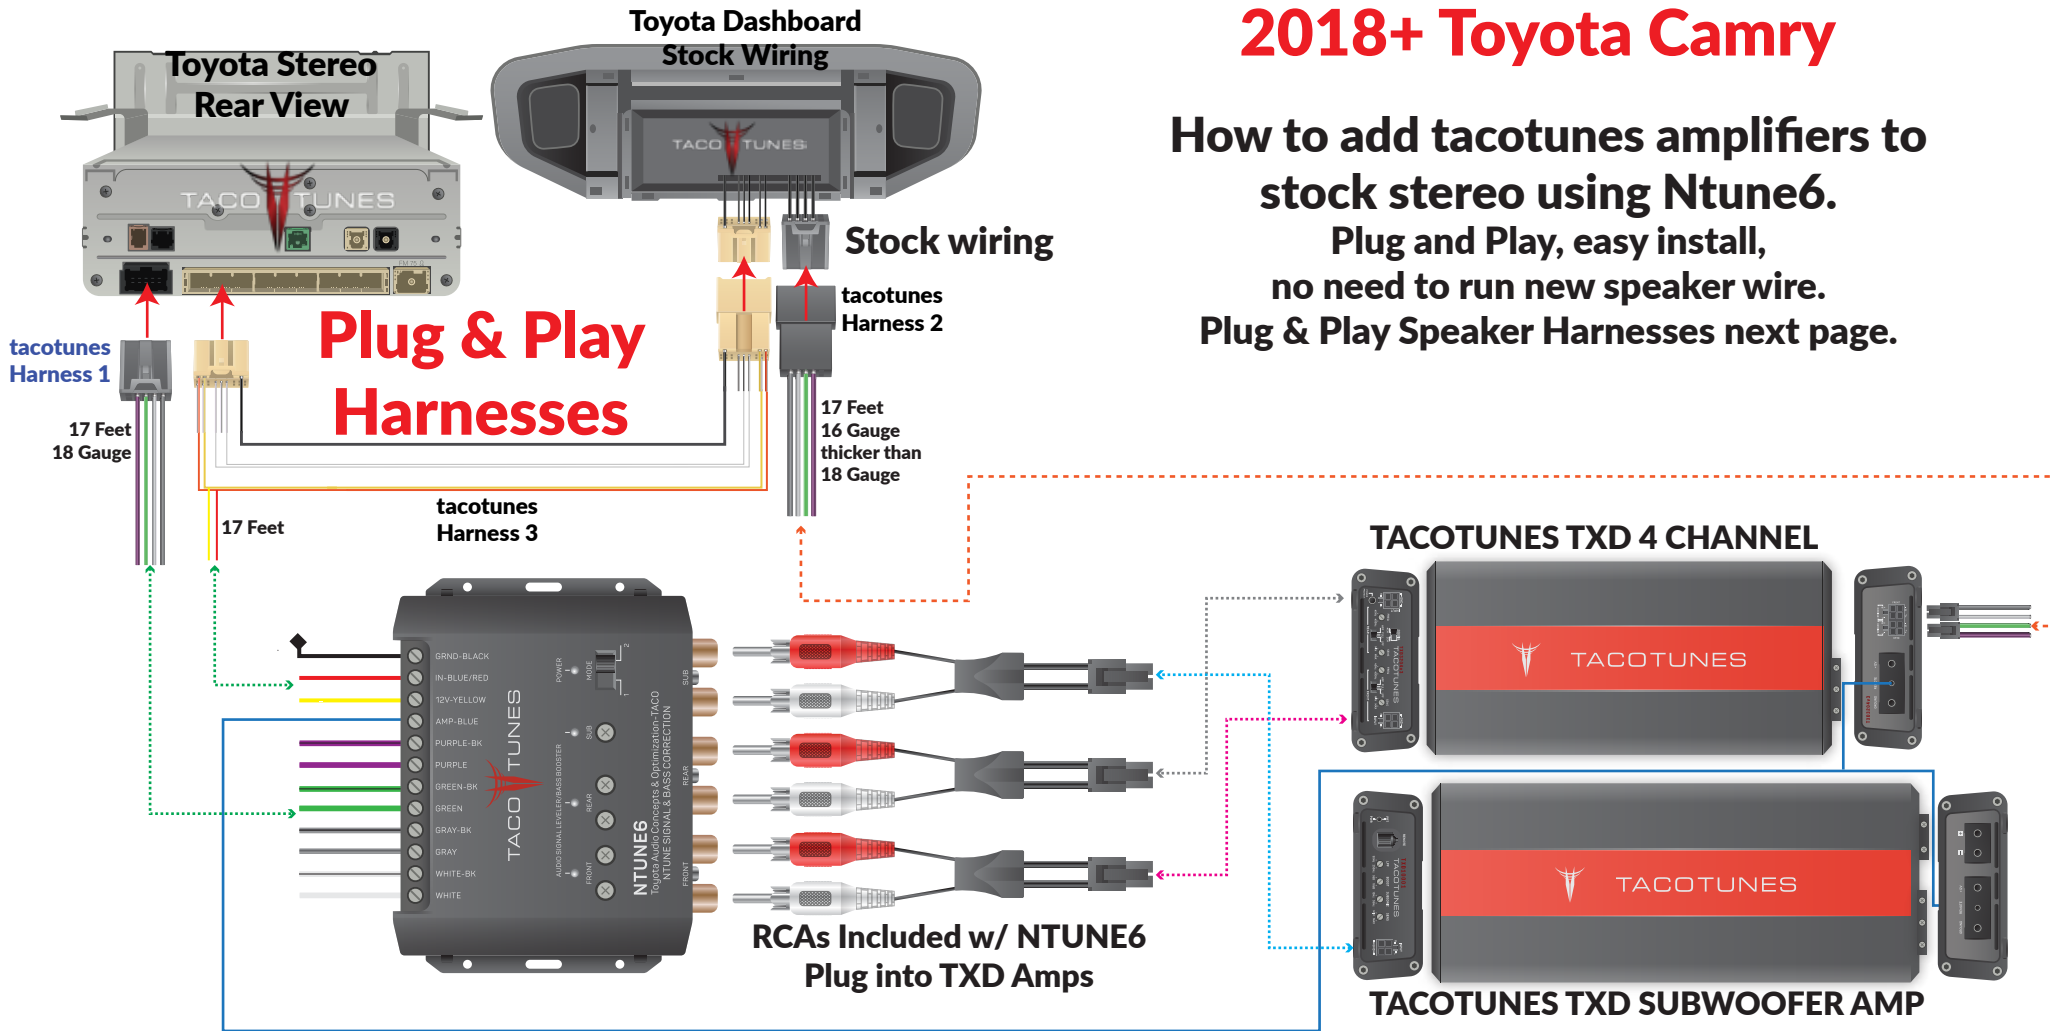


[CLICK HERE FOR HARNESSSES](#)

# 2018+ Toyota Camry


Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **Camry!**

We will explain how your **Camry** is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

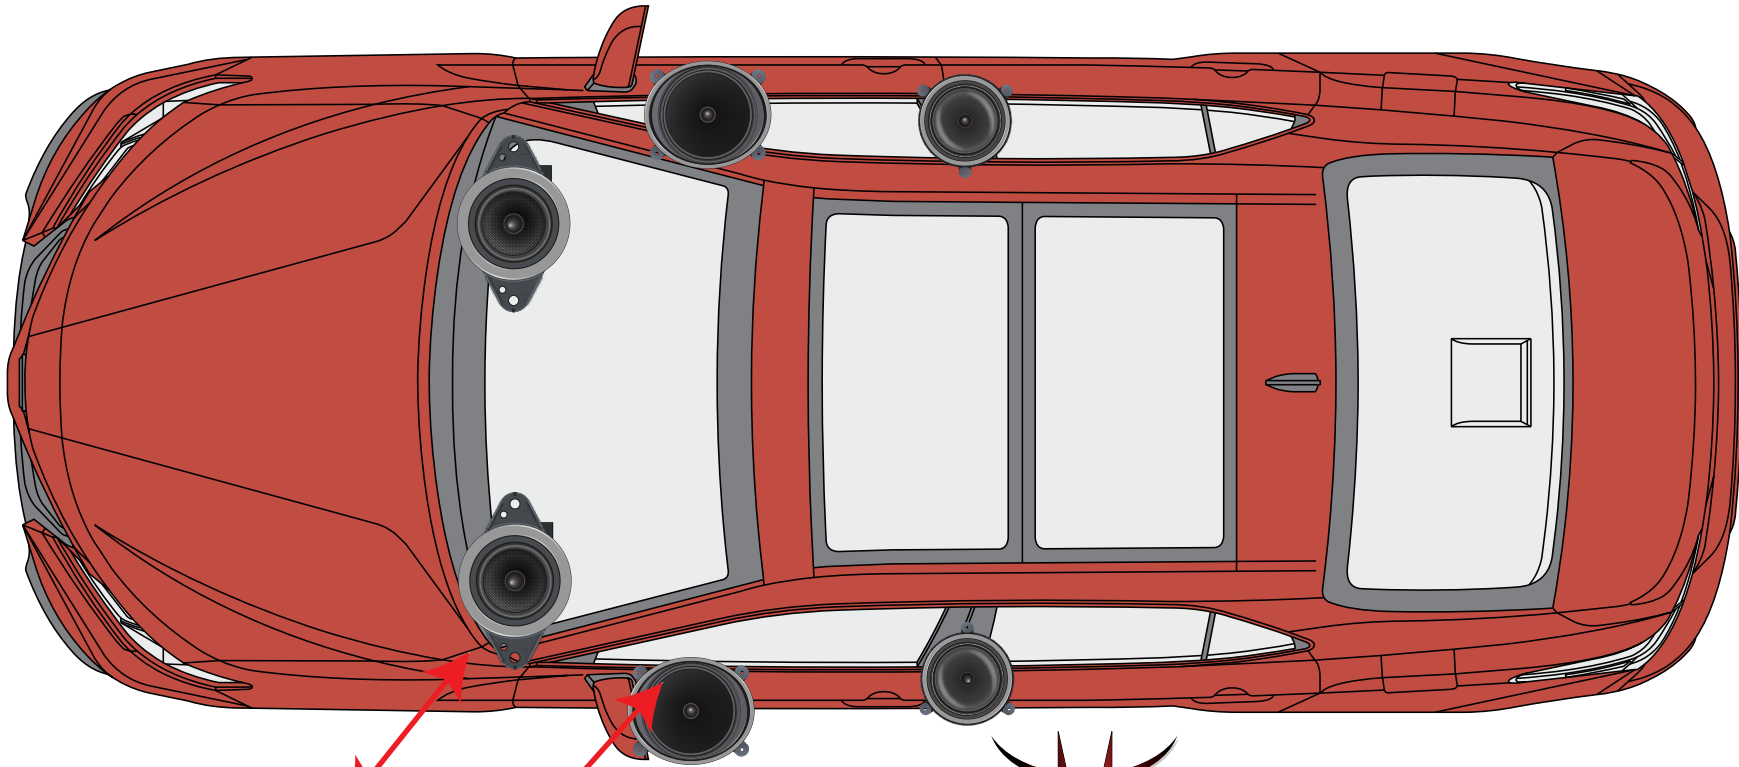

[CLICK HERE](#)  
HARNESS A1 HARNESS A2

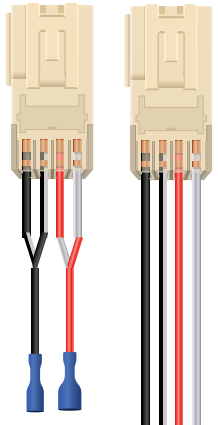

[CLICK HERE](#)  
HARNESS A1 HARNESS A2

