



2018+ Toyota Camry

Add amplifier(s) to stock stereo - fast & easy!


- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

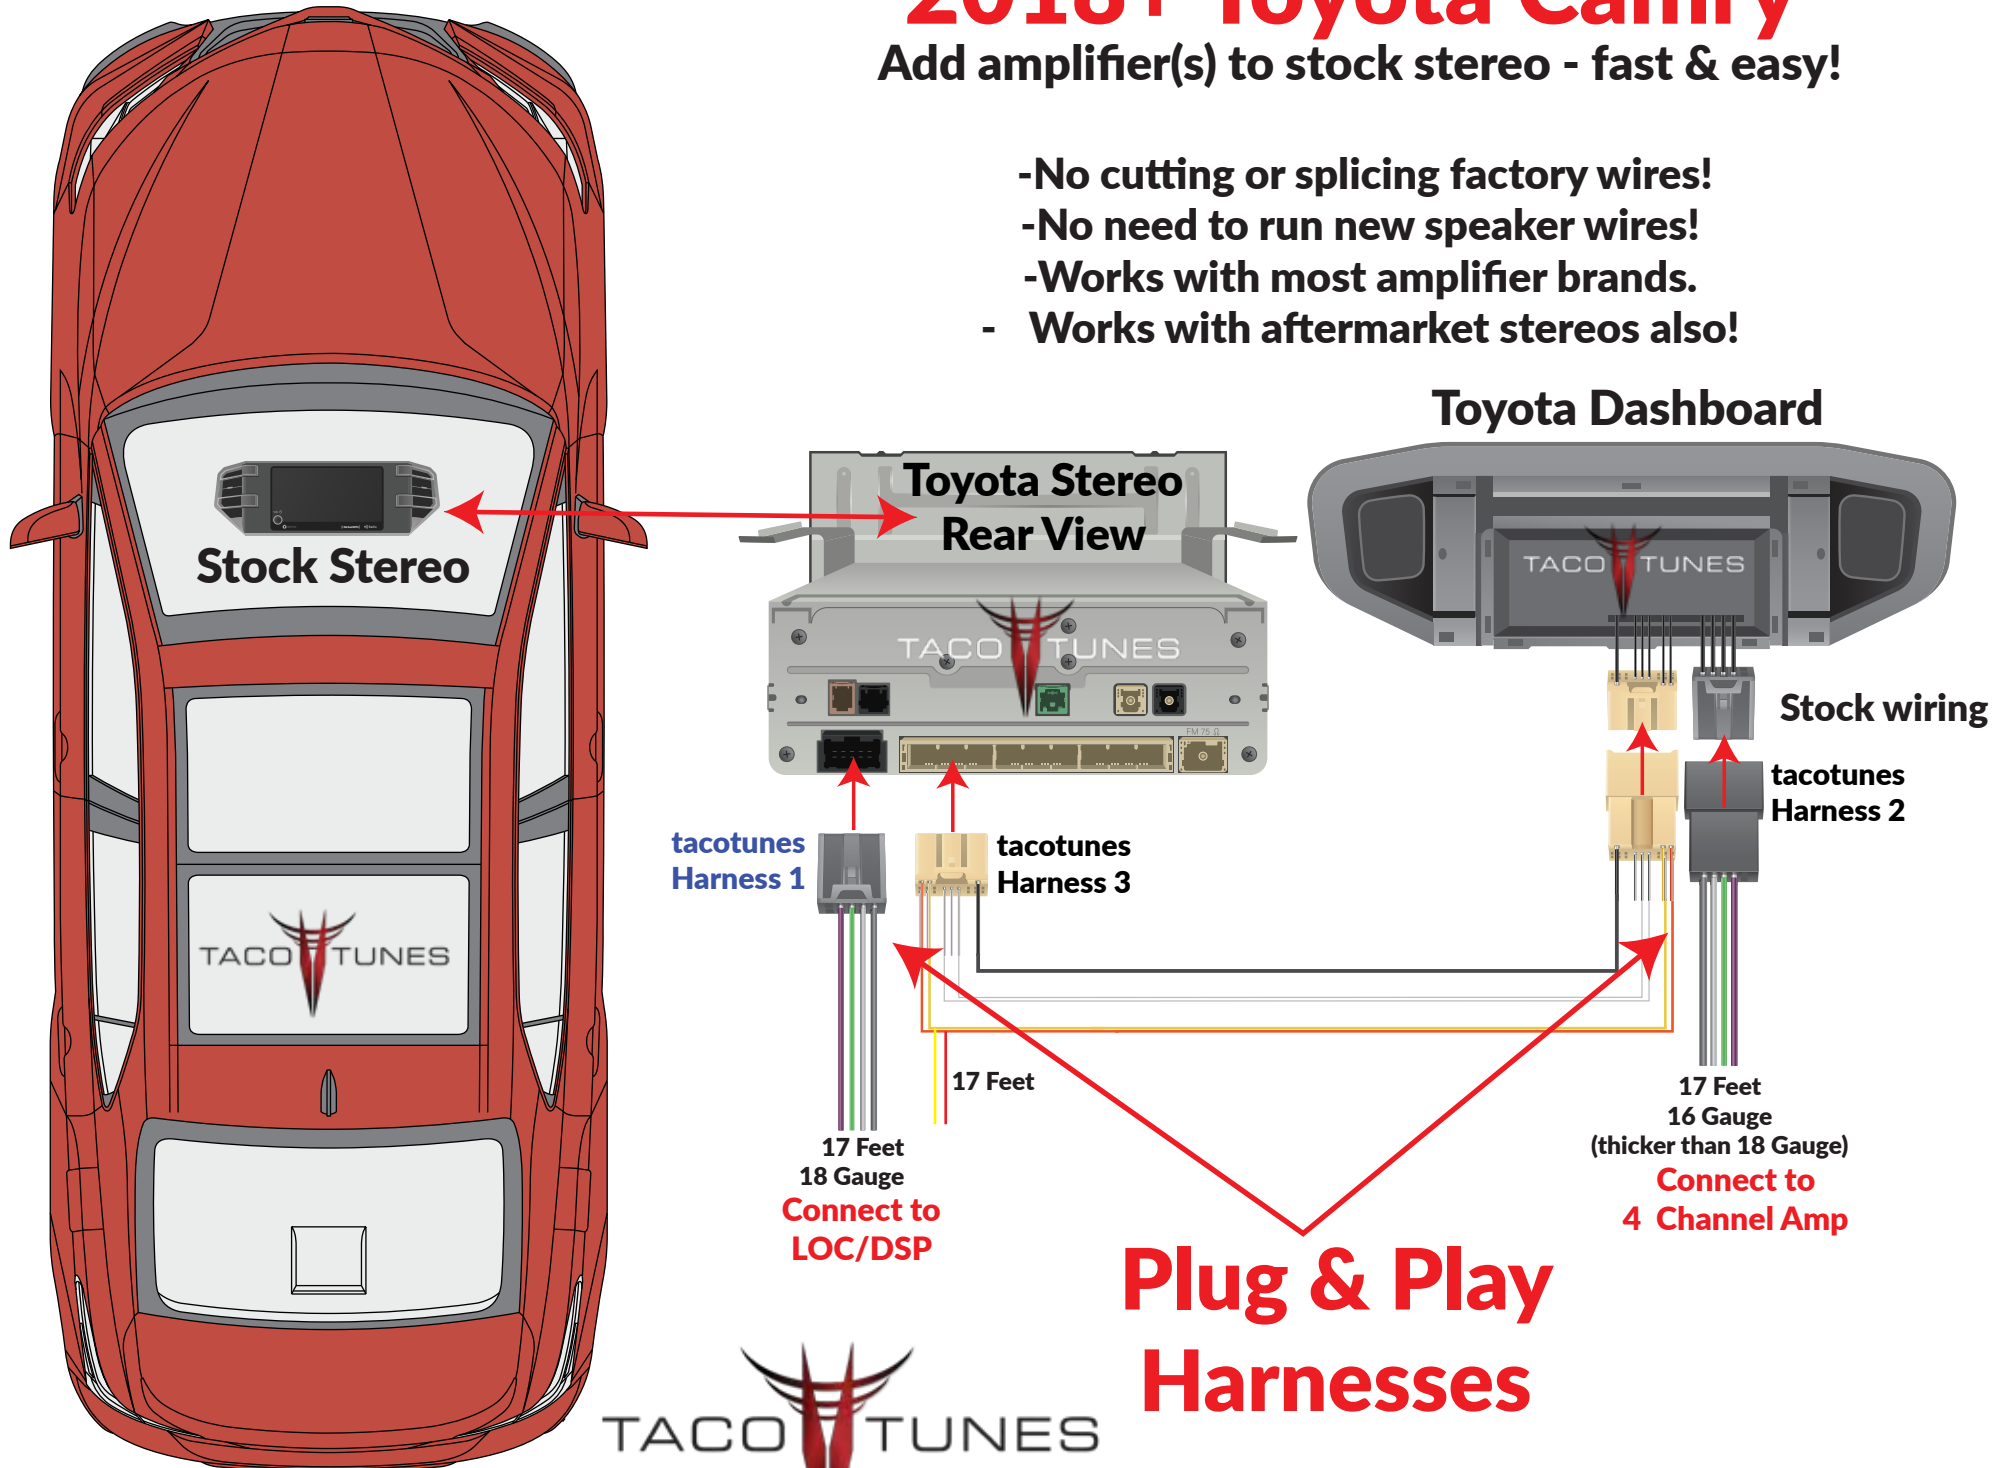


How to connect tacotunes plug & play wiring to: tacotunes NTUNE6

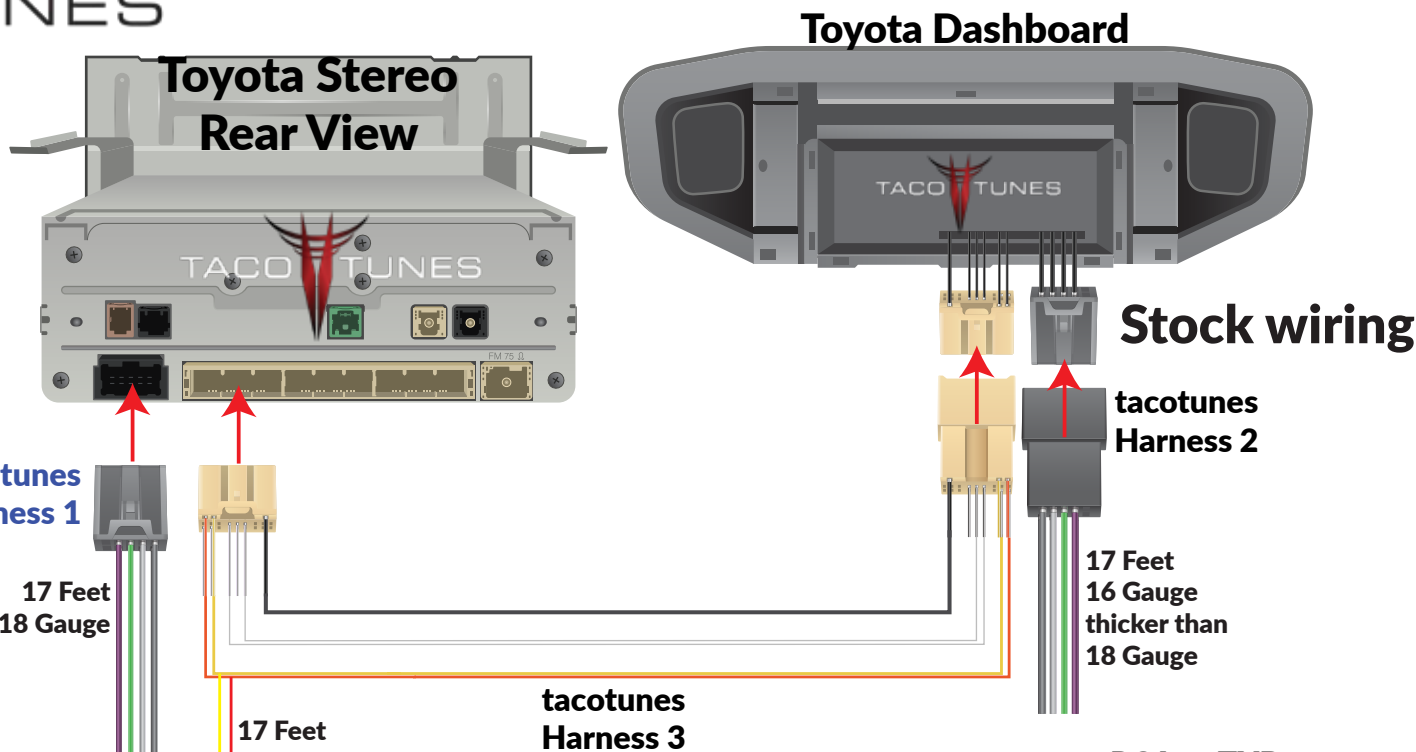



**Connect to NTUNE6
(Color coded
Installation)**

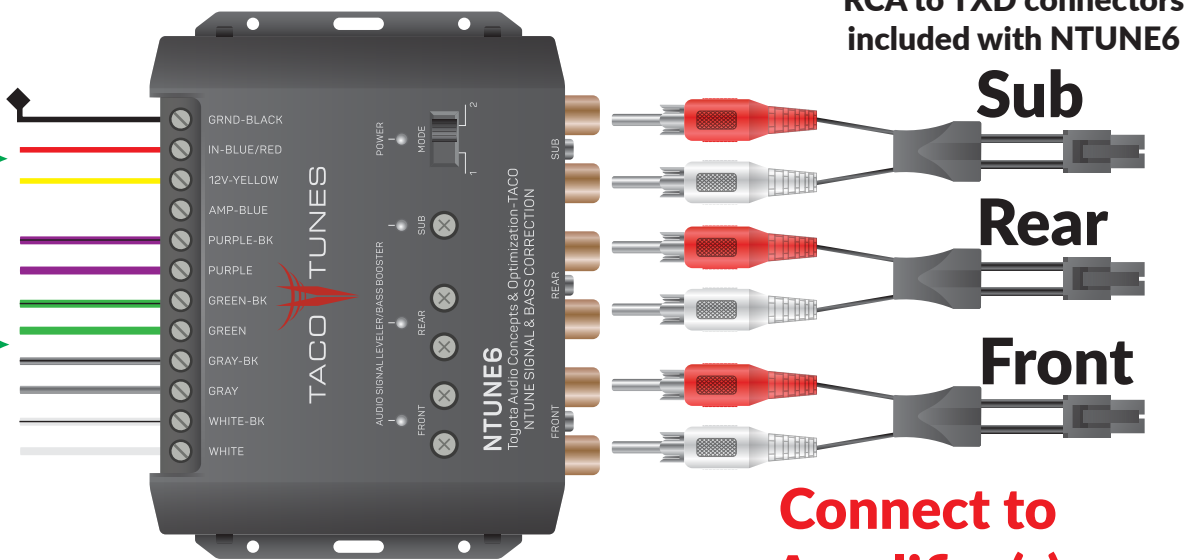

How to connect tacotunes NTUNE6 to amplifiers

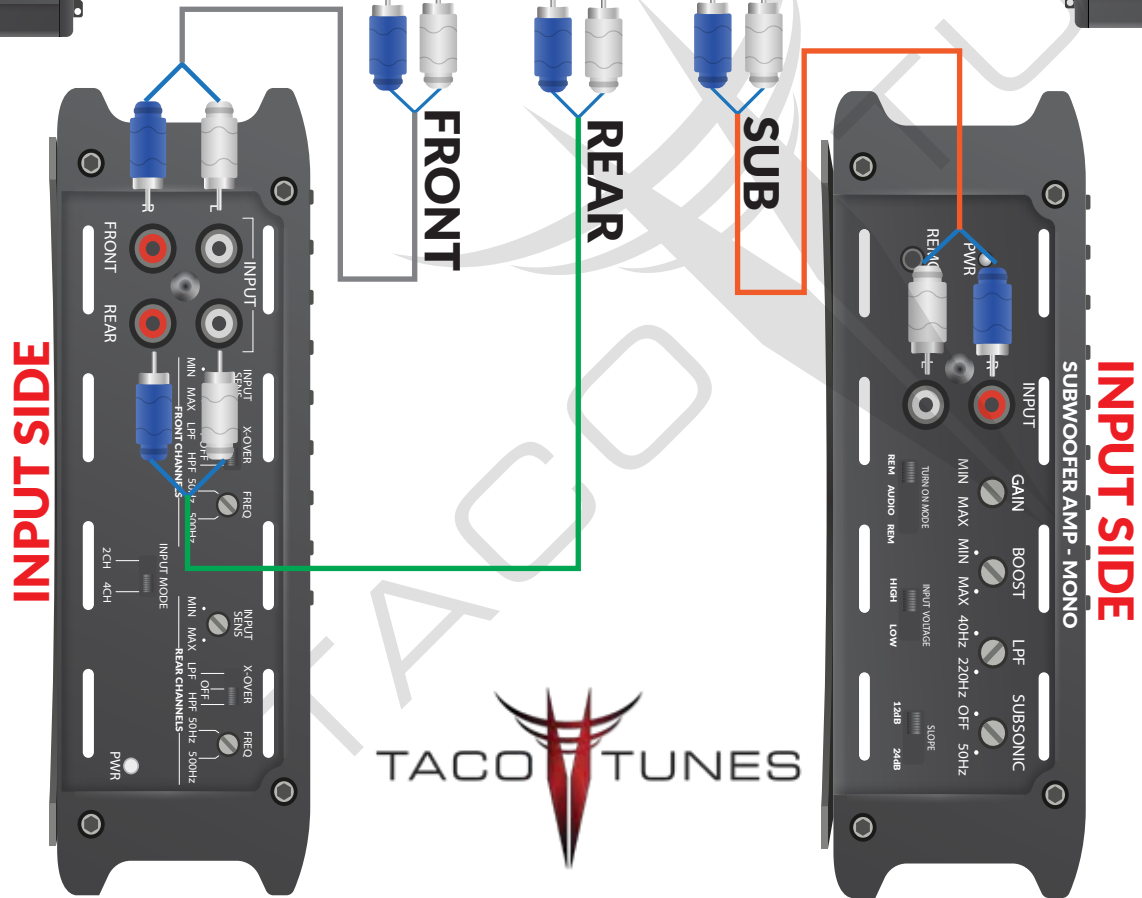

4 Channel & Subwoofer amplifier overview

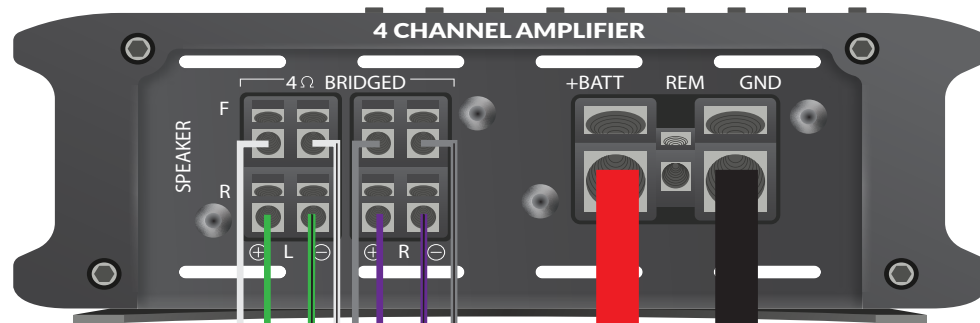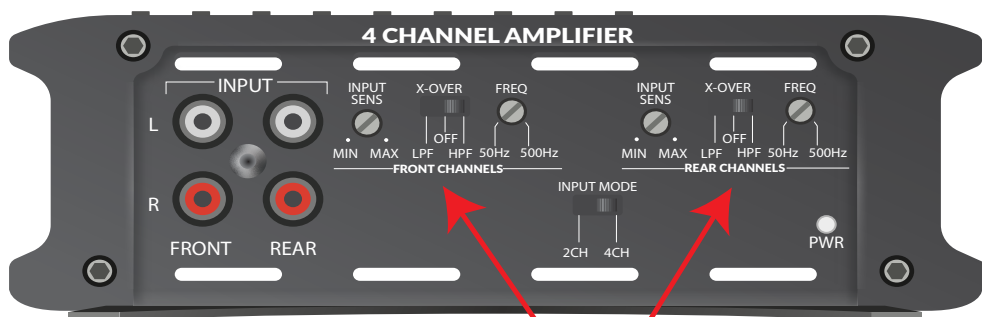


Connect to harness 3.

Power Wire:

From battery / distribution block.
Important: Check with your amp manufacturer
for the proper gauge & fuses

Tuning/Configuration knobs & switches:
Check out our video(s) on how to properly
adjust these settings.

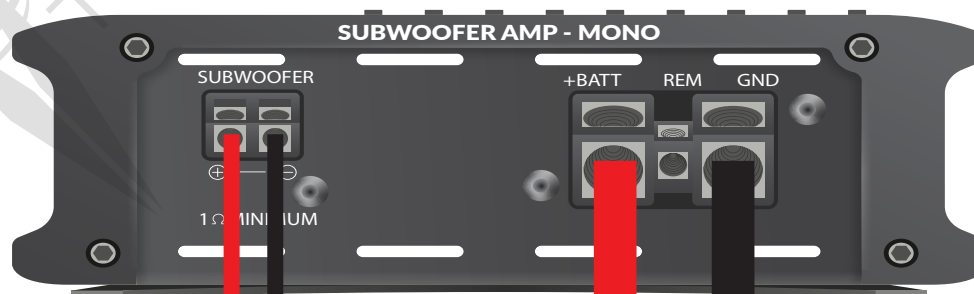

Subwoofer Output

[Link to YouTube Channel](#)


2018+ Toyota Camry

How to add tacotunes amplifiers to stock stereo using NTUNE6

Plug and Play, easy install,
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

MAX 100 WATTS RMS X 4

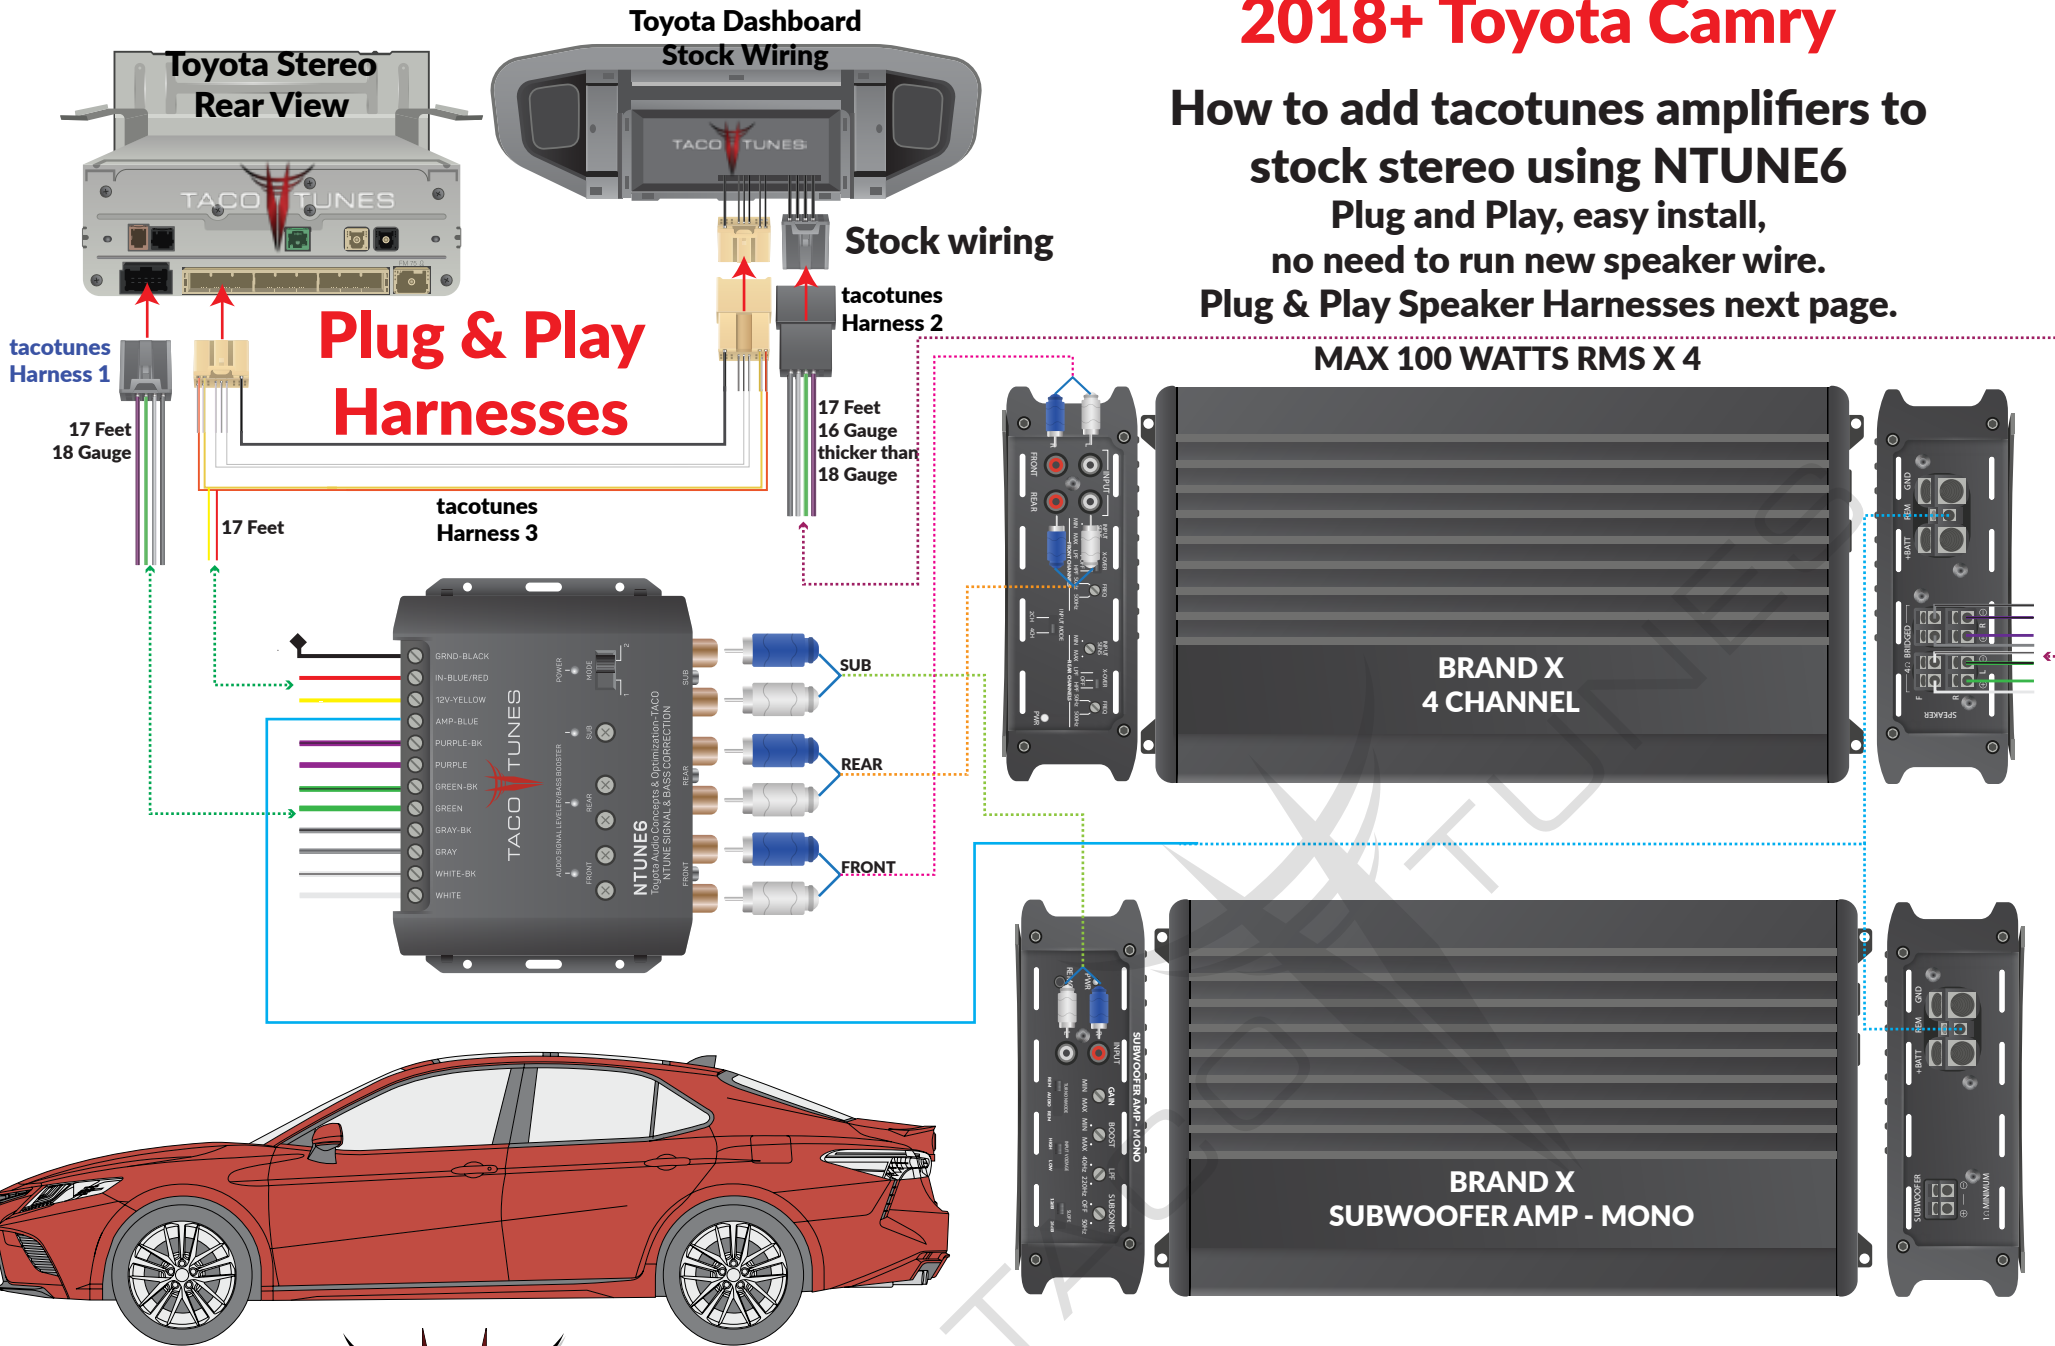

[CLICK HERE FOR HARNESSSES](#)




2018+ Toyota Camry


Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **Camry!**


We will explain how your **Camry** is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

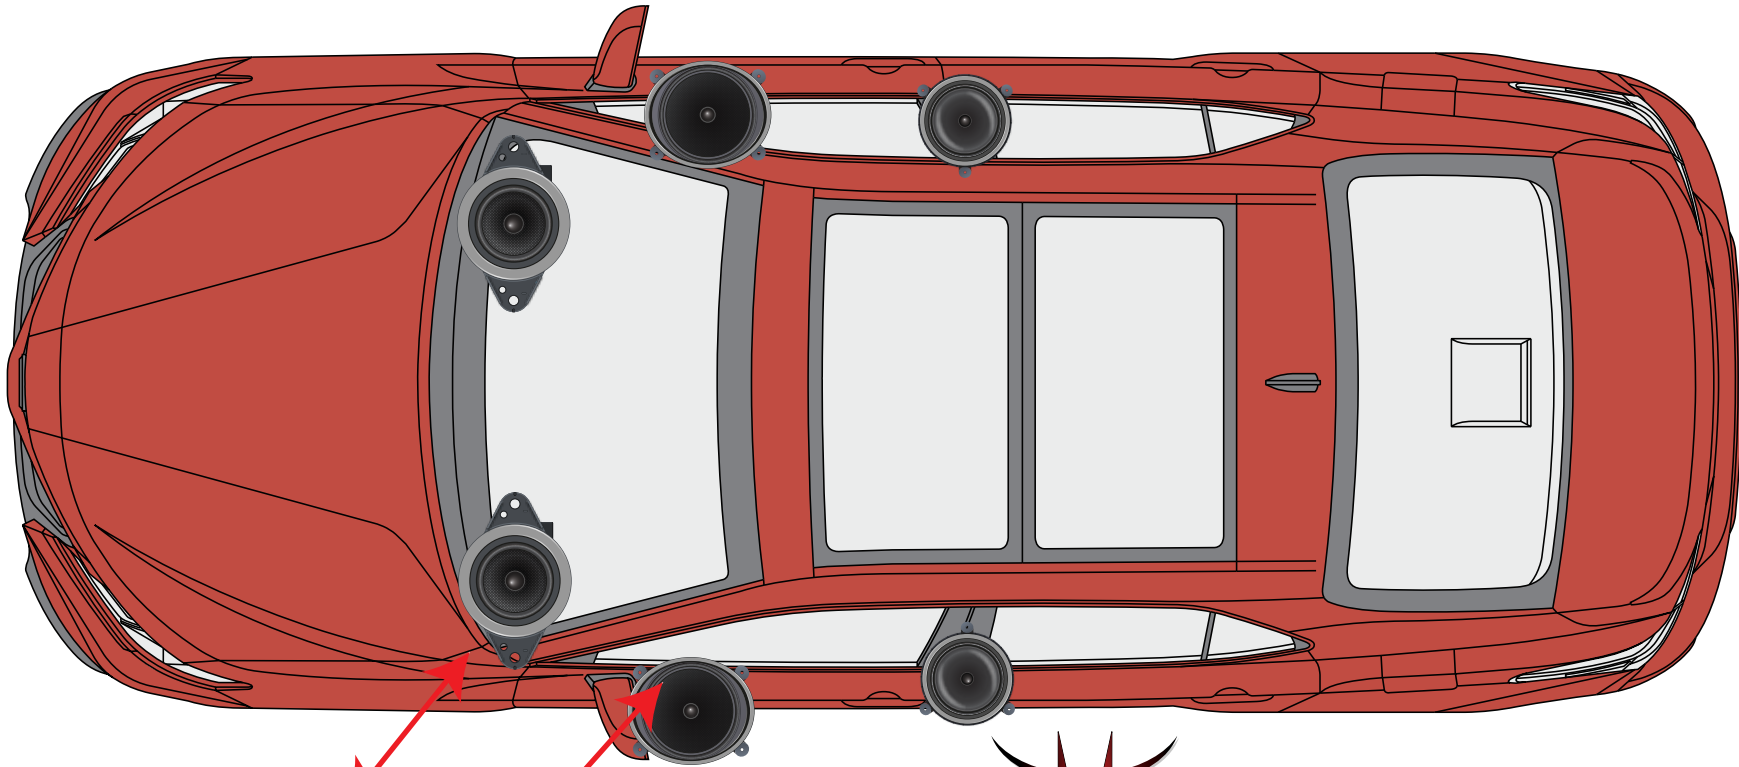

[CLICK HERE](#)
HARNESS A1 HARNESS A2

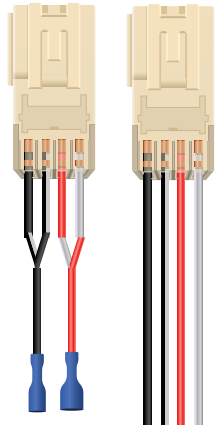

[CLICK HERE](#)
HARNESS A1 HARNESS A2

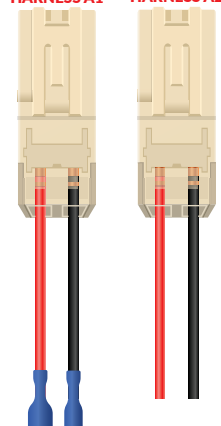

TACO TUNES

