
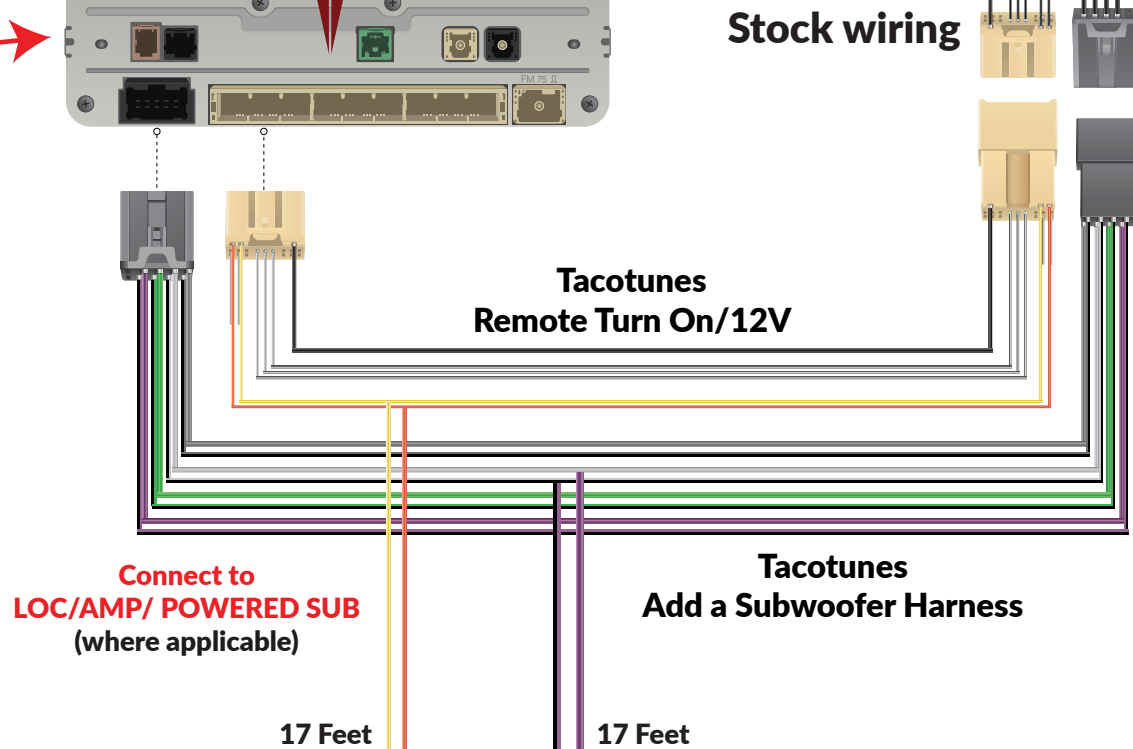


2018+ Toyota Camry


Add Subwoofer(s) to stock stereo - fast & easy!

- No cutting or splicing factory wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

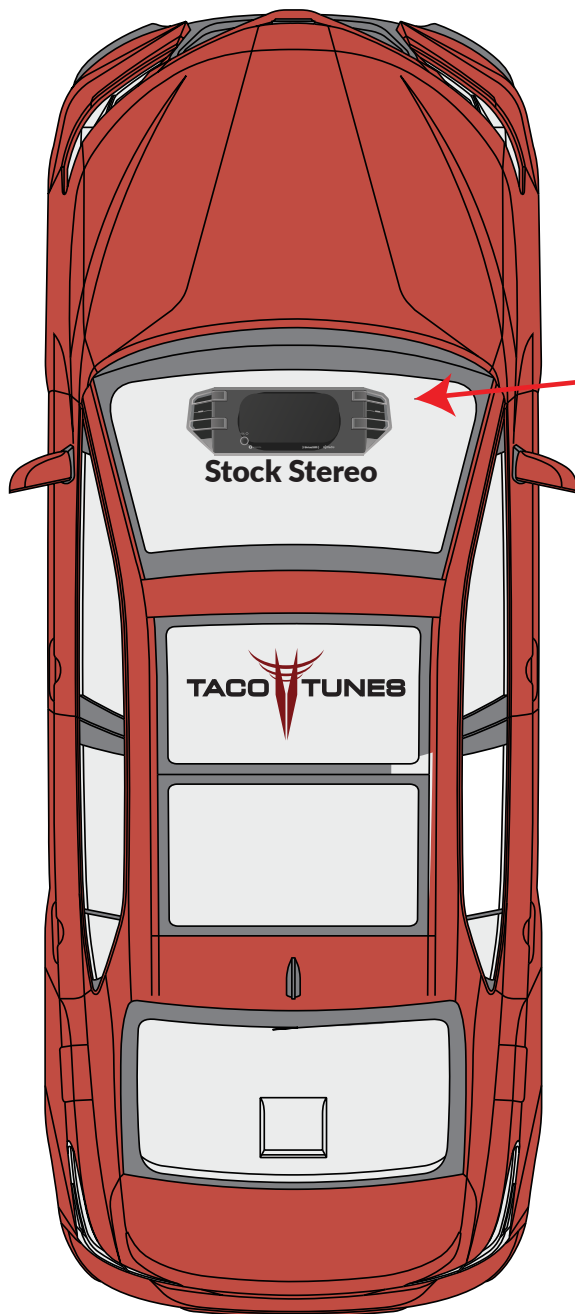


CLICK HERE
Plug & Play Harnesses

How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness **HIGH LEVEL INPUT WITH MOLEX PLUG**

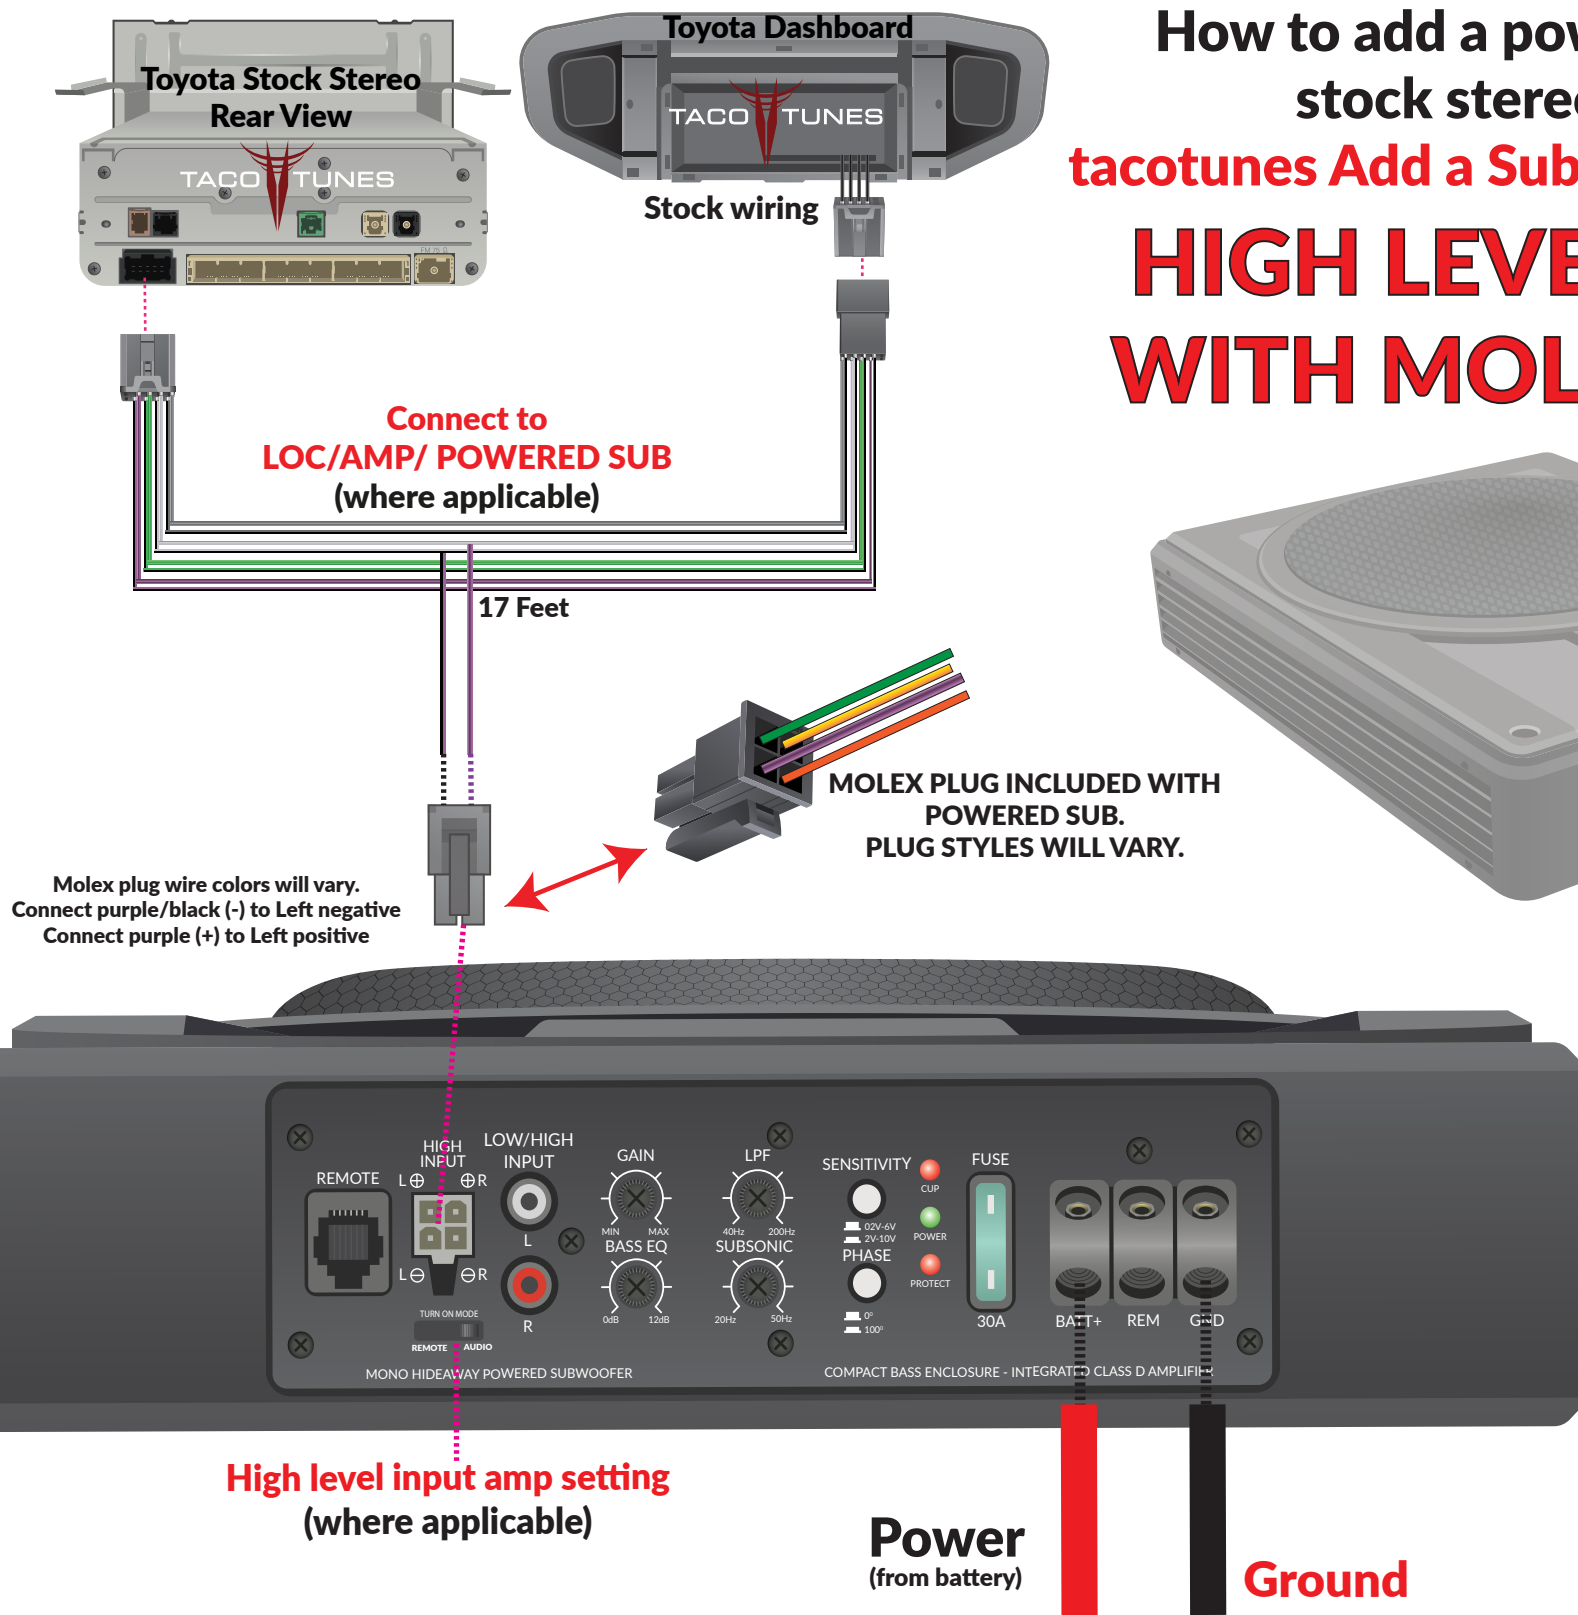

TACO TUNES

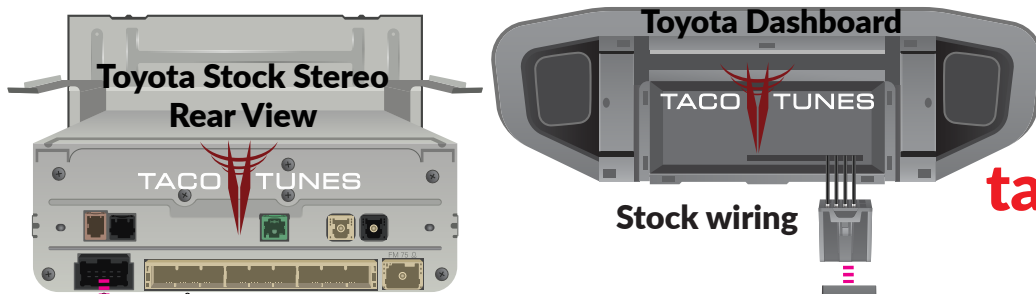

How to add a powered sub to stock stereo using **tacotunes Add a Subwoofer Harness** **HIGH LEVEL INPUT WITH** **RCA ADAPTER**

Tacotunes
Add a Subwoofer Harness

Connect to
LOC/AMP/ POWERED SUB
(where applicable)

17 Feet

Connect harness to RCA adapter accordingly:
Purple (+) : Positive
Purple/Black (-) : Negative



RCA adapters available
on our website



Power
(from battery)




How to add a powered sub to stock stereo using **tacotunes Add a Subwoofer Harness.** **LOW LEVEL INPUT WITH** **AUDIO CONTROL LC2i PRO**

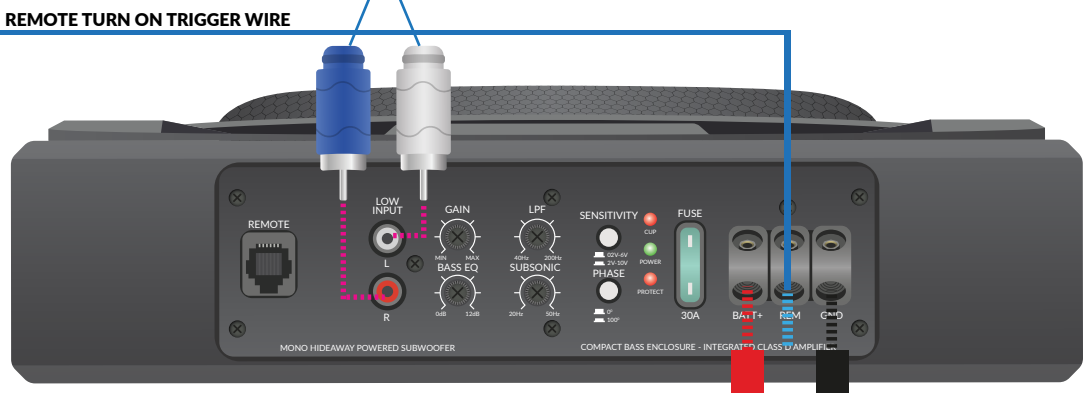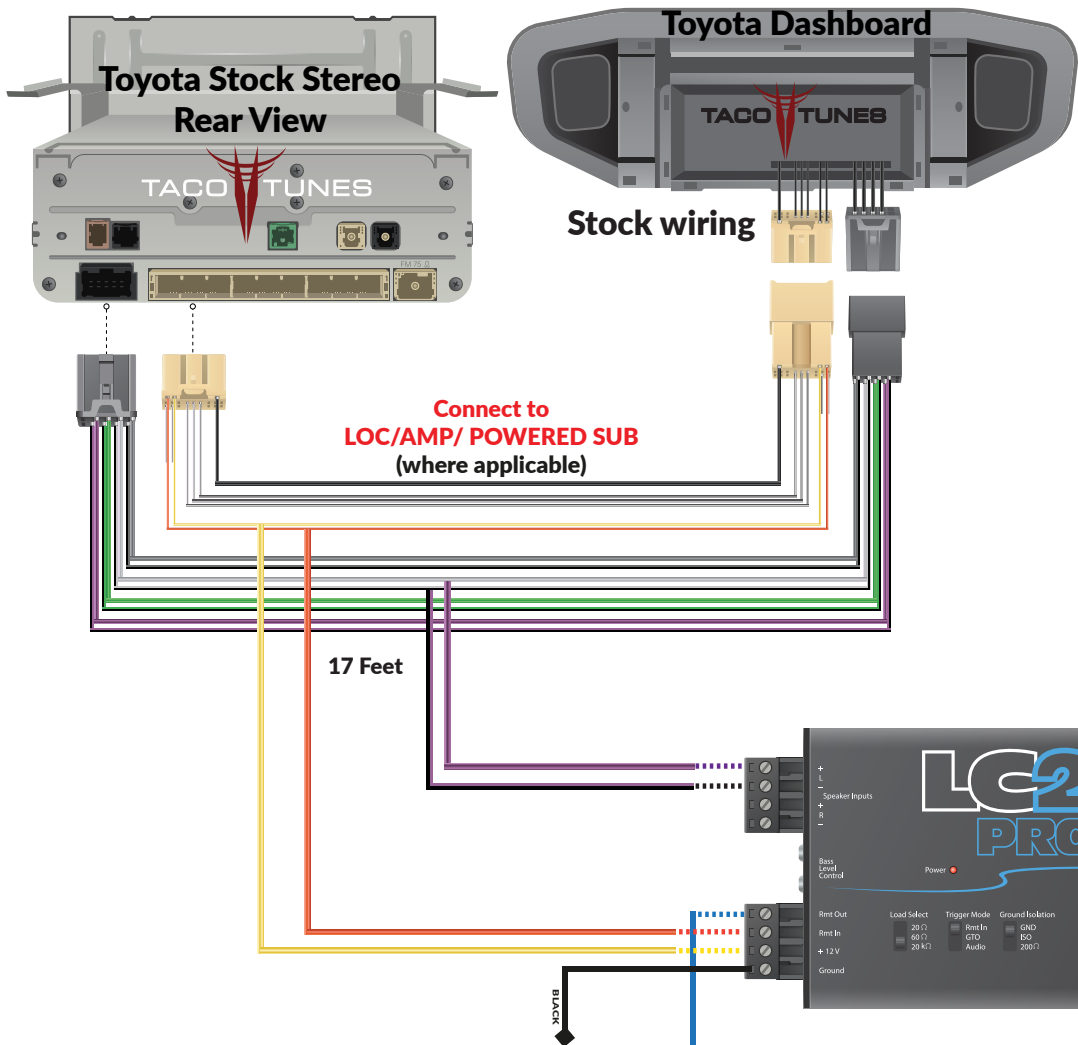

Power
(from battery)

Ground


How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness. **LOW LEVEL INPUT WITH POWERED 2 CHANNEL LOC**

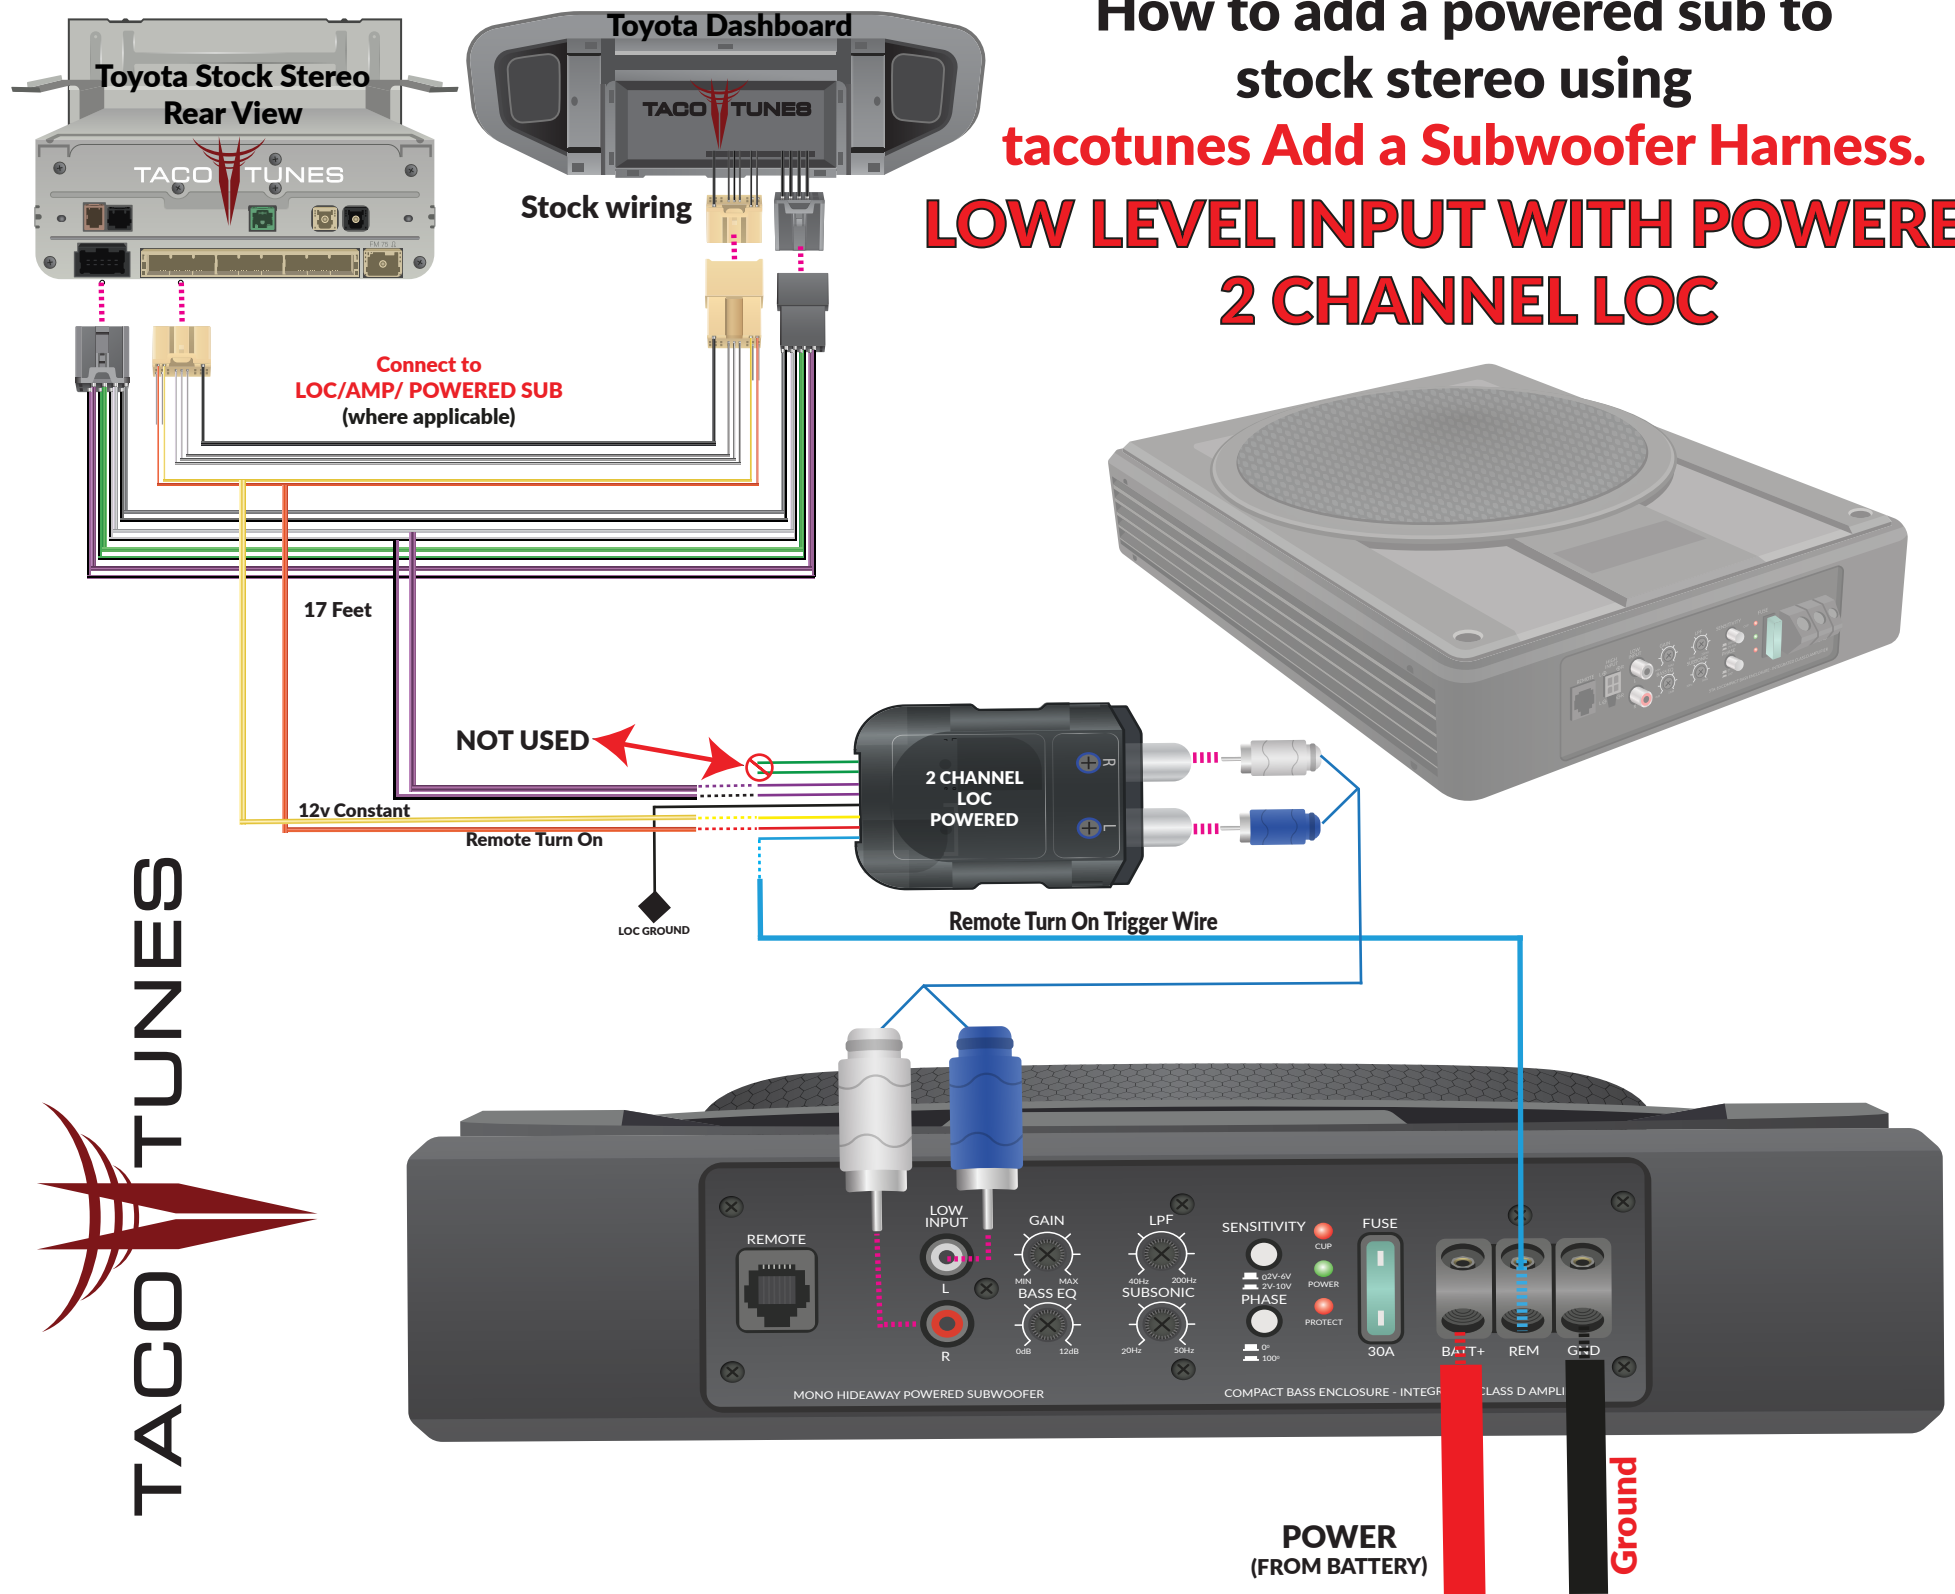

How to add a powered sub to stock stereo using
tacotunes Add a Subwoofer Harness.

**LOW LEVEL INPUT WITH
2 CHANNEL LOC**

TACO TUNES

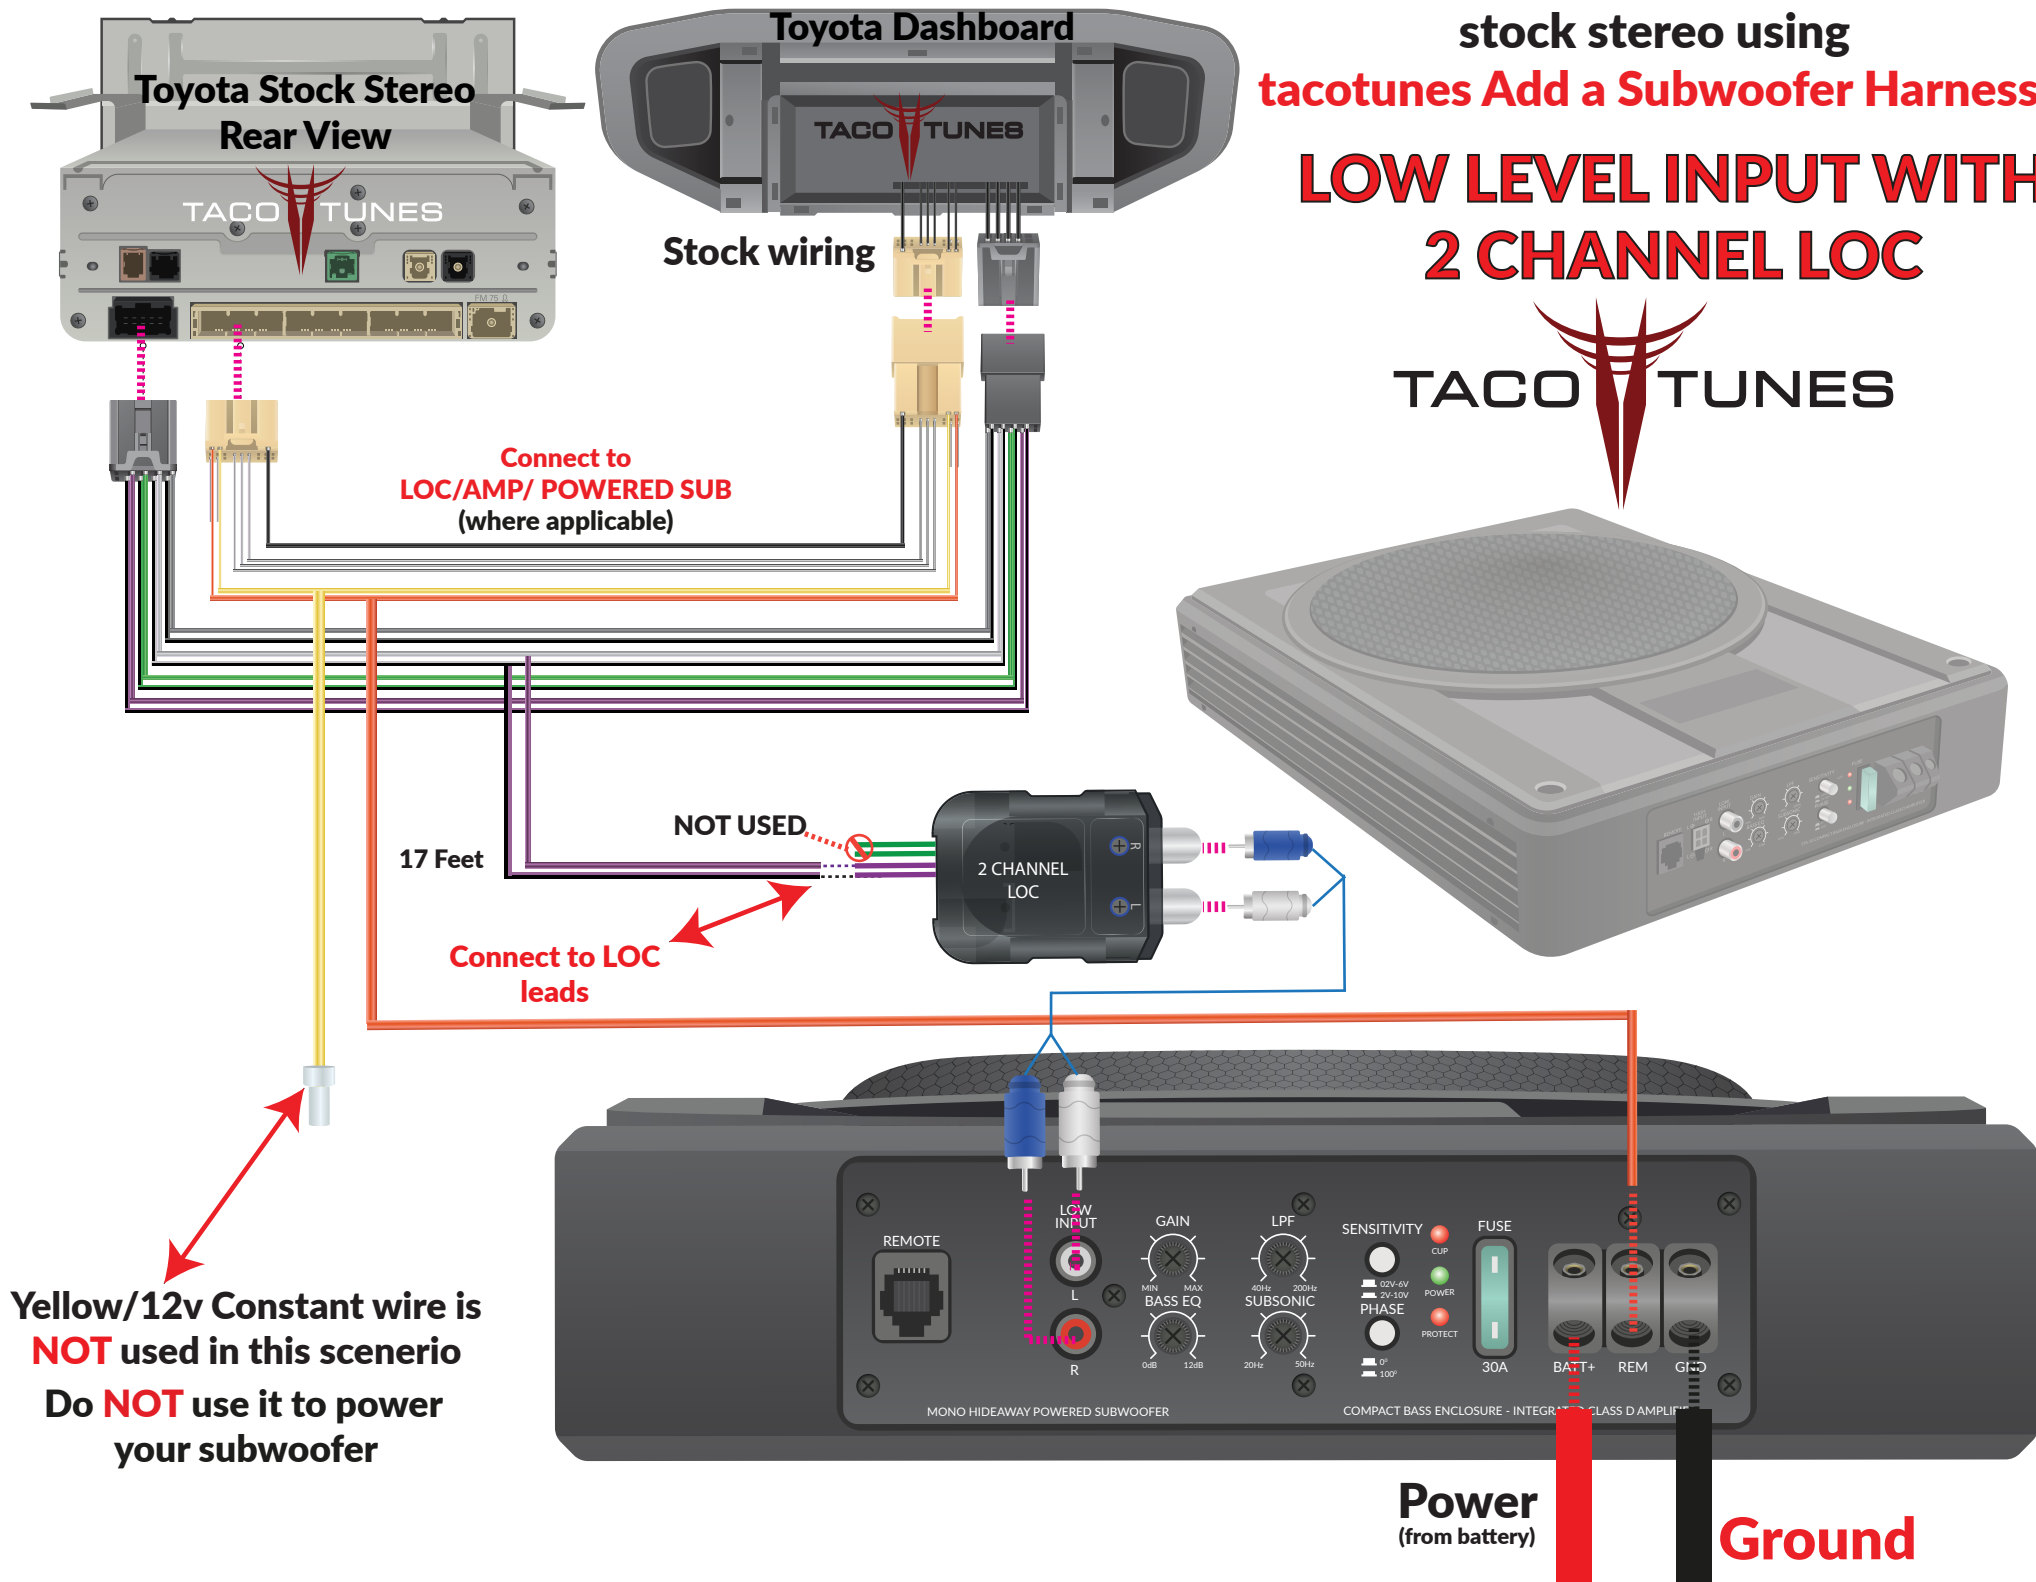

[Click here for notes on how to set up your powered sub and list of FAQ](#)

Example Powered Subwoofer

