


2018+ Toyota Sienna

Add amplifier(s) to stock stereo - fast & easy!

- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

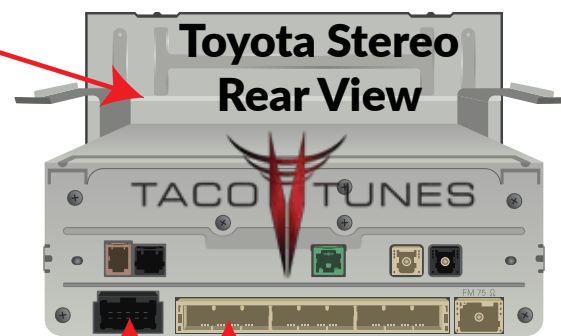

tacotunes
Harness 1

tacotunes
Harness 3

Stock wiring

tacotunes
Harness 2

17 Feet


17 Feet
18 Gauge
Connect to
LOC/DSP

17 Feet
16 Gauge
(thicker than 18 Gauge)
Connect to
4 Channel Amp


Plug & Play
Harnesses




How to connect tacotunes plug & play wiring to: tacotunes NTUNE6

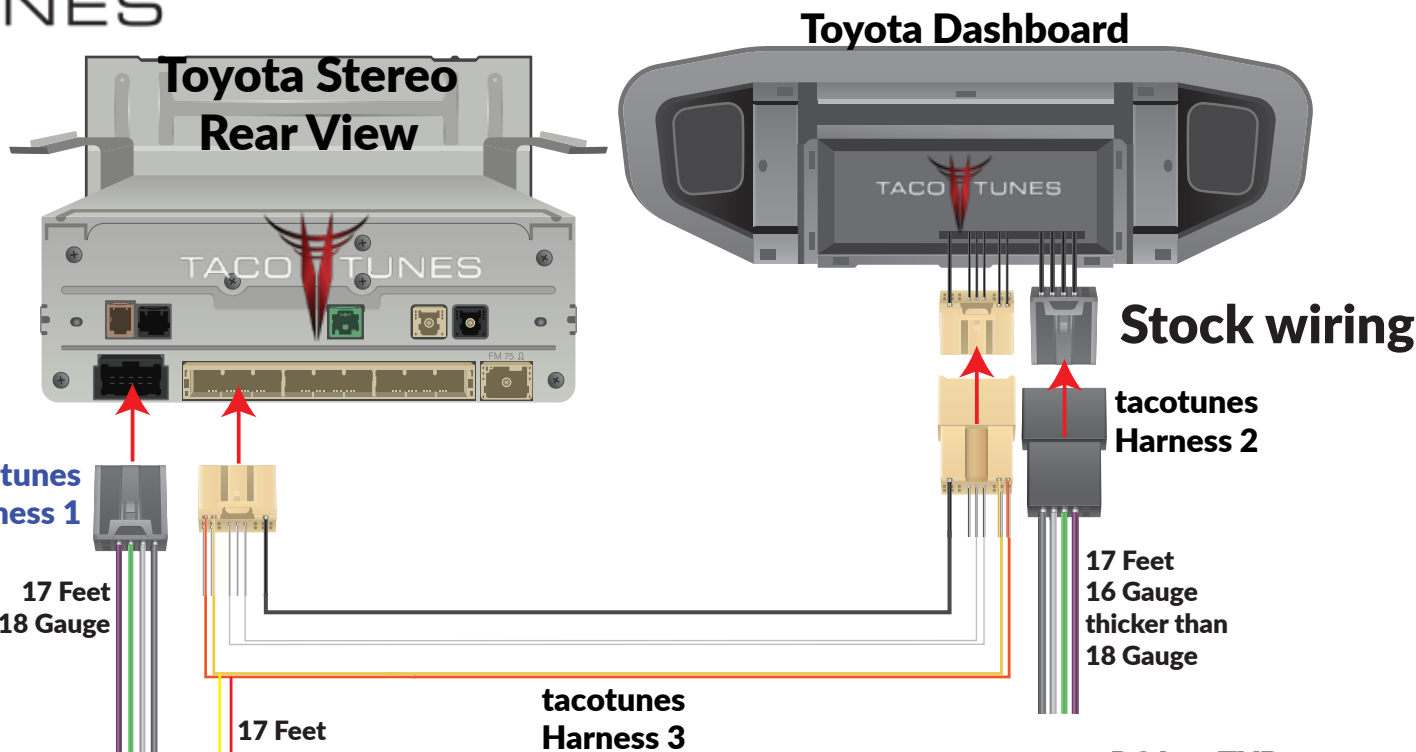



**Connect to NTUNE6
(Color coded
Installation)**

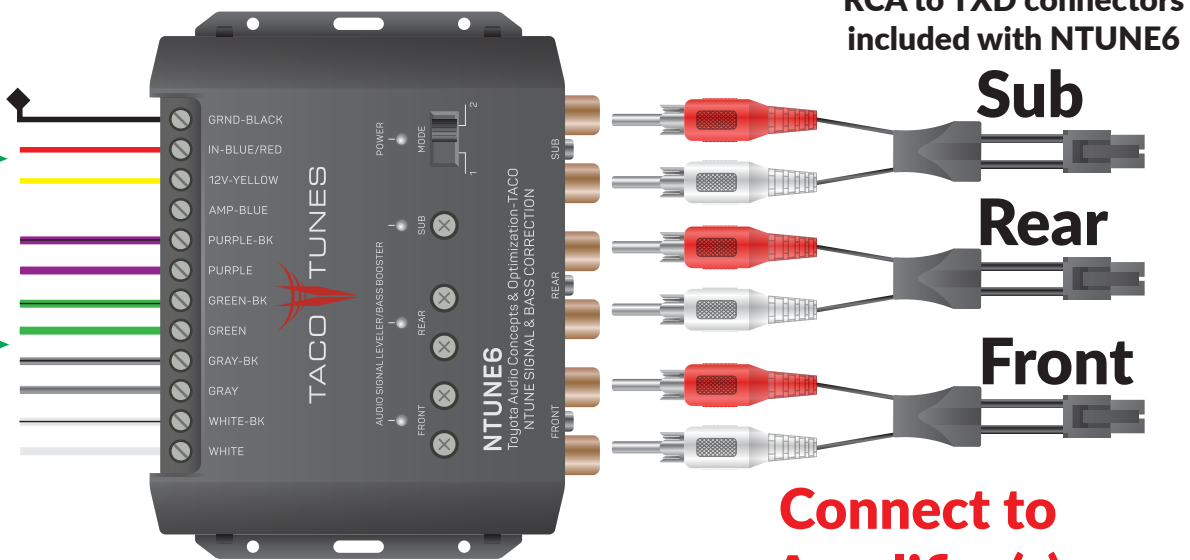

How to connect tacotunes NTUNE6 to amplifiers

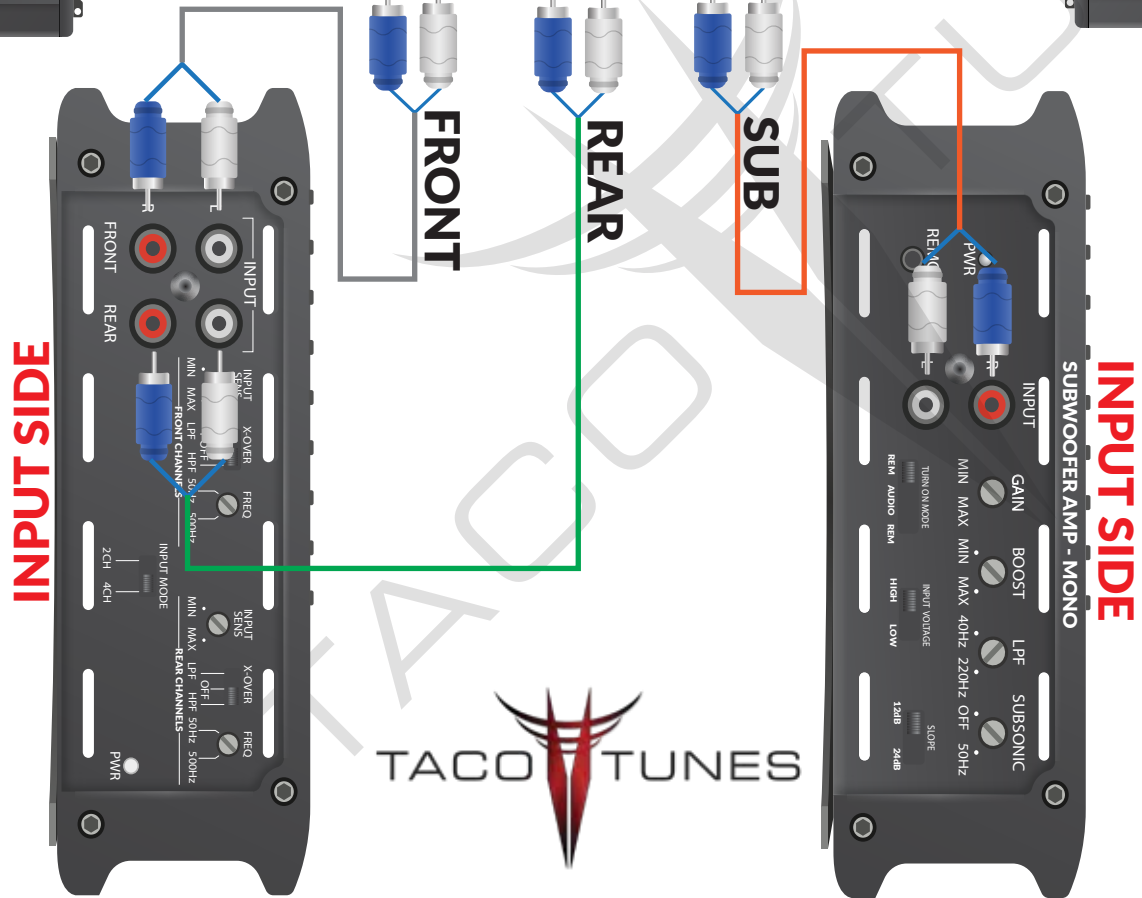


4 Channel & Subwoofer amplifier overview

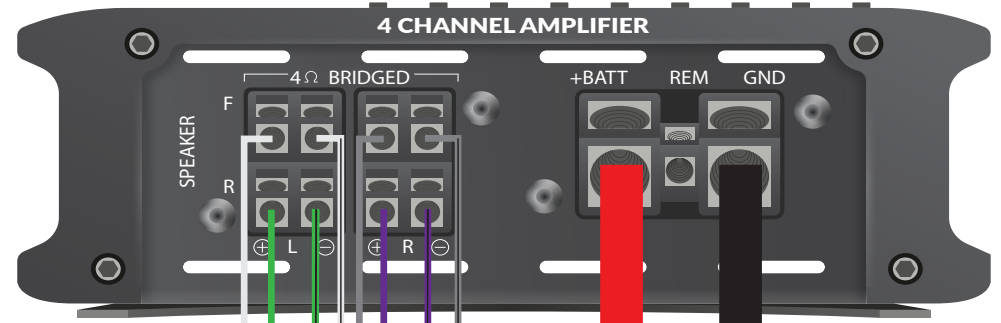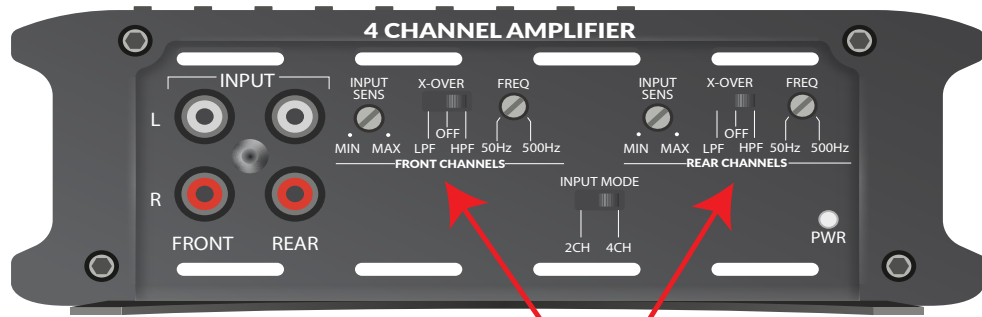

Tuning/Configuration knobs & switches:
Check out our video(s) on how to properly adjust these settings.

Power Wire:
From battery / distribution block.
Important: Check with your amp manufacturer for the proper gauge & fuses

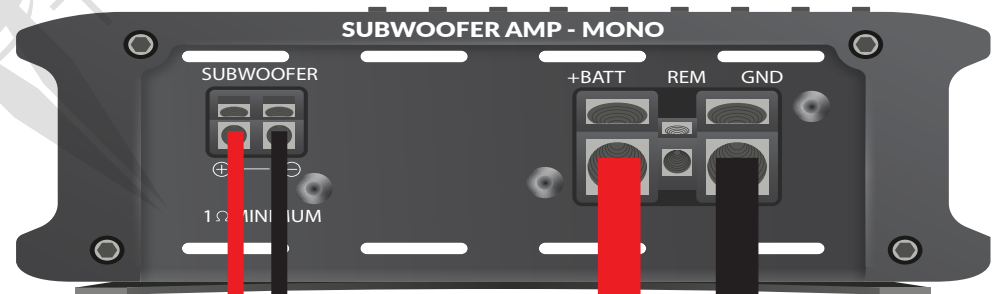

[Link to YouTube Channel](#)

Subwoofer Output



2018+ Toyota Sienna

How to add tacotunes amplifiers to stock stereo using NTUNE6

Plug and Play, easy install,
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

MAX 100 WATTS RMS X 4

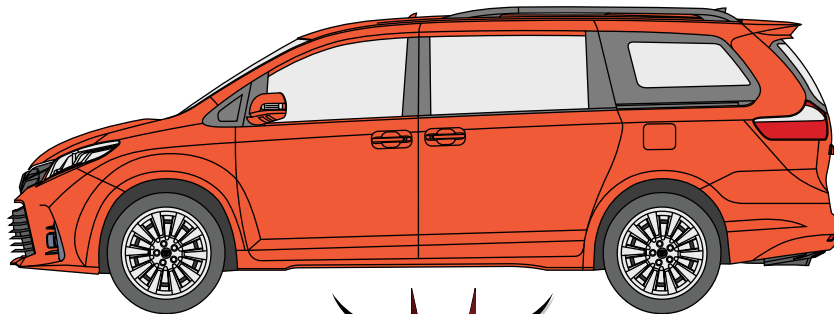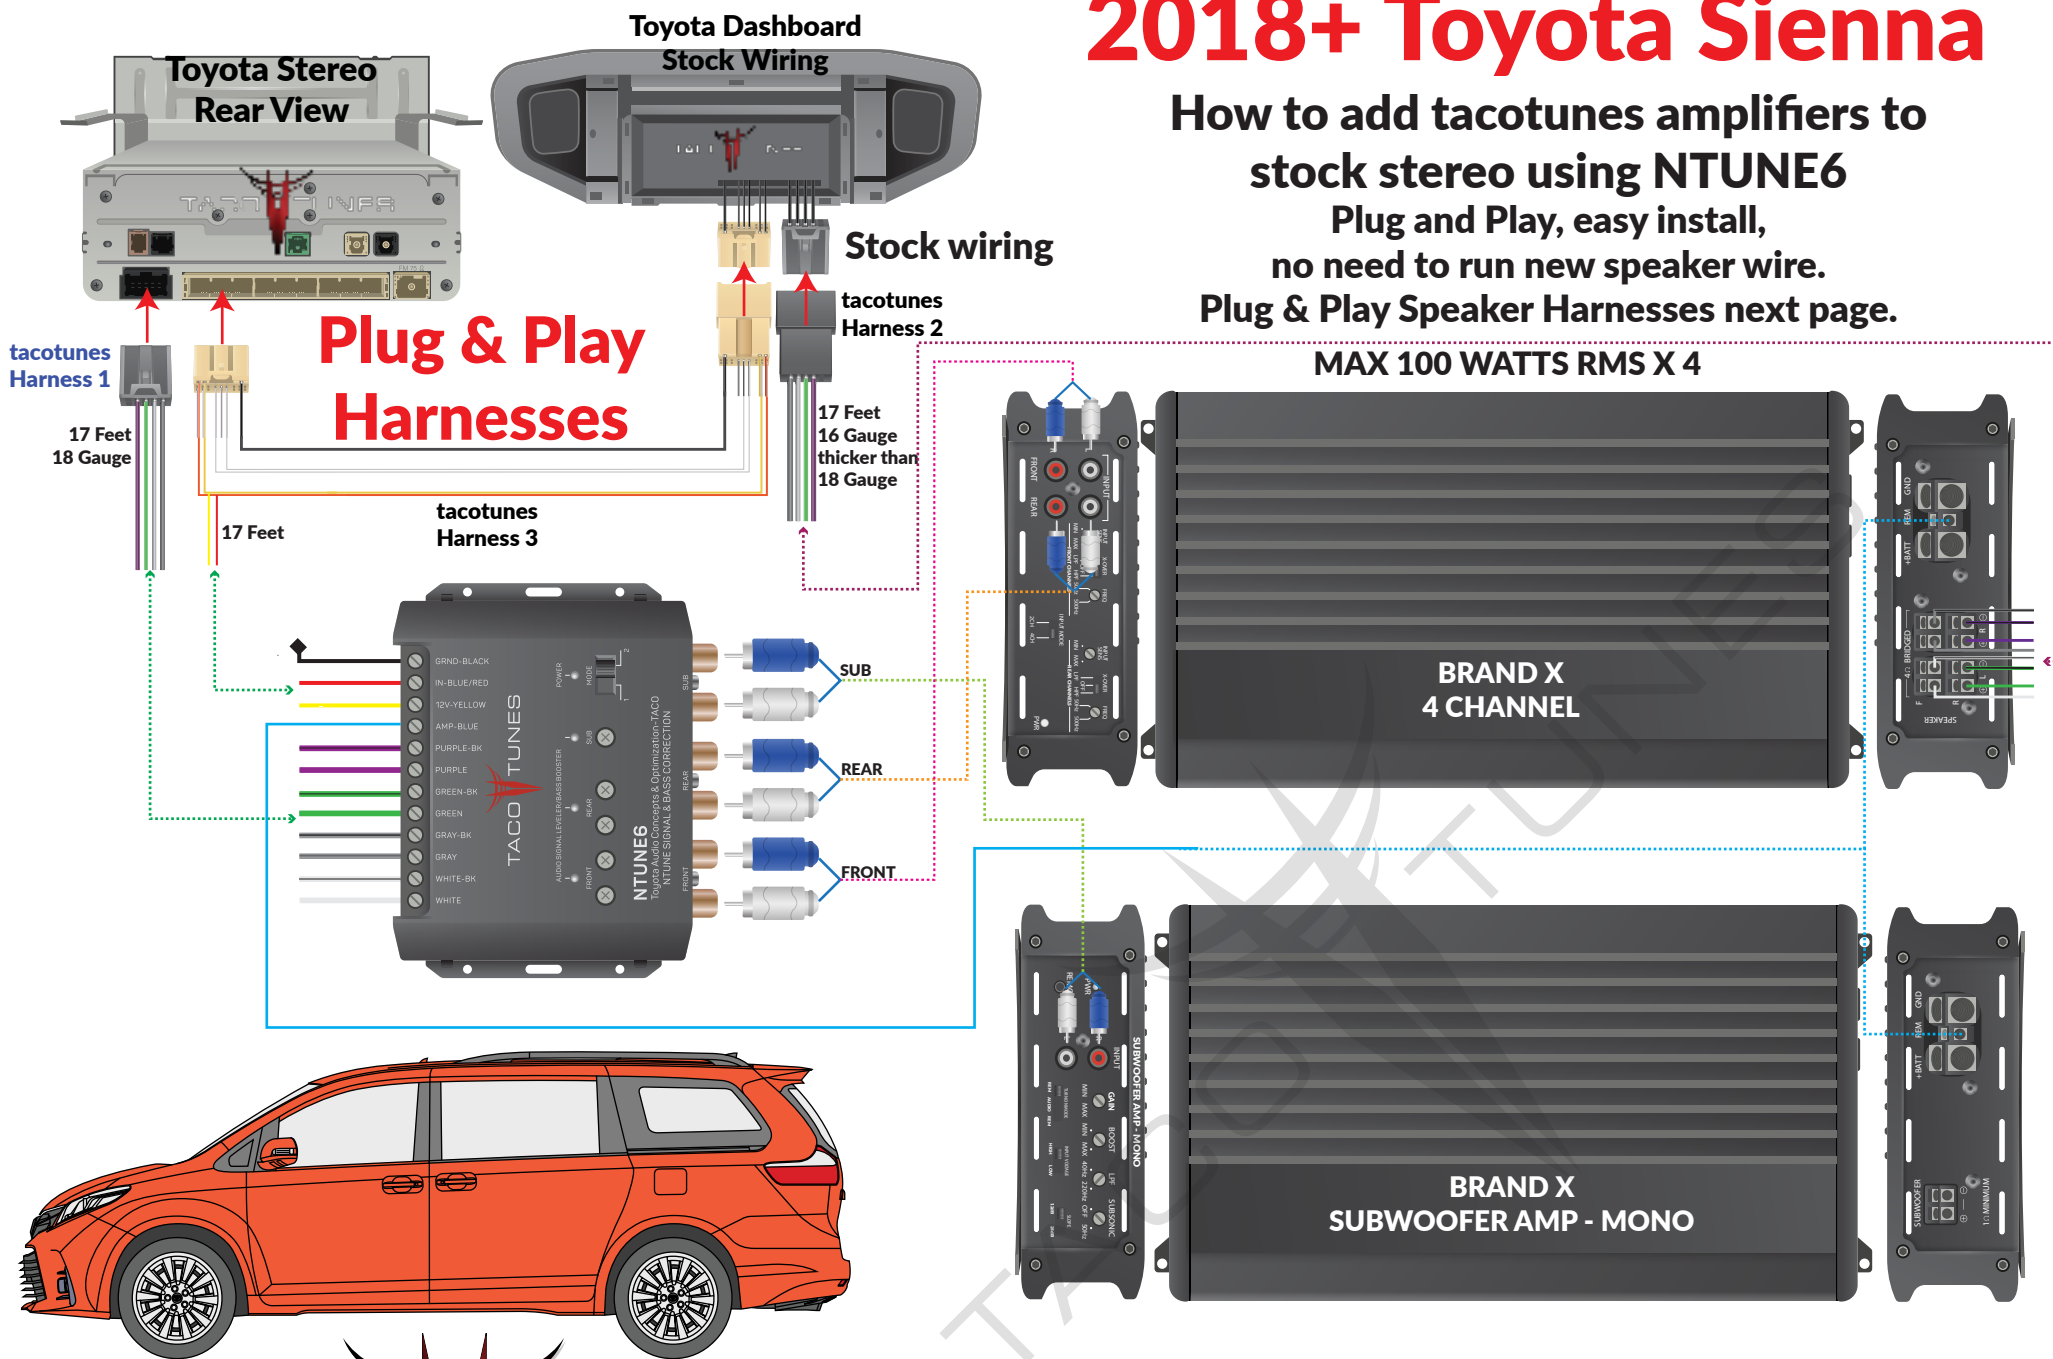


[CLICK HERE FOR HARNESSSES](#)

2018+ Toyota Sienna


Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **Sienna**!

We will explain how your **Sienna** is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

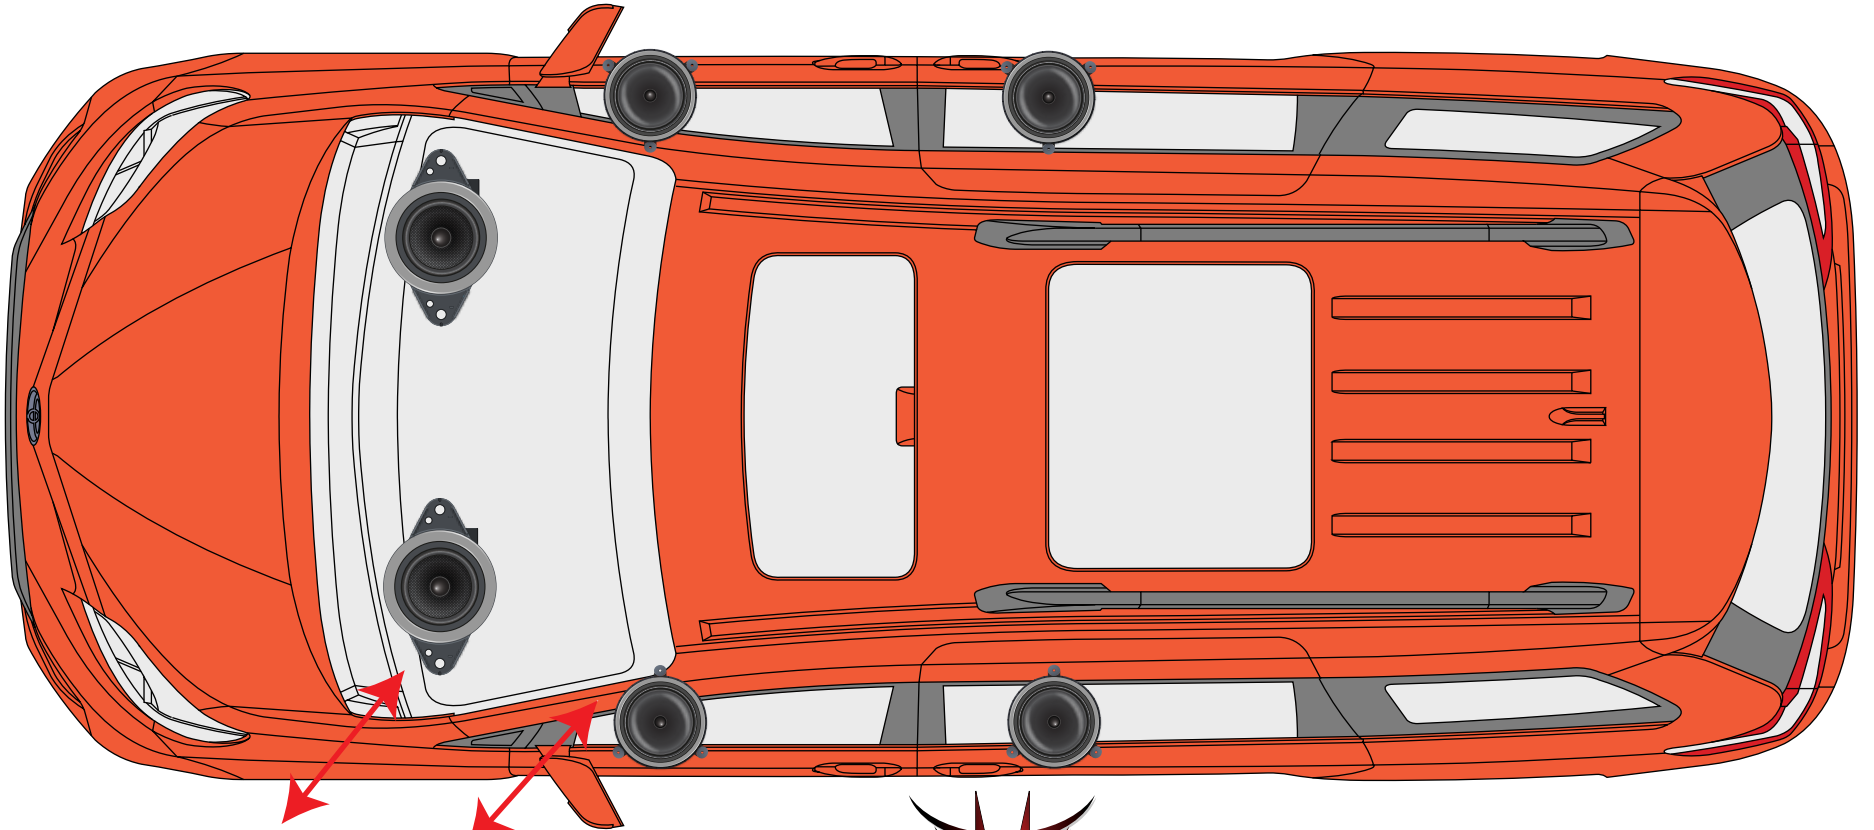

[CLICK HERE](#)
HARNESS A1 HARNESS A2

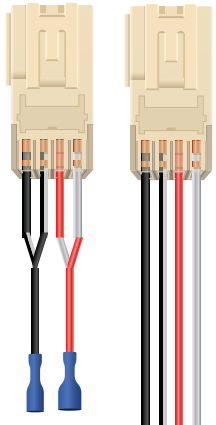

[CLICK HERE](#)
HARNESS A1 HARNESS A2

