
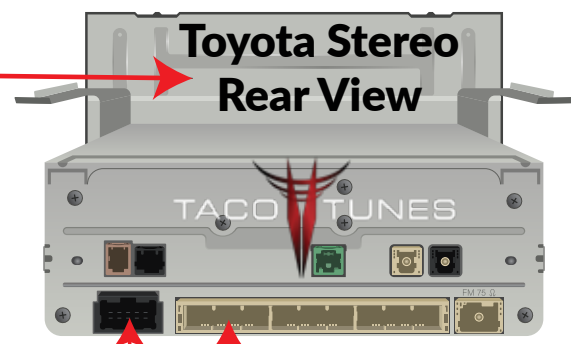


# 2019+ Toyota CHR

Add amplifier(s) to stock stereo - fast & easy!

- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

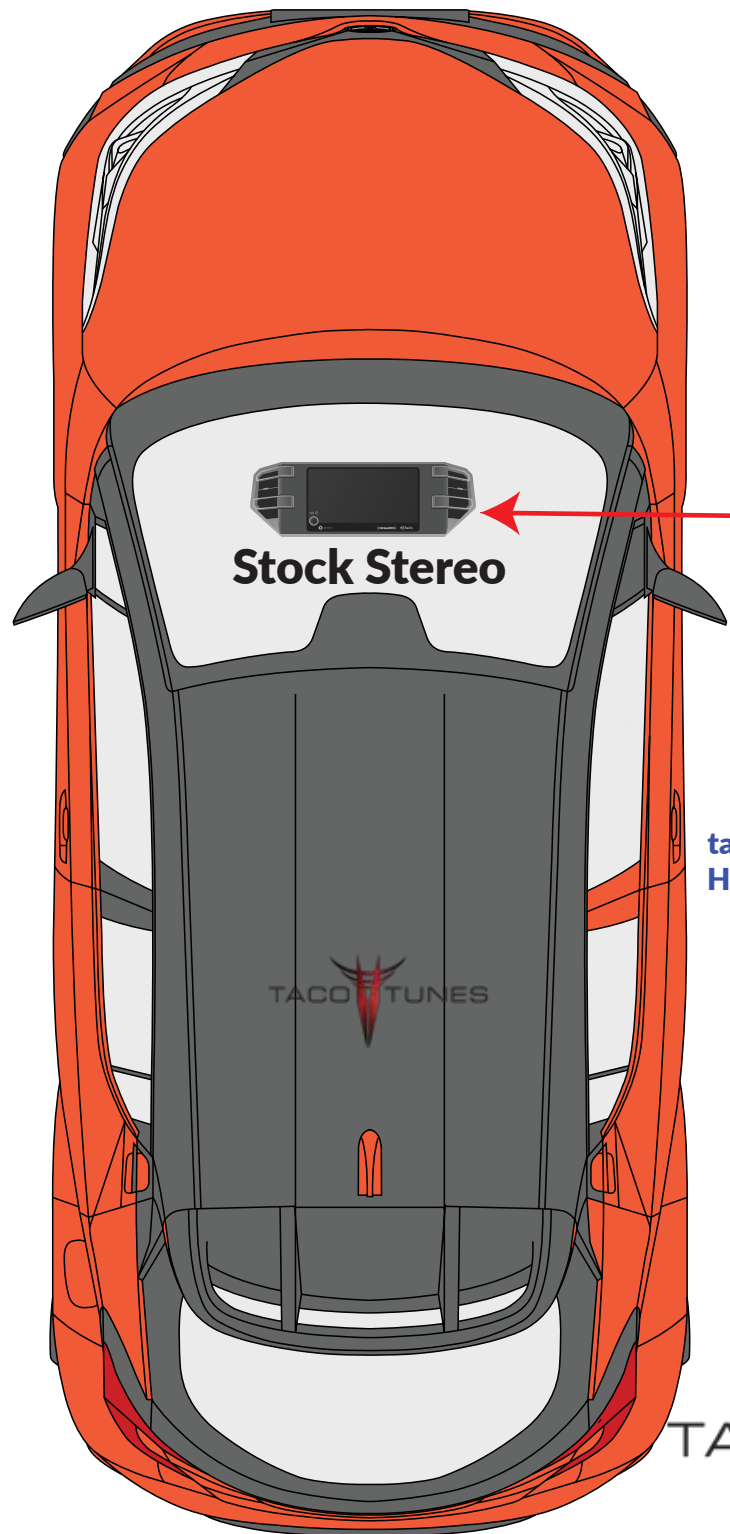

tacotunes  
Harness 1

tacotunes  
Harness 3

Stock wiring

tacotunes  
Harness 2

17 Feet  
18 Gauge  
Connect to  
LOC/DSP


17 Feet

17 Feet  
16 Gauge  
(thicker than 18 Gauge)  
Connect to  
4 Channel Amp


## Plug & Play Harnesses



# How to connect tacotunes plug & play wiring to: tacotunes NTUNE6

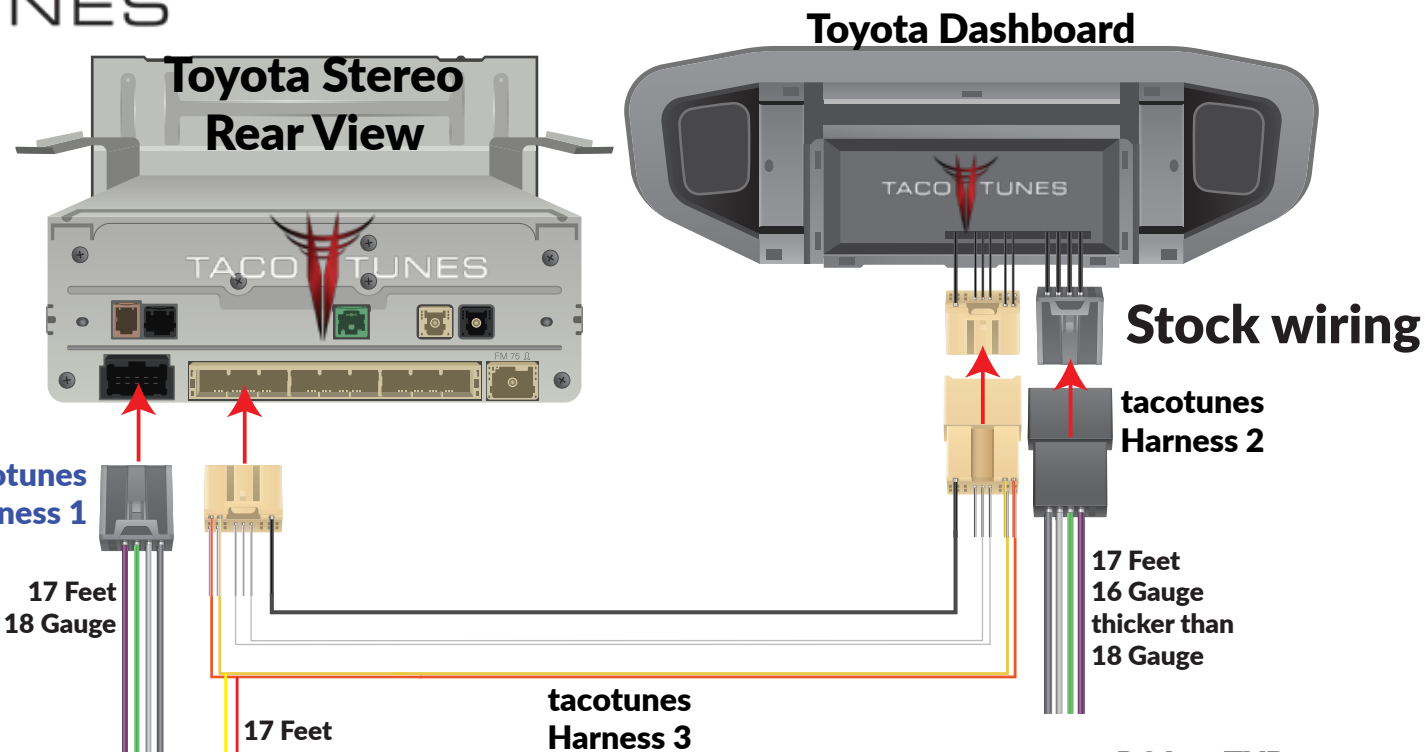


**Connect to NTUNE6  
(Color coded  
Installation)**


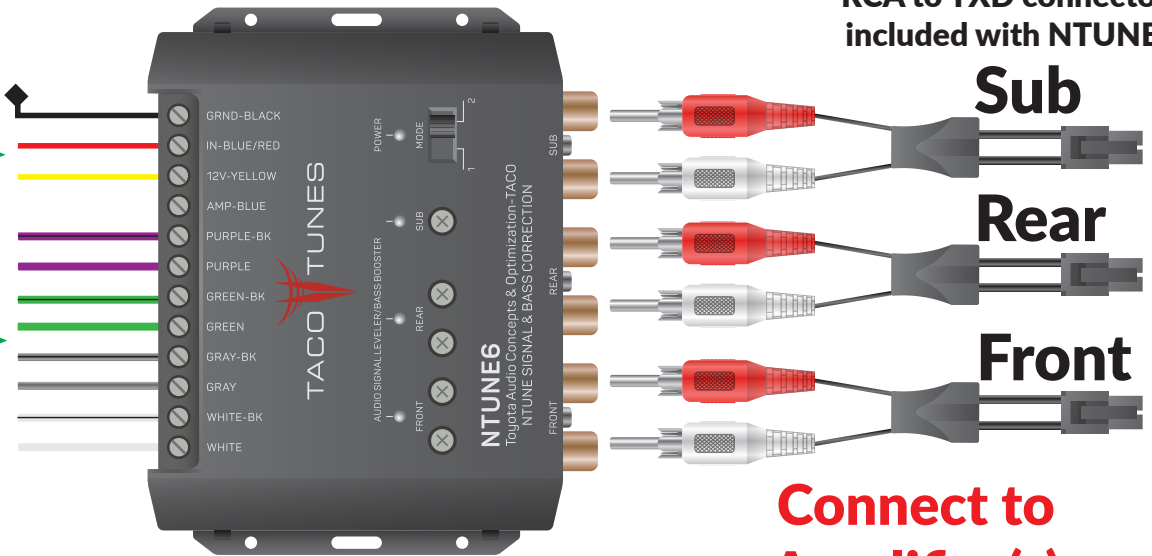


**Connect to  
Amplifier(s)**

# How to connect tacotunes NTUNE6 to amplifiers

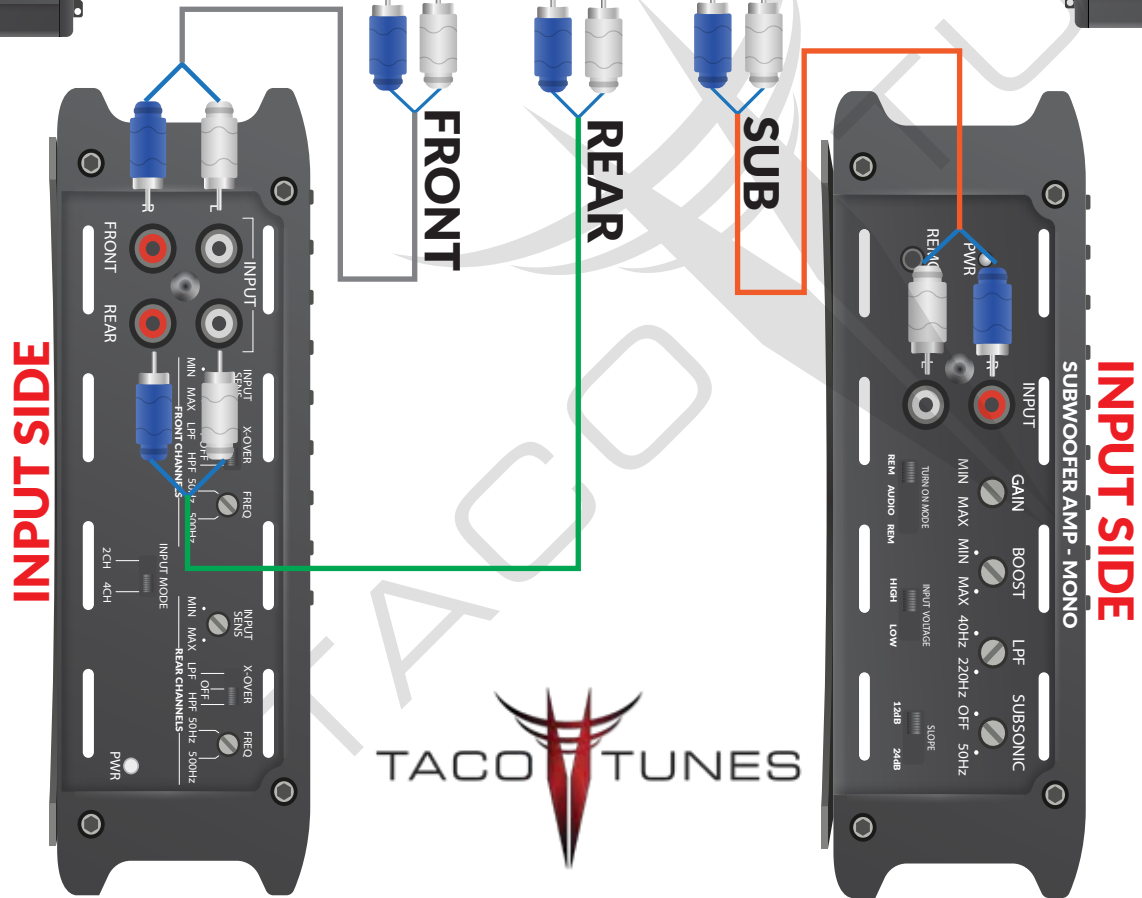

# 4 Channel & Subwoofer amplifier overview

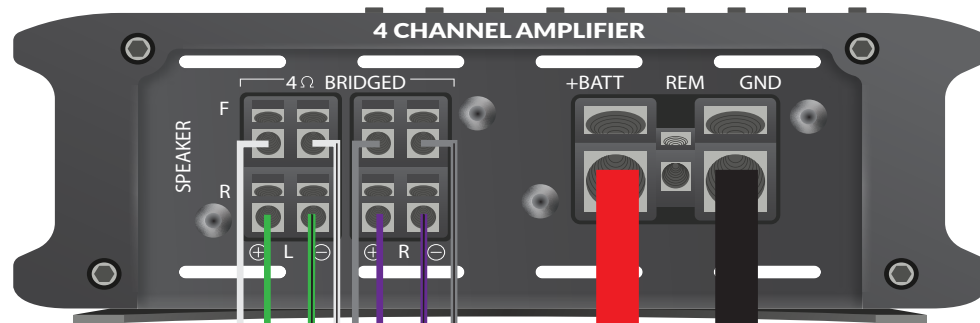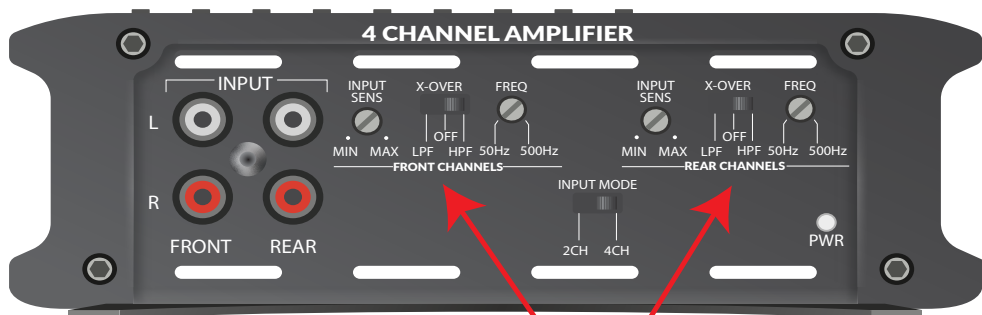


Connect to harness 3.

Power Wire:

From battery / distribution block.  
Important: Check with your amp manufacturer  
for the proper gauge & fuses

Tuning/Configuration knobs & switches:  
Check out our video(s) on how to properly  
adjust these settings.

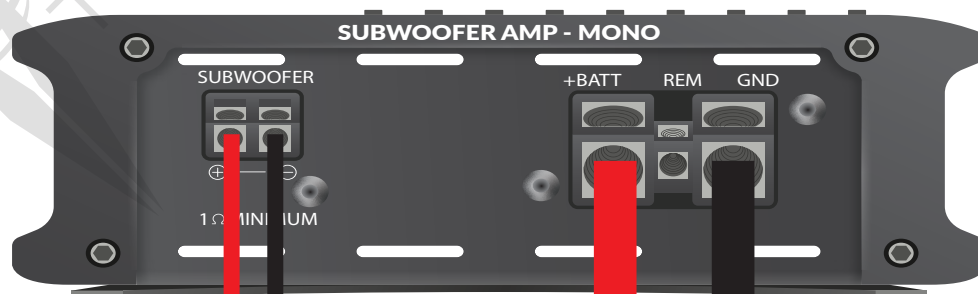

Subwoofer Output

[Link to YouTube Channel](#)


# 2019+ Toyota CHR

## How to add tacotunes amplifiers to stock stereo using NTUNE6

Plug and Play, easy install,  
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

MAX 100 WATTS RMS X 4

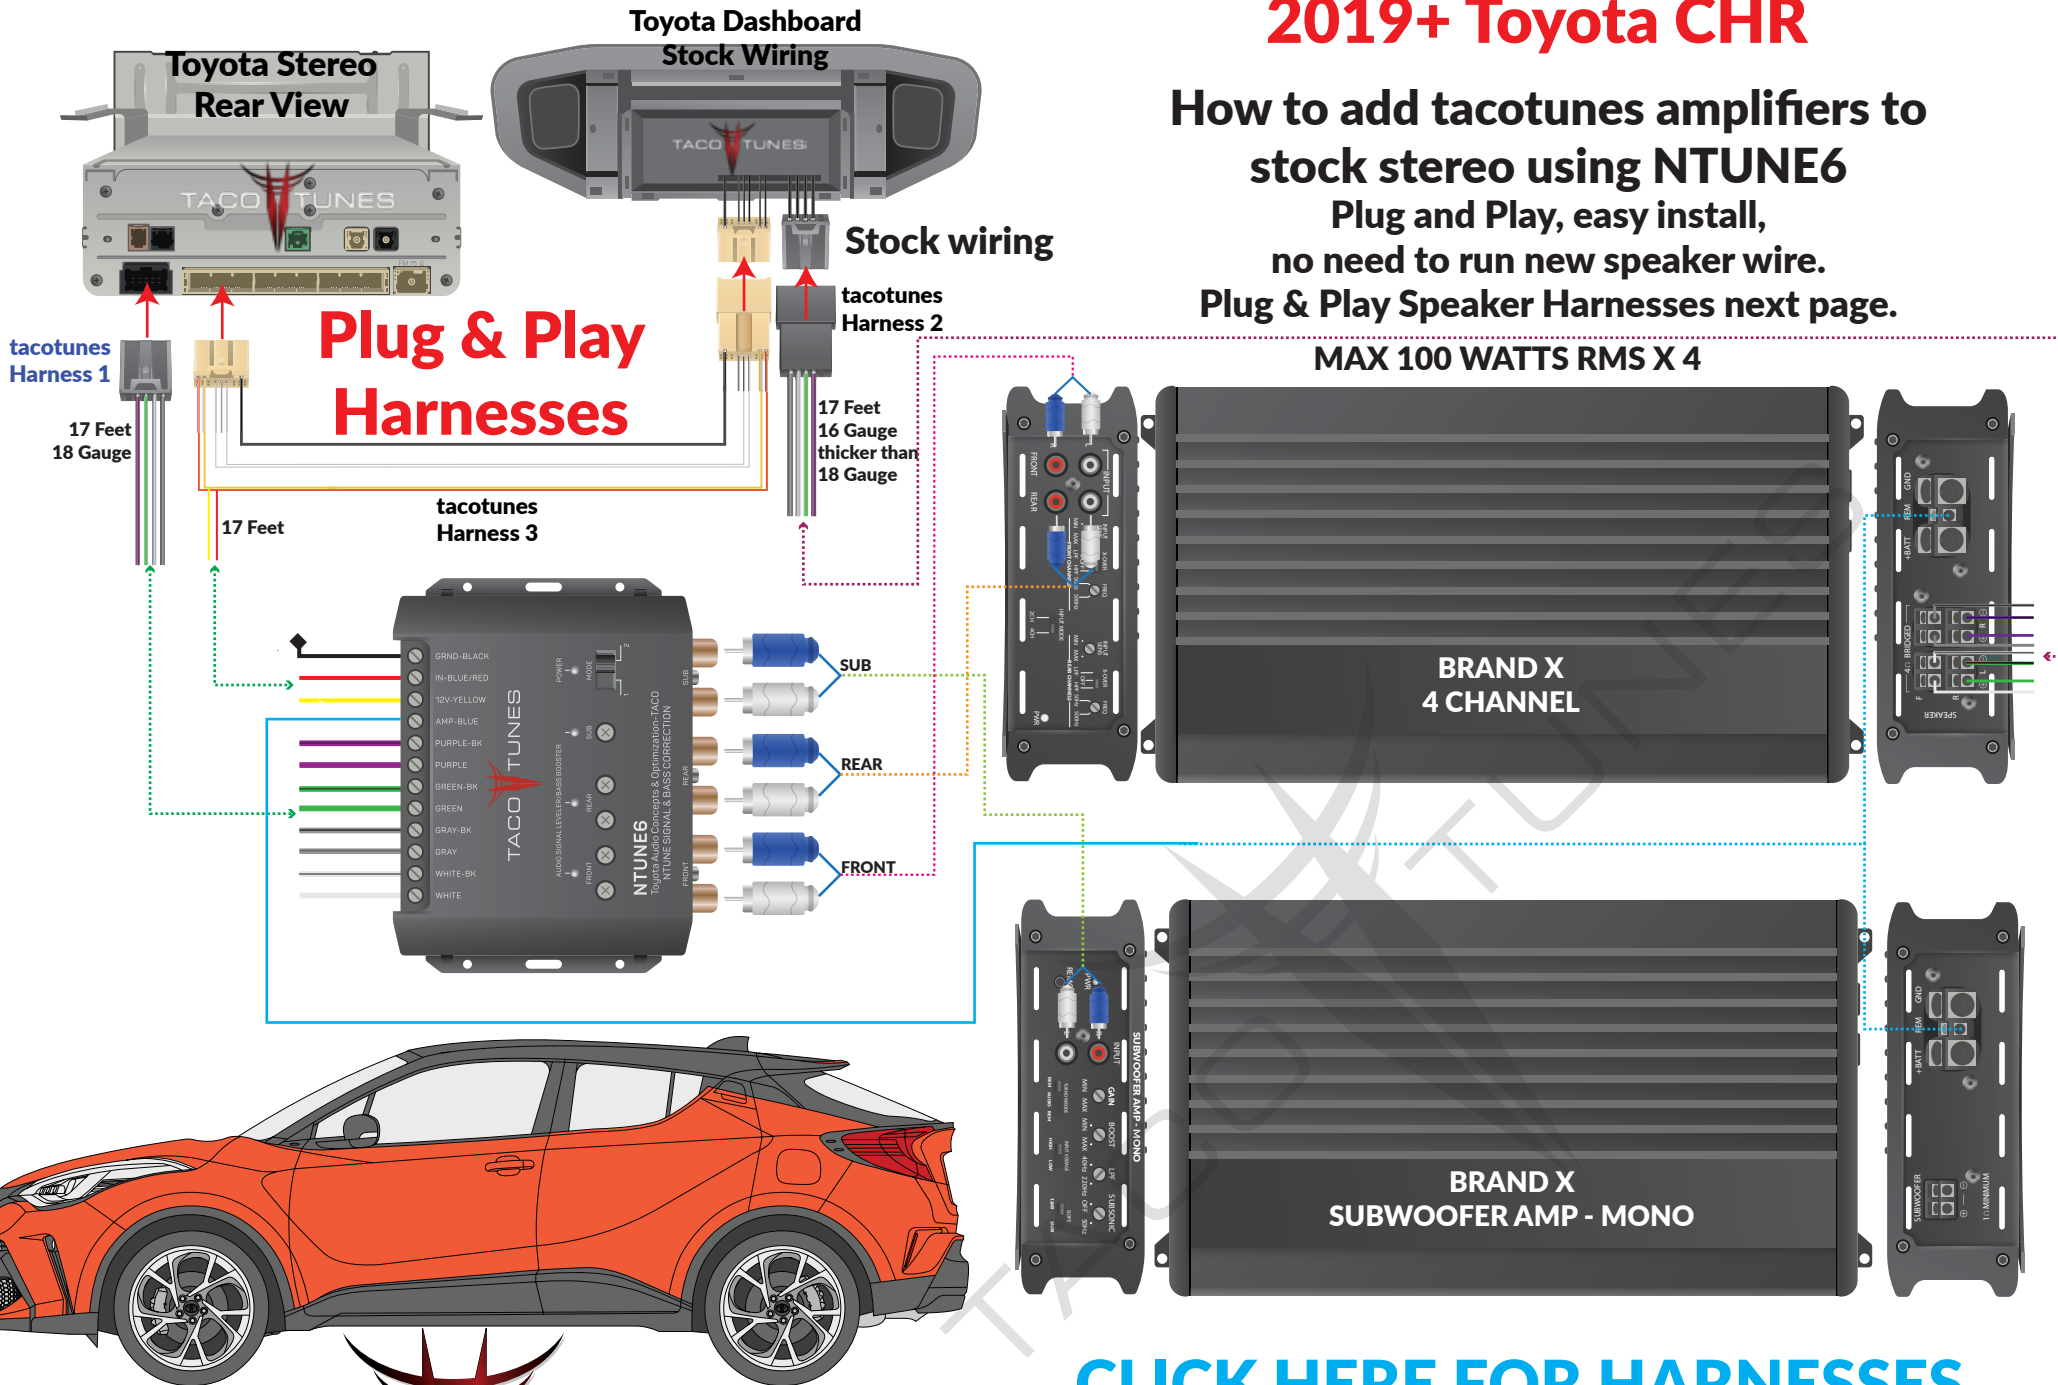

TACO TUNES


[CLICK HERE FOR HARNESSSES](#)

# 2019+ Toyota CHR


Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **CHR!**


We will explain how your Toyota is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

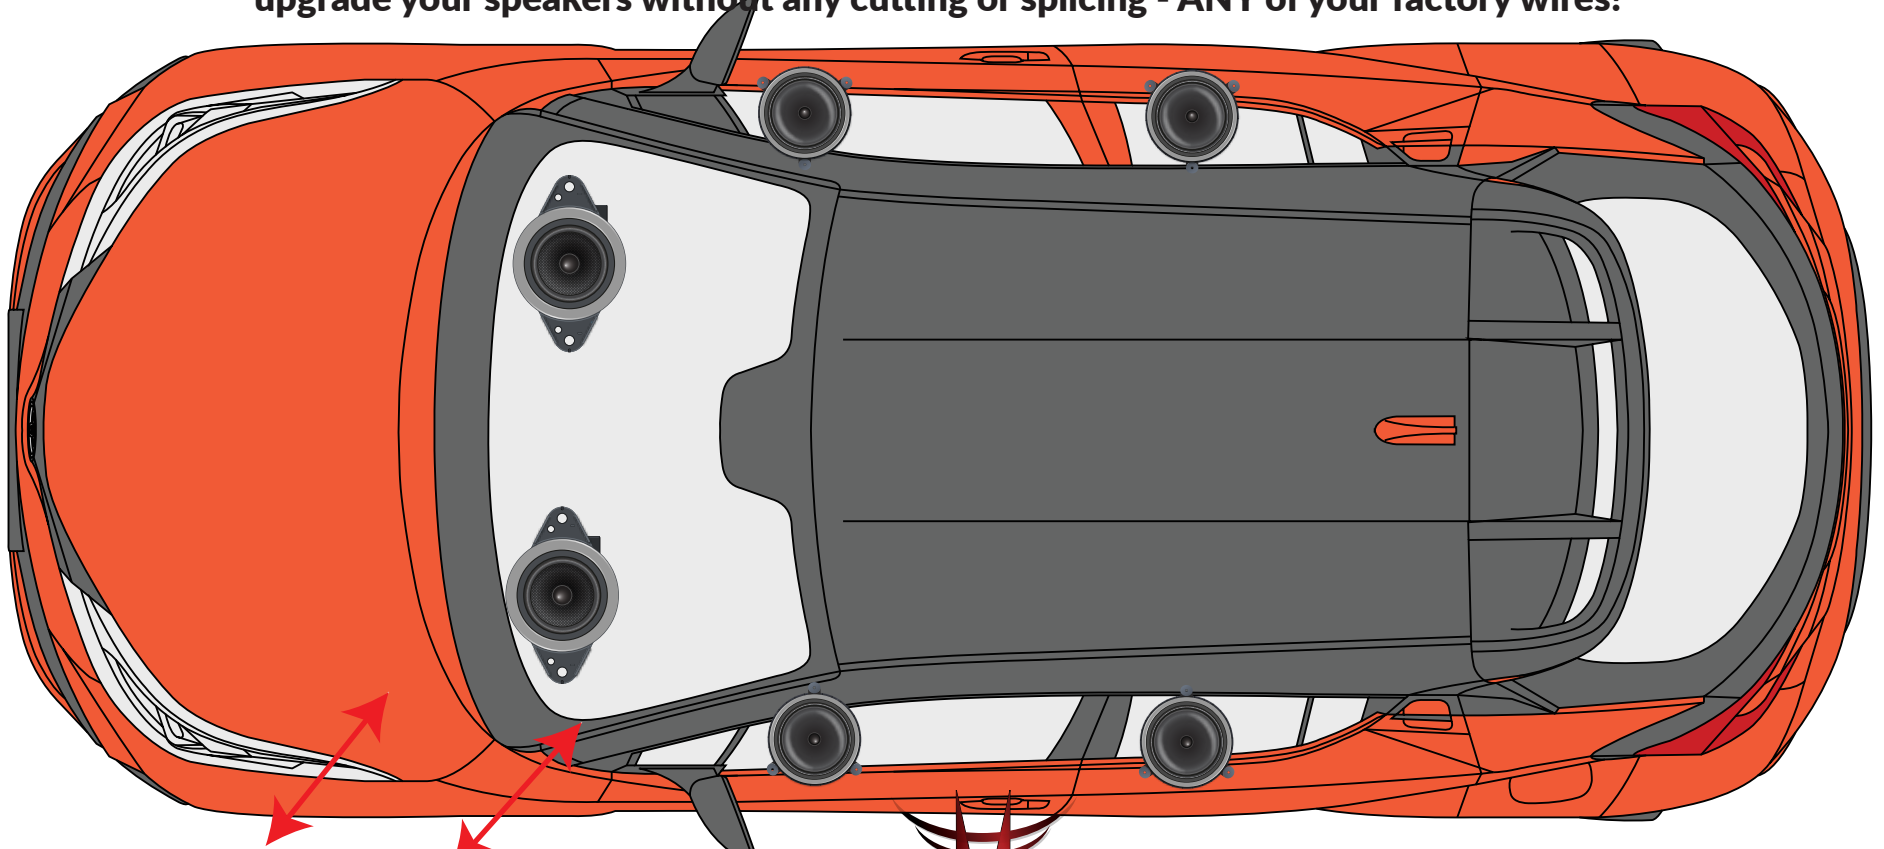

[CLICK HERE](#)  
HARNES A1 HARNES A2

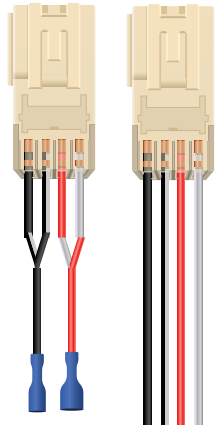

[CLICK HERE](#)  
HARNES A1 HARNES A2

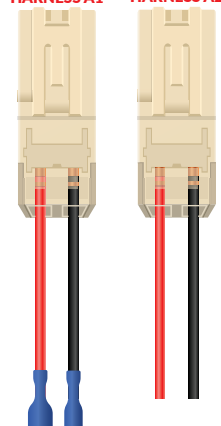

TACO TUNES

