



2019+ Toyota Corolla

Add amplifier(s) to stock stereo - fast & easy!


- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

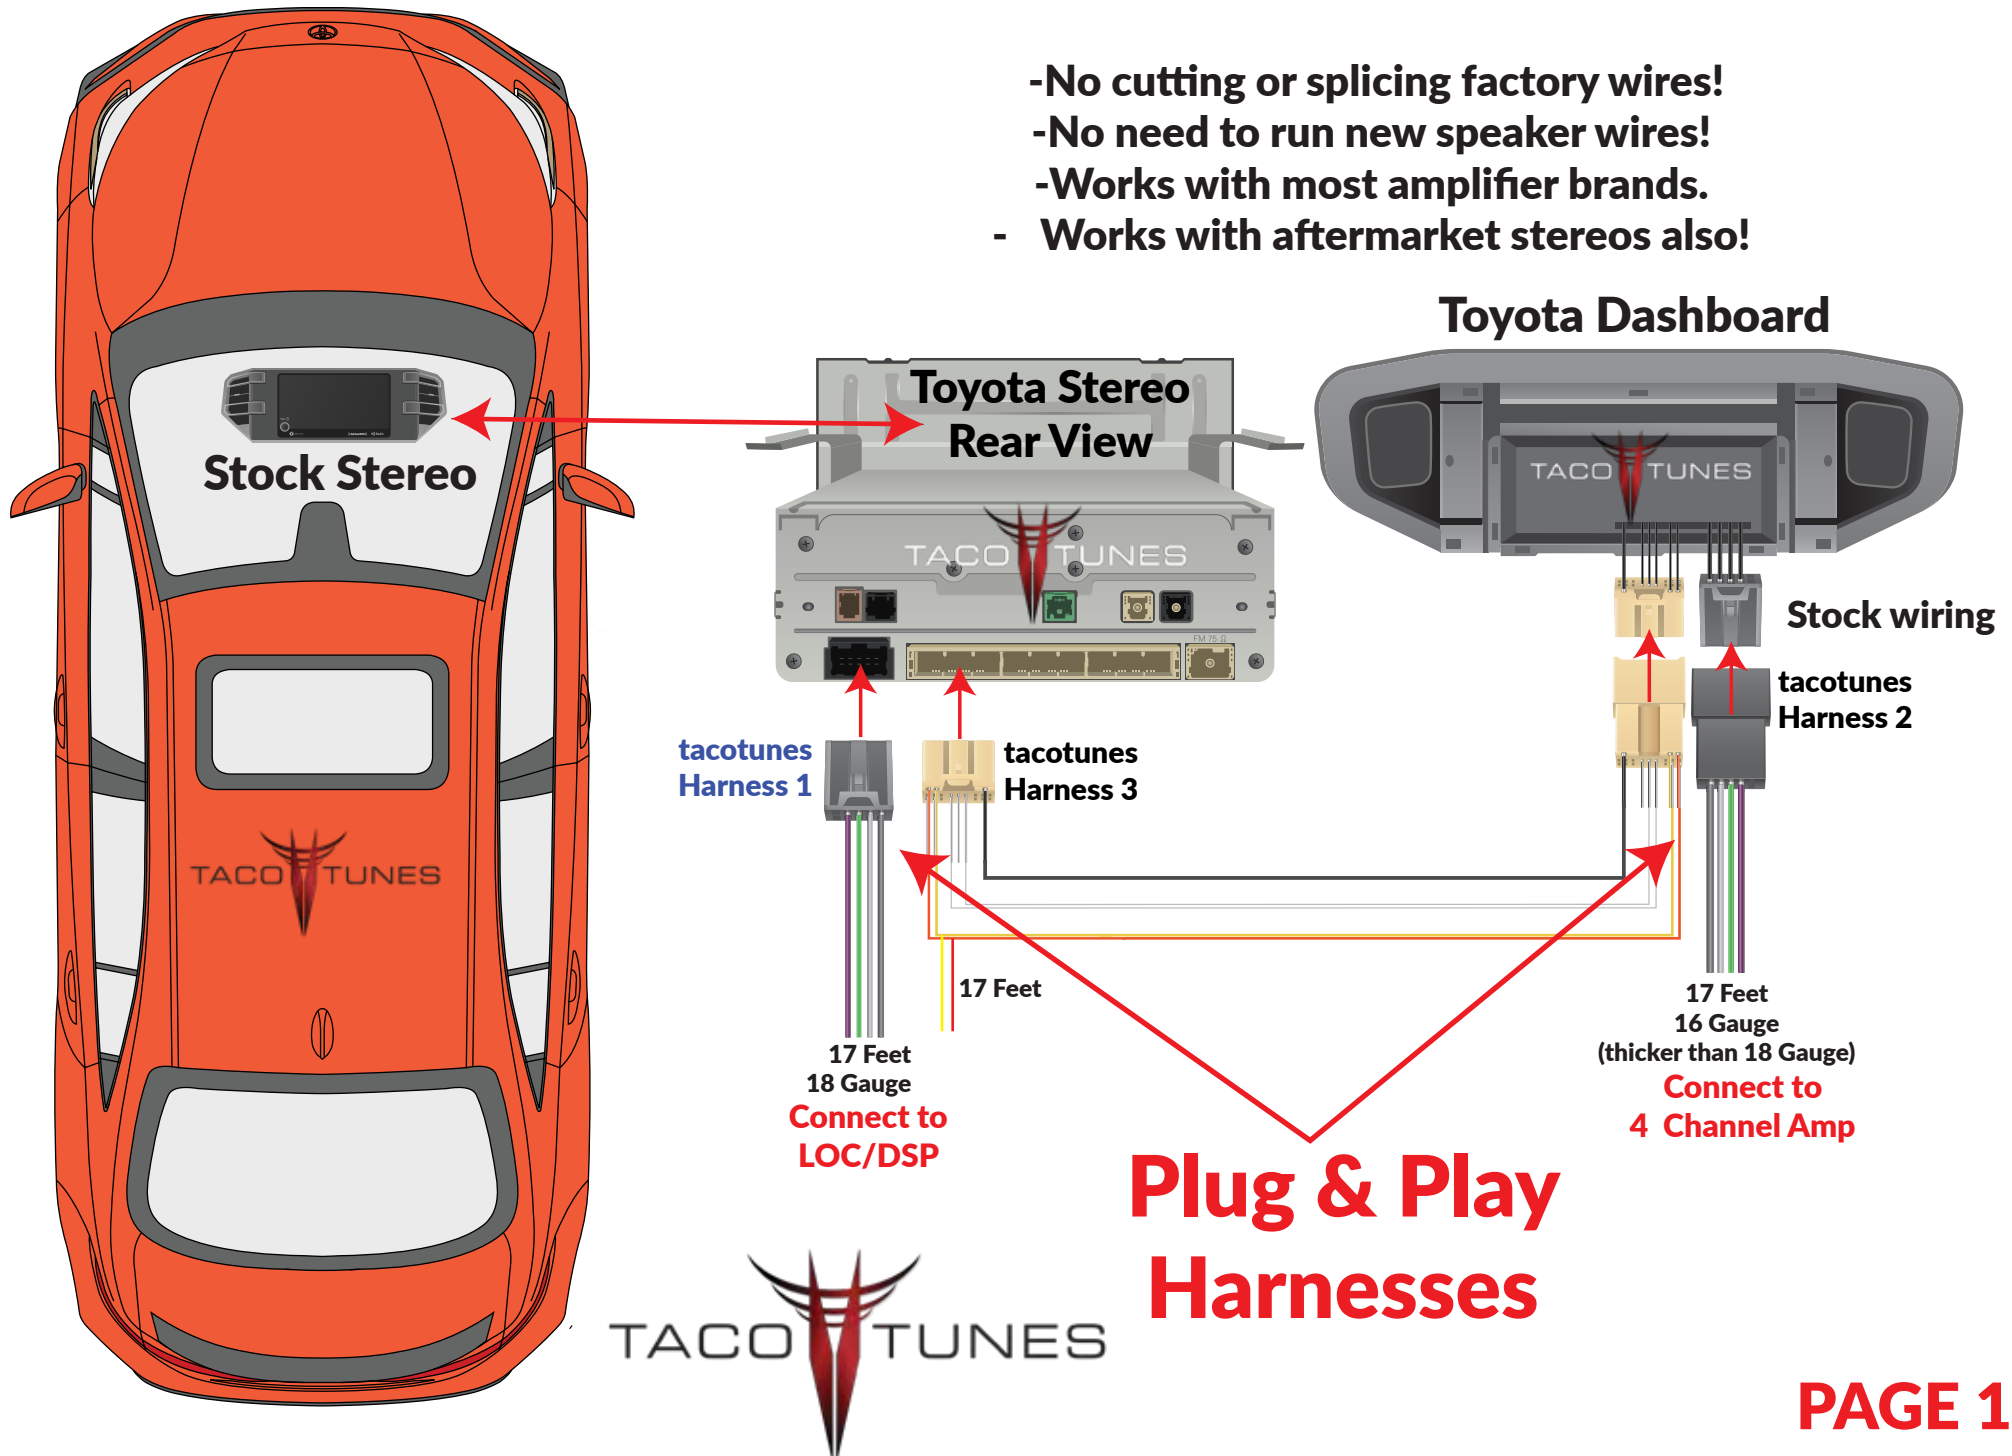

How to connect tacotunes plug & play wiring to: tacotunes NTUNE6

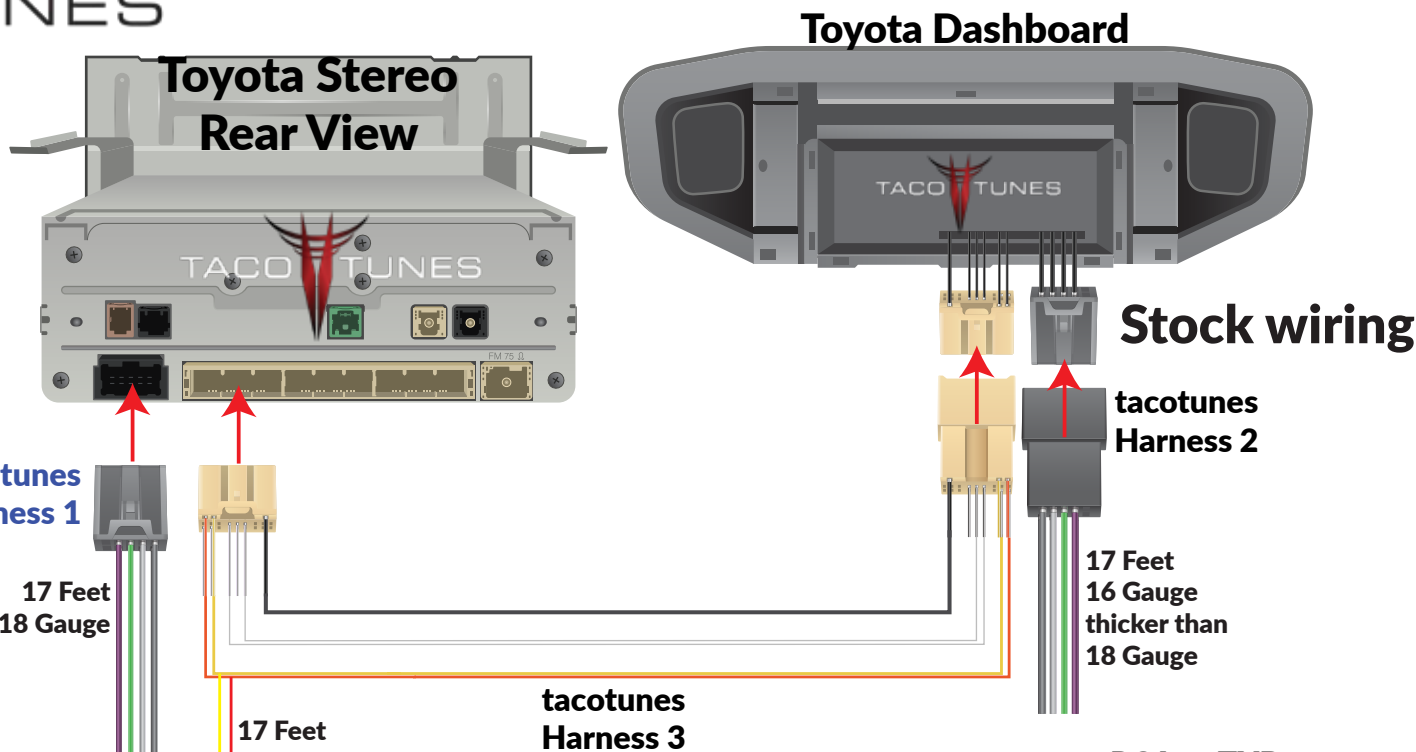




**Connect to NTUNE6
(Color coded
Installation)**

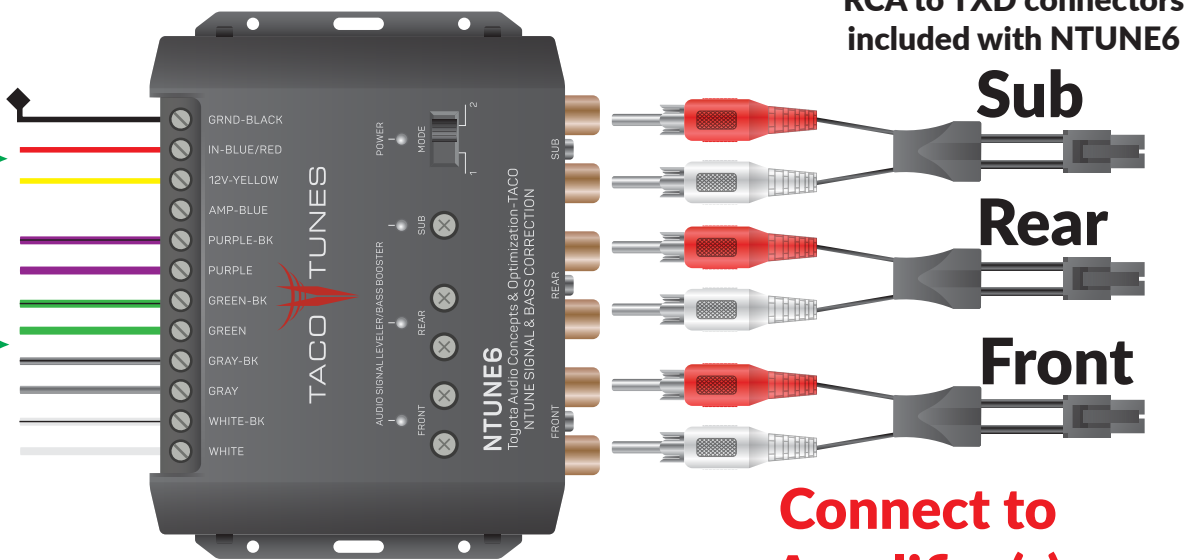

How to connect tacotunes NTUNE6 to amplifiers




RCA to TXD Connectors, included with NTUNE6

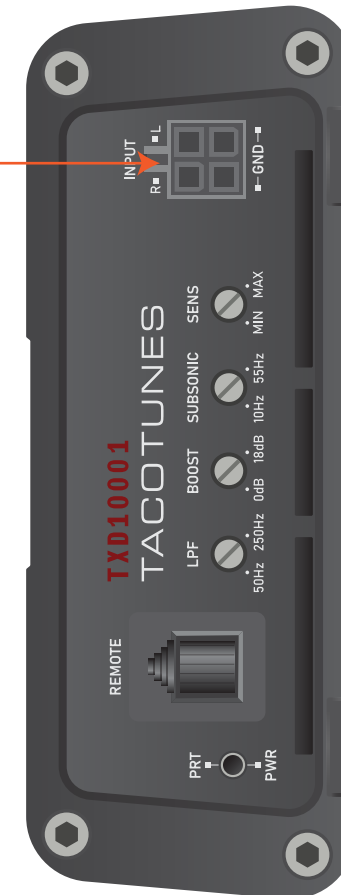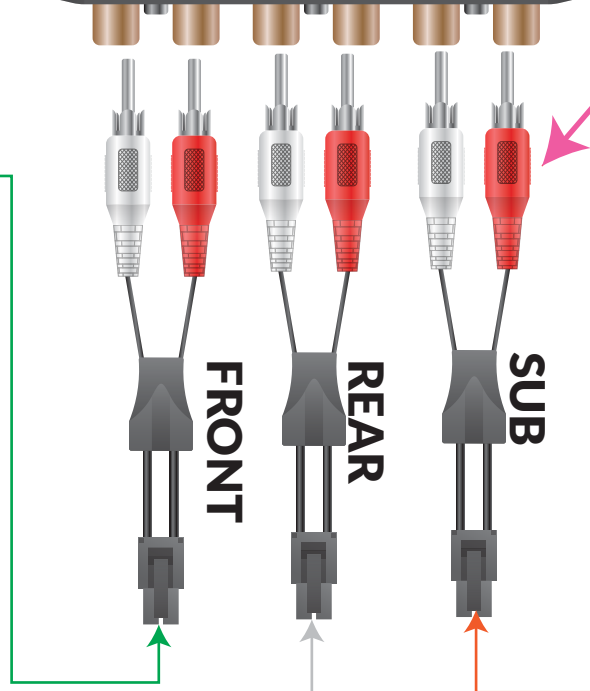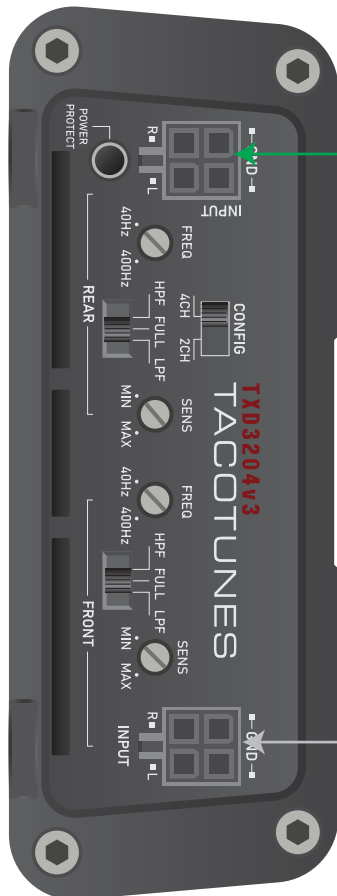


4 Channel & Subwoofer amplifier overview

TACOTUNES TXD 4 CHANNEL

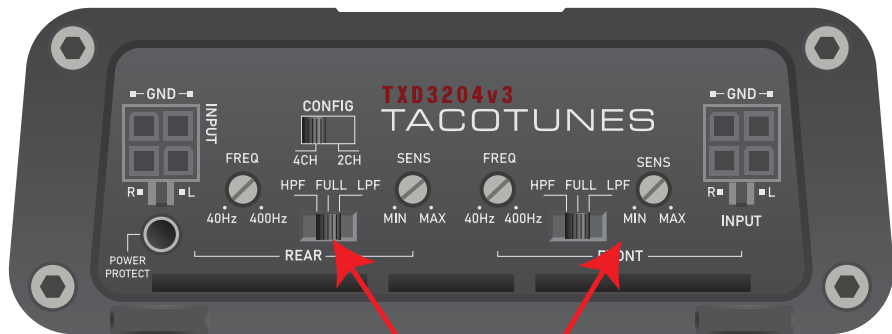

Tuning/Configuration knobs & switches:
Check out our video(s) on how to properly
adjust these settings.

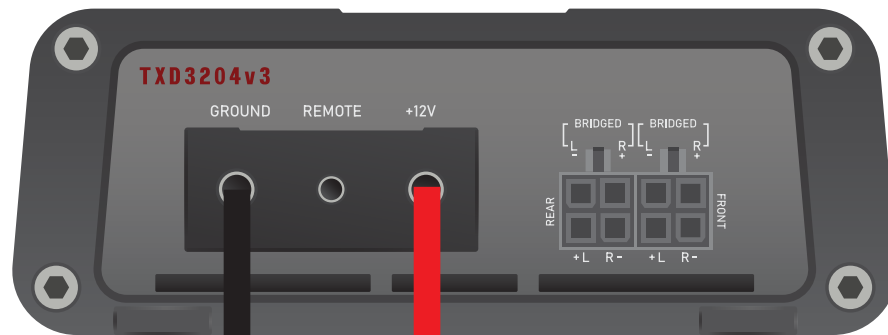

Power Wire:

We offer TXD Amp Kits designed for our TXD
amps! Check out our website for more info.

Direct Connect
Molex Plugs



TACOTUNES TXD SUBWOOFER AMP



Subwoofer Output



[Link to YouTube Channel](#)

2019+ Toyota Corolla

How to add tacotunes amplifiers to stock stereo using Ntune6.

Plug and Play, easy install,
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

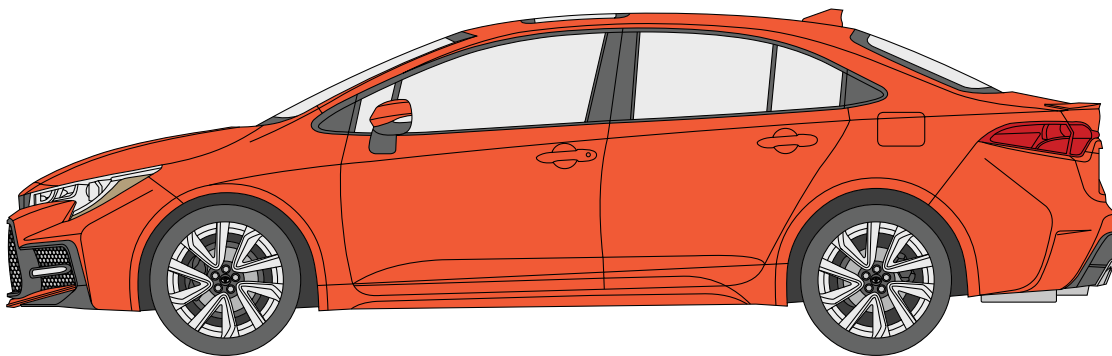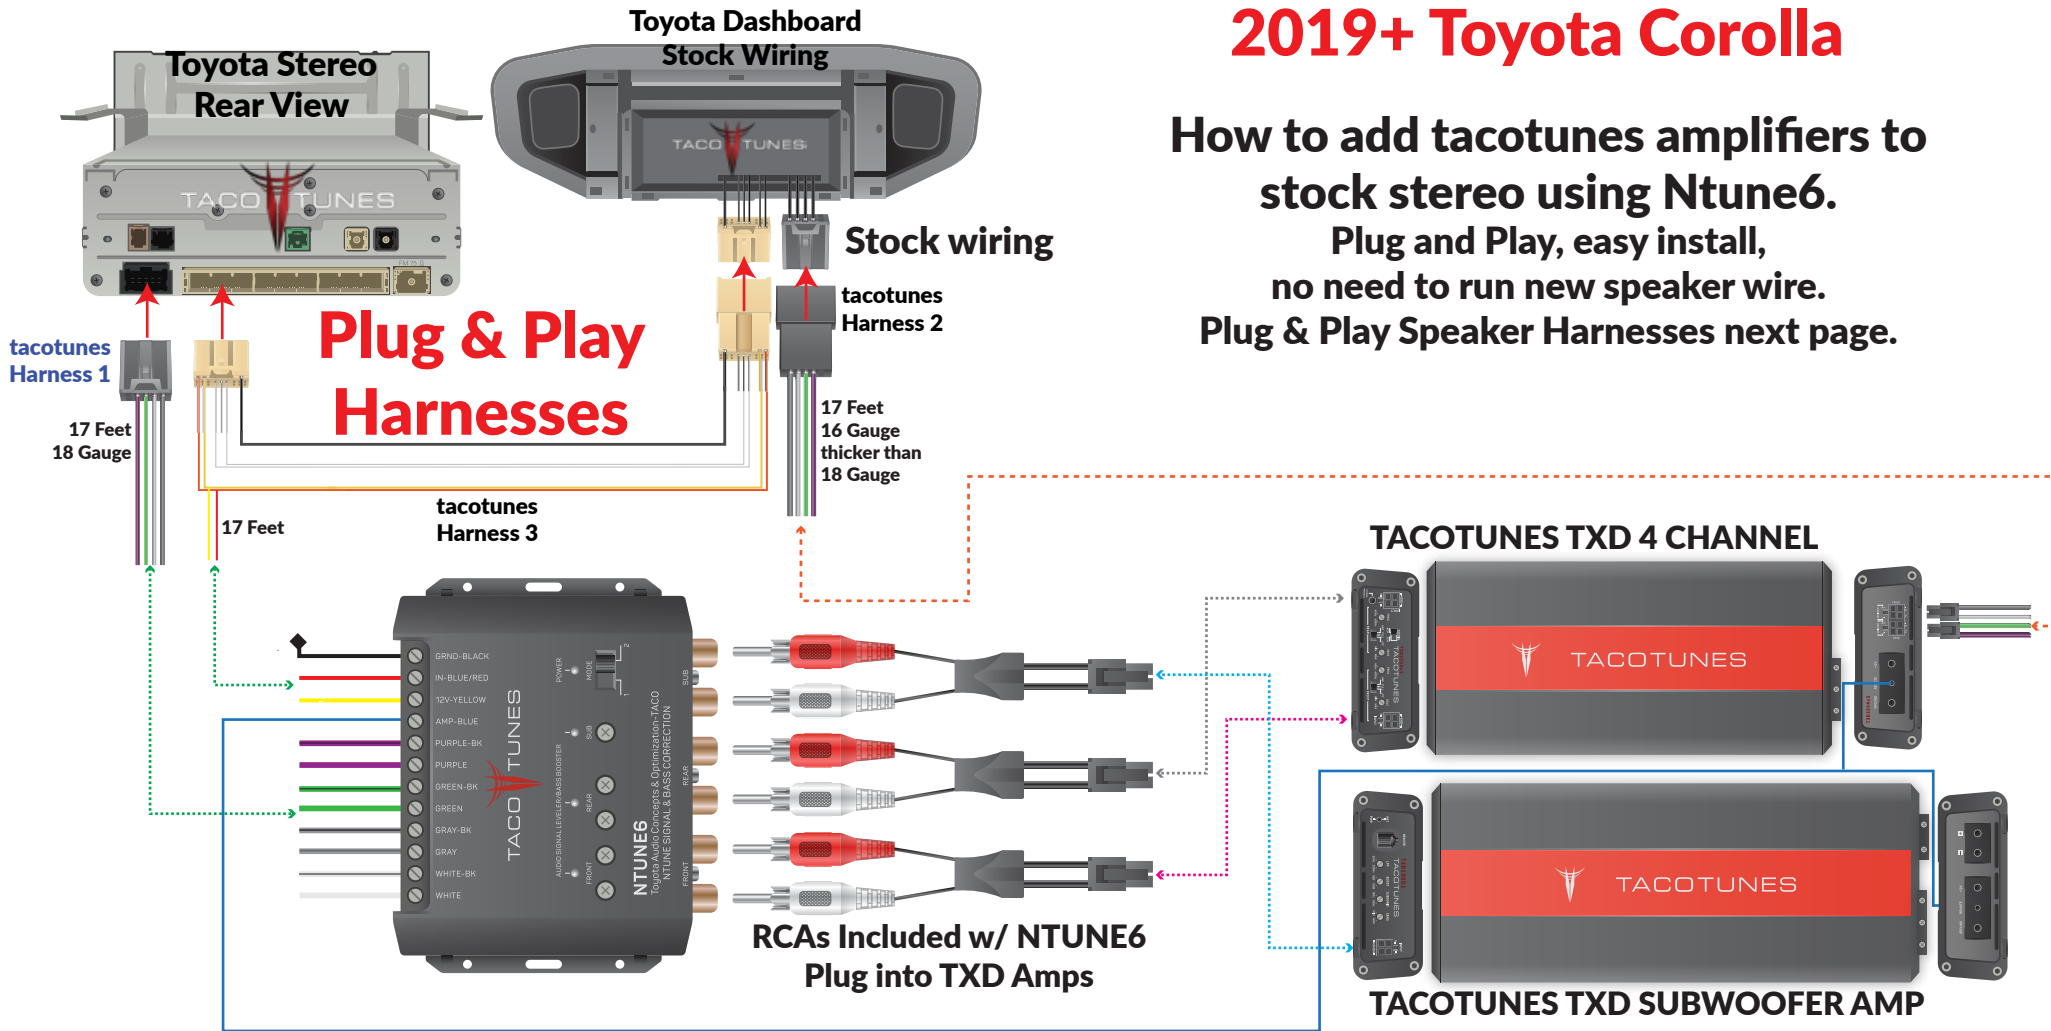


[CLICK HERE FOR HARNESSSES](#)

2019+ Toyota Corolla


Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **Corolla**!


We will explain how your **Corolla** is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

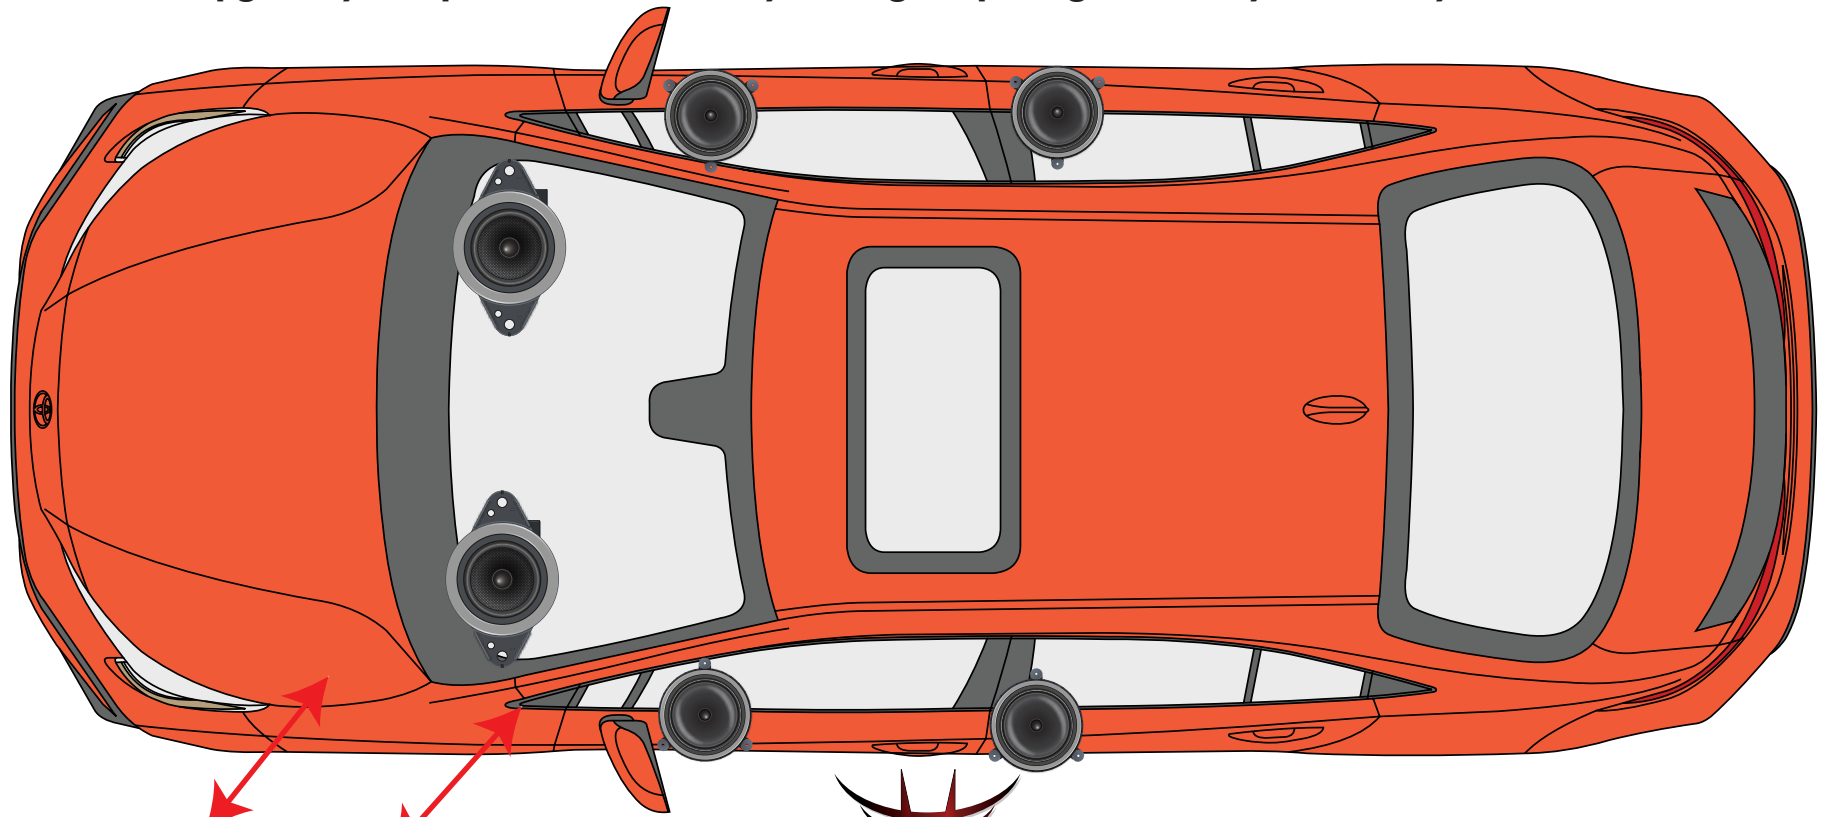

[CLICK HERE](#)
HARNESS A1 HARNESS A2

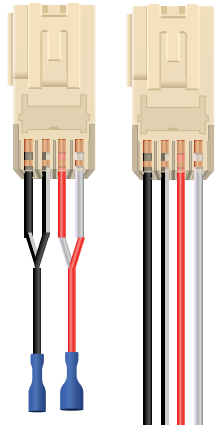

[CLICK HERE](#)
HARNESS A1 HARNESS A2

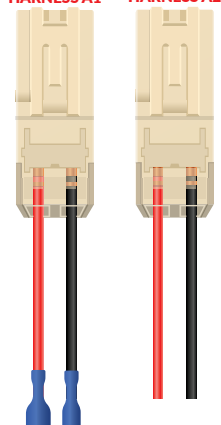

TACO TUNES

