
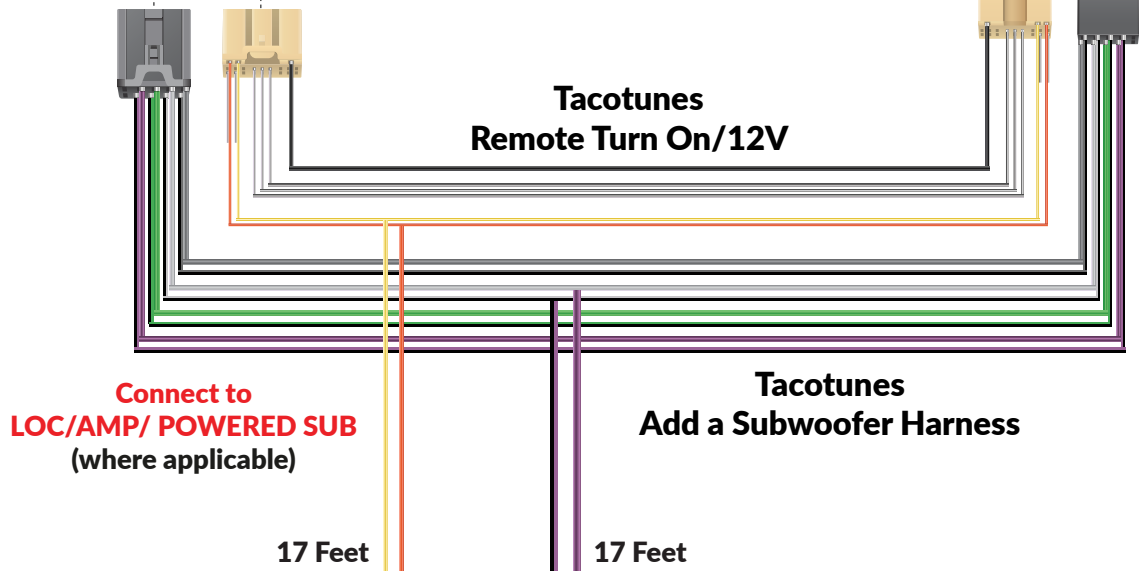


2020-2023 Toyota Tacoma

Add Subwoofer(s) to stock stereo - fast & easy!

- No cutting or splicing factory wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

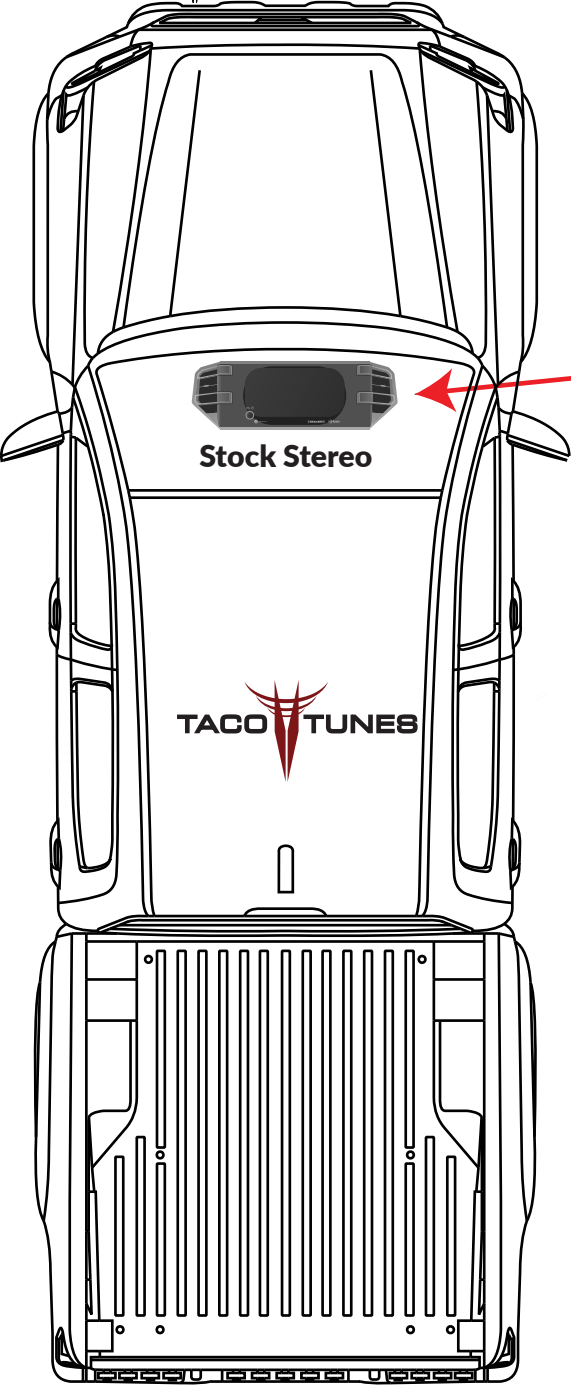


Connect to LOC/AMP/ POWERED SUB (where applicable)

Tacotunes Add a Subwoofer Harness


CLICK HERE
 Plug & Play Harnesses

How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness **HIGH LEVEL INPUT WITH MOLEX PLUG**

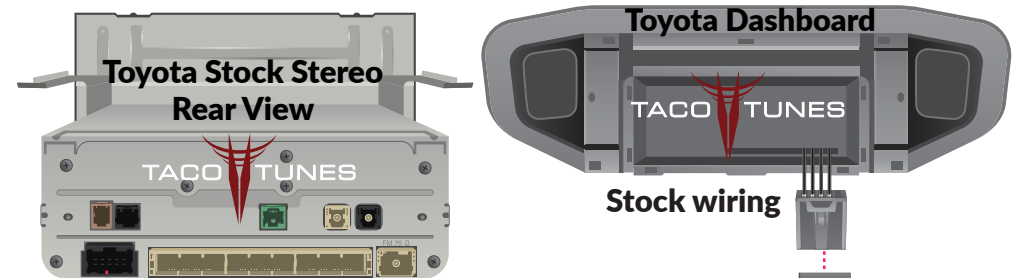

**Connect to
LOC/AMP/ POWERED SUB
(where applicable)**

17 Feet

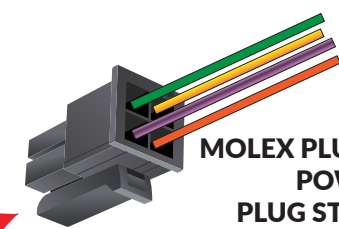

**MOLEX PLUG INCLUDED WITH
POWERED SUB.
PLUG STYLES WILL VARY.**

Molex plug wire colors will vary.
Connect purple/black (-) to Left negative
Connect purple (+) to Left positive



**High level input amp setting
(where applicable)**


**Power
(from battery)**

Ground

TACO TUNES

How to add a powered sub to stock stereo using

tacotunes Add a Subwoofer Harness **HIGH LEVEL INPUT WITH** **RCA ADAPTER**

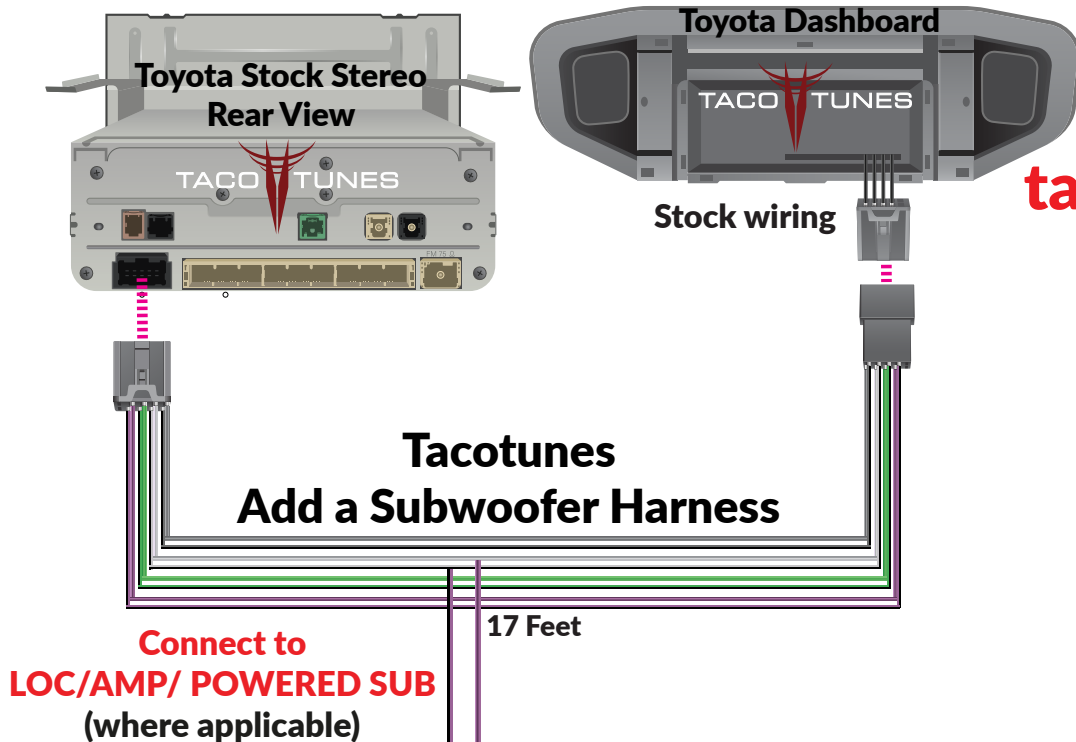

Connect harness to RCA adapter accordingly:

Purple (+) : Positive
Purple/Black (-) : Negative



RCA adapters available on our website



Power
(from battery)

Ground

How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness. **LOW LEVEL INPUT WITH AUDIO CONTROL LC2i PRO**

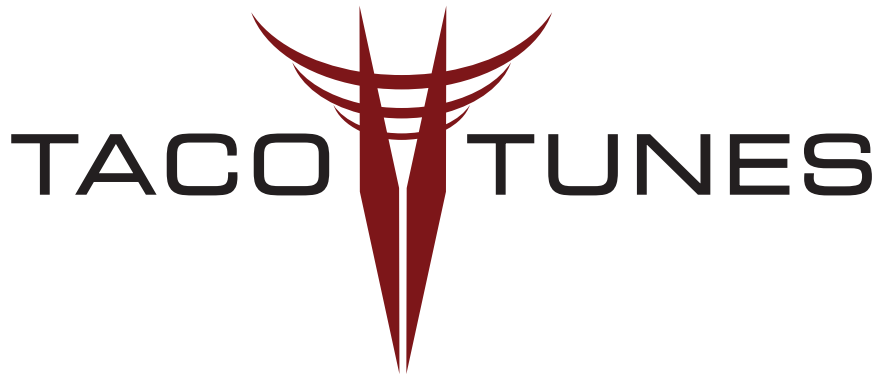
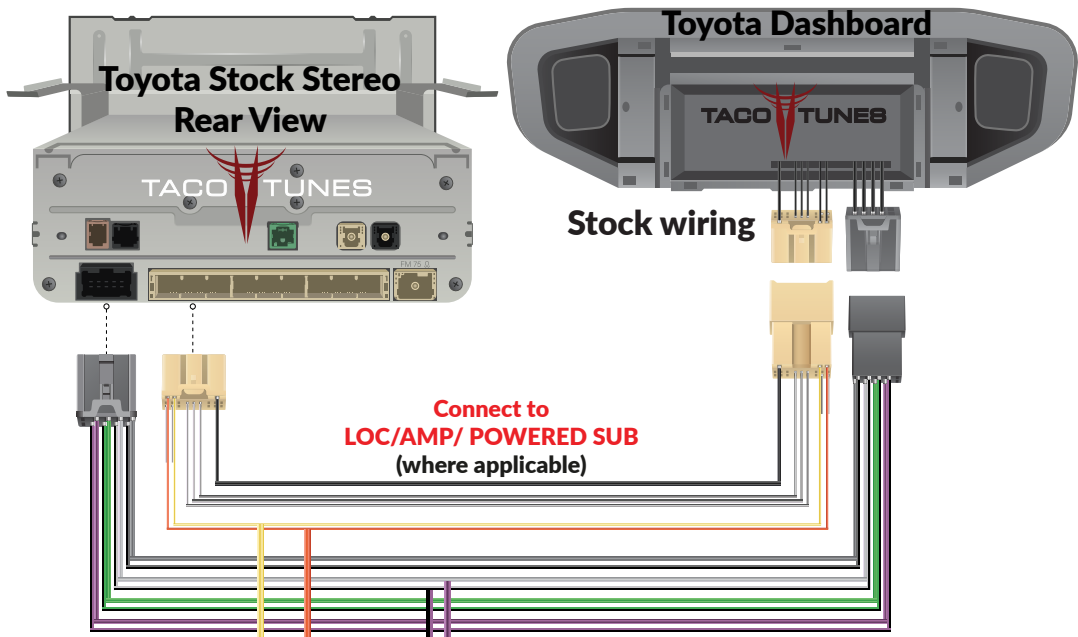


Power
(from battery)

Ground

How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness.

LOW LEVEL INPUT WITH POWERED 2 CHANNEL LOC

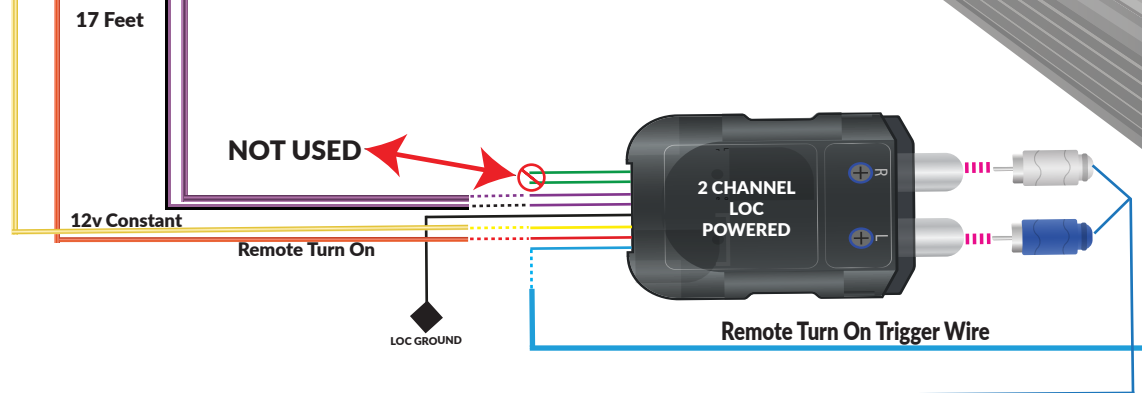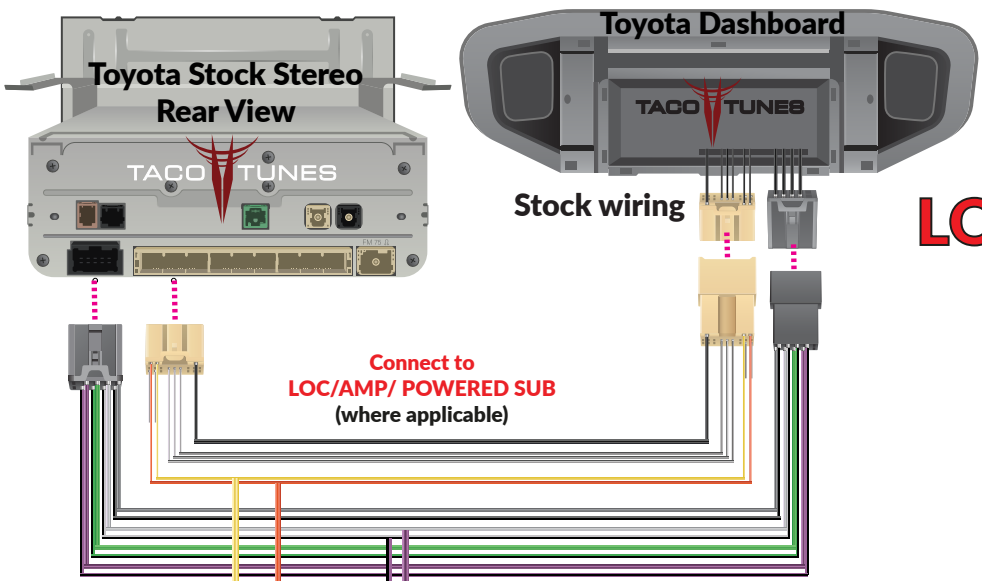



POWER (FROM BATTERY)

Ground



How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness.

LOW LEVEL INPUT WITH 2 CHANNEL LOC

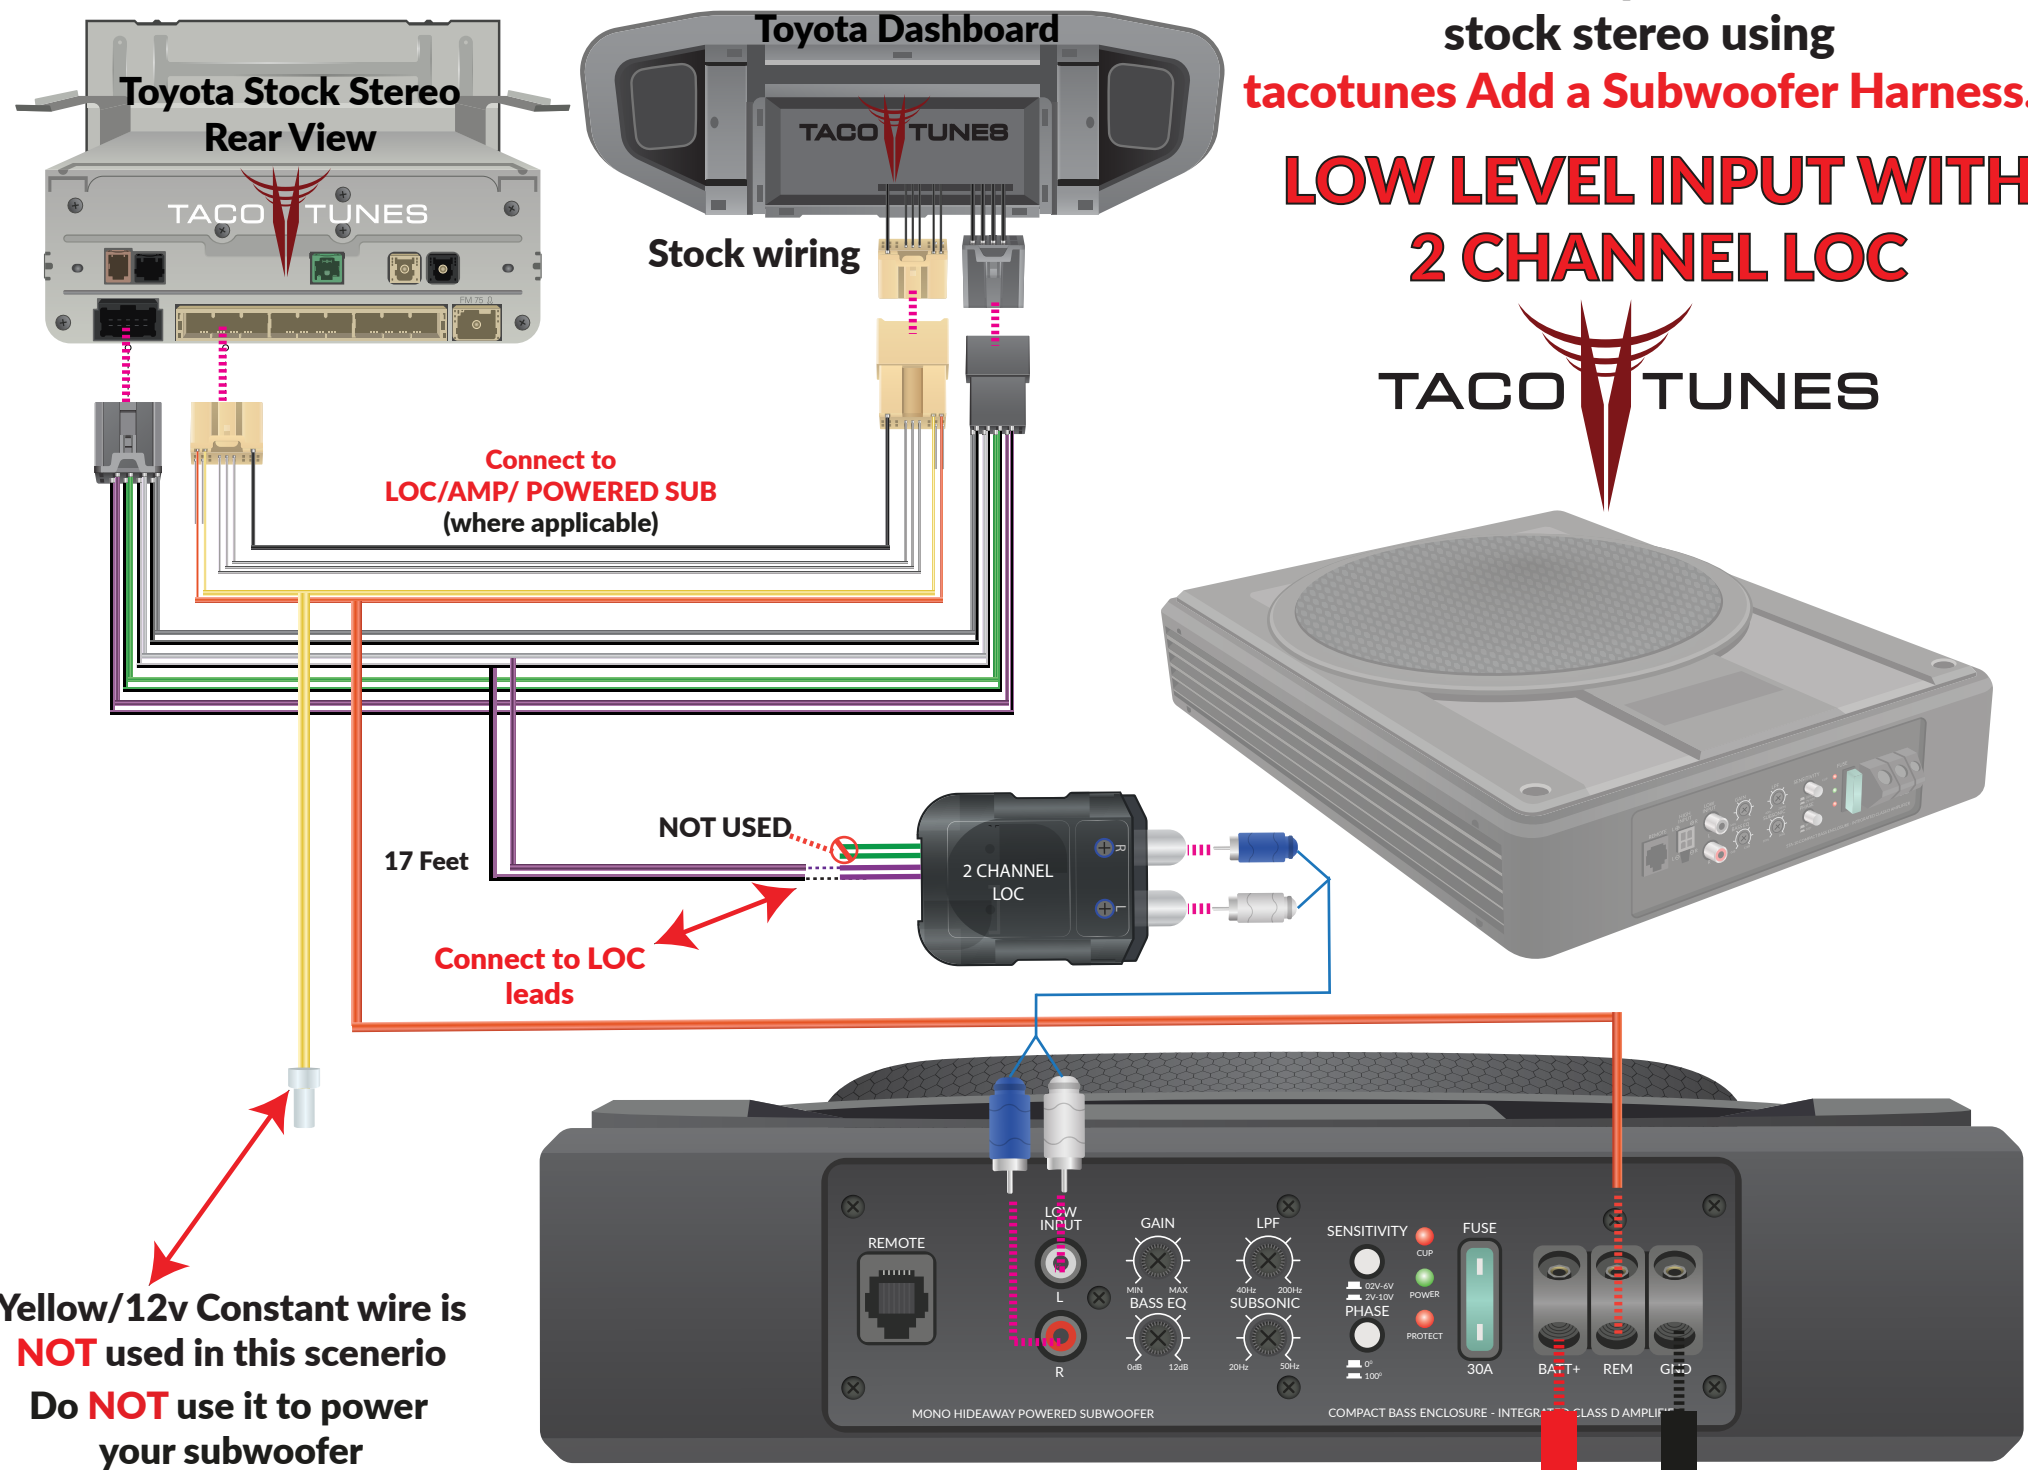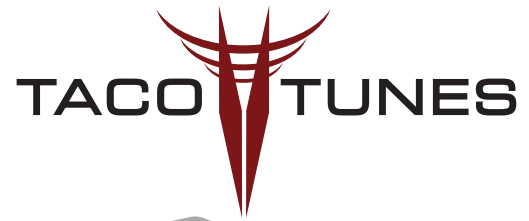

Yellow/12v Constant wire is **NOT** used in this scenerio
Do **NOT** use it to power your subwoofer

Power (from battery) Ground

Click here for notes on how to set up your powered sub and list of FAQ

Example Powered Subwoofer

