
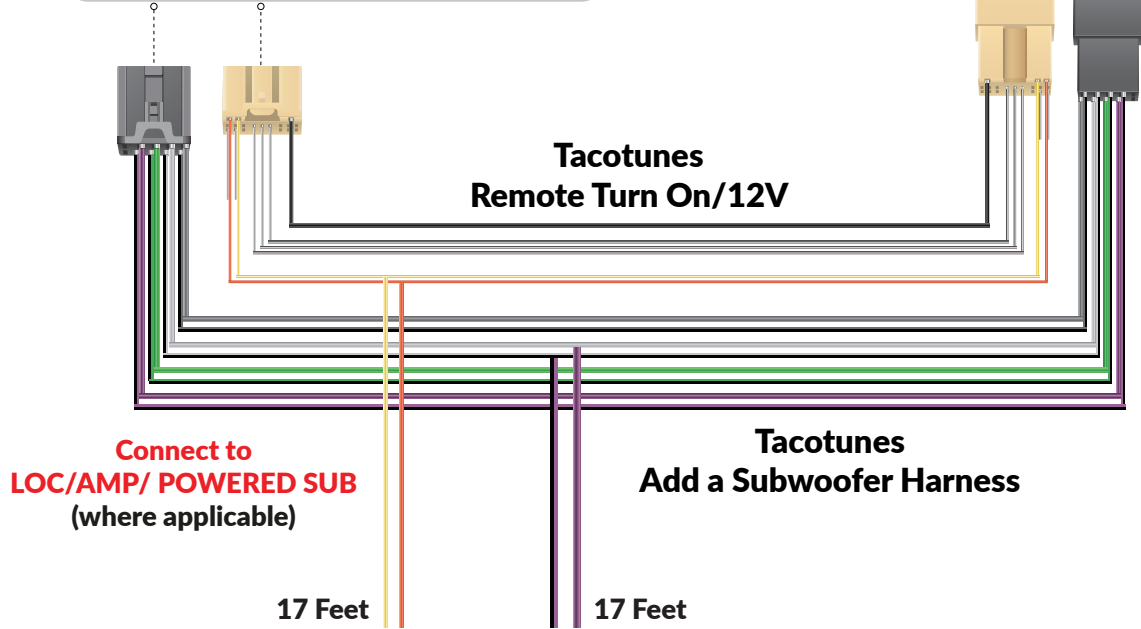


2020+ Toyota Prius

Add Subwoofer(s) to stock stereo - fast & easy!


- No cutting or splicing factory wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

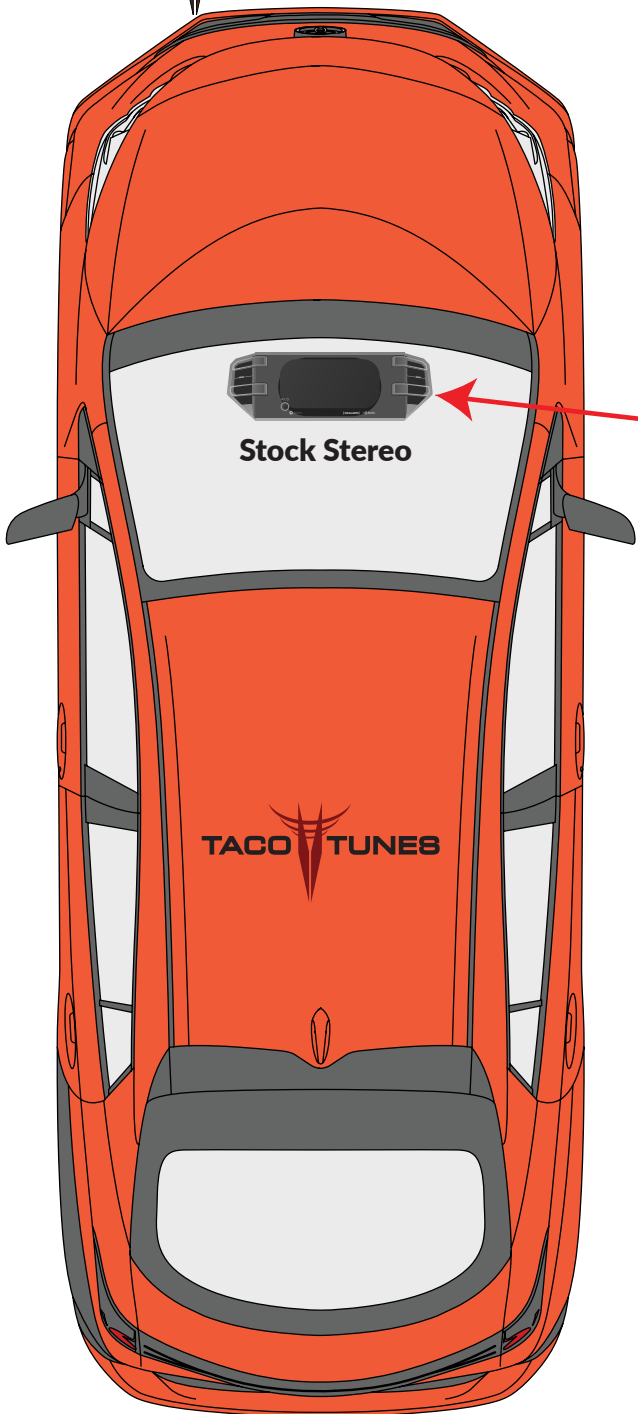

CLICK HERE
 Plug & Play Harnesses


How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness

HIGH LEVEL INPUT WITH MOLEX PLUG

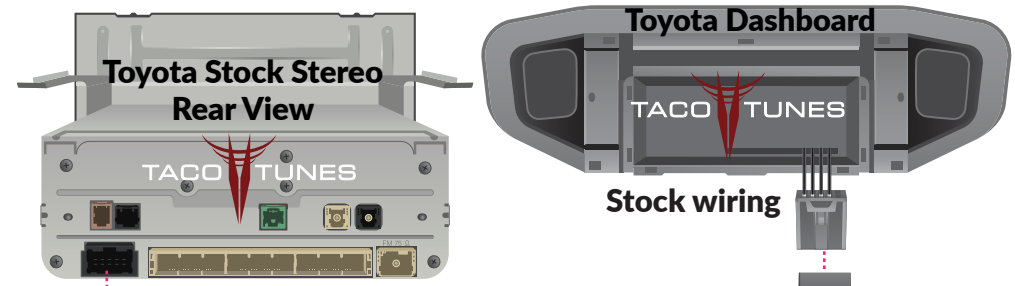

Connect to LOC/AMP/ POWERED SUB (where applicable)

17 Feet

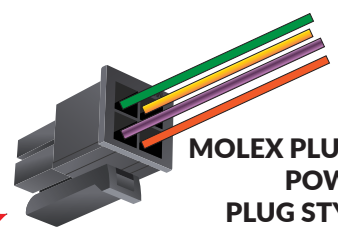

MOLEX PLUG INCLUDED WITH POWERED SUB. PLUG STYLES WILL VARY.


Molex plug wire colors will vary. Connect purple/black (-) to Left negative. Connect purple (+) to Left positive



High level input amp setting (where applicable)


Power (from battery)

Ground

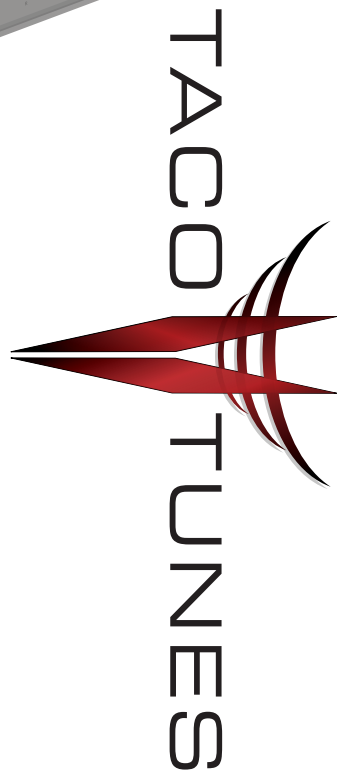

How to add a powered sub to stock stereo using


tacotunes Add a Subwoofer Harness **HIGH LEVEL INPUT WITH** **RCA ADAPTER**

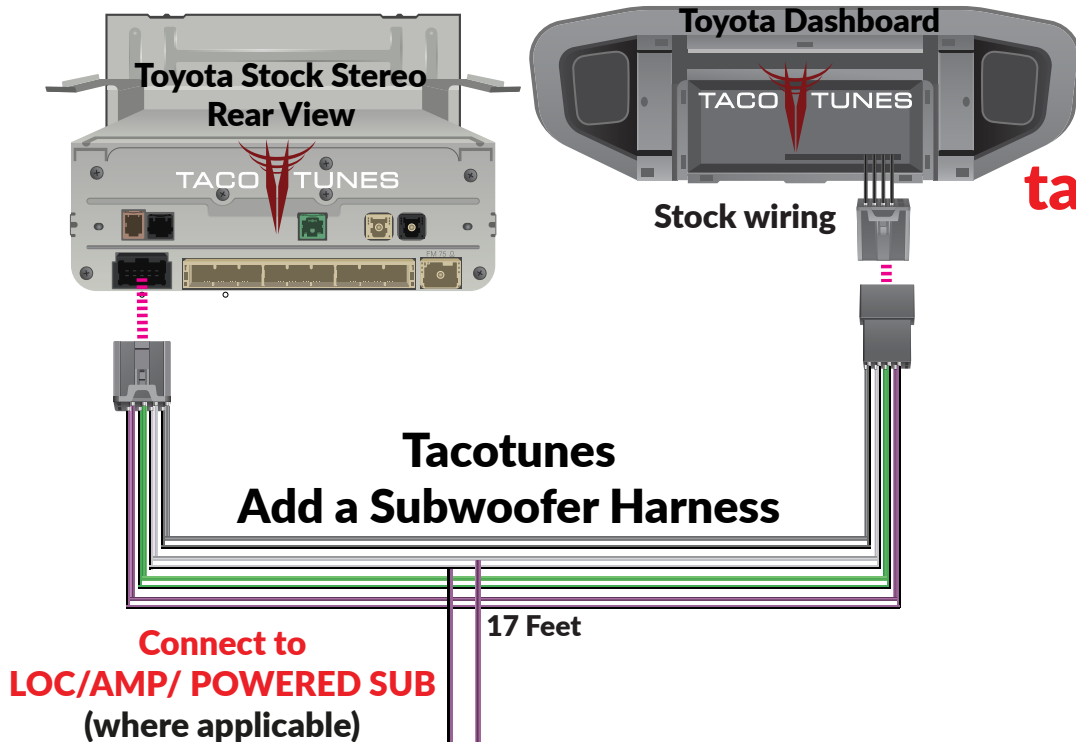

Connect harness to RCA adapter accordingly:

Purple (+) : Positive
Purple/Black (-) : Negative


RCA adapters available on our website

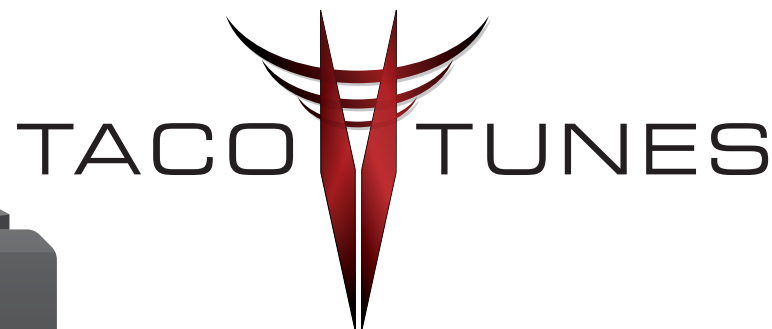

Power
(from battery)

Ground

How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness. **LOW LEVEL INPUT WITH AUDIO CONTROL LC2i PRO**


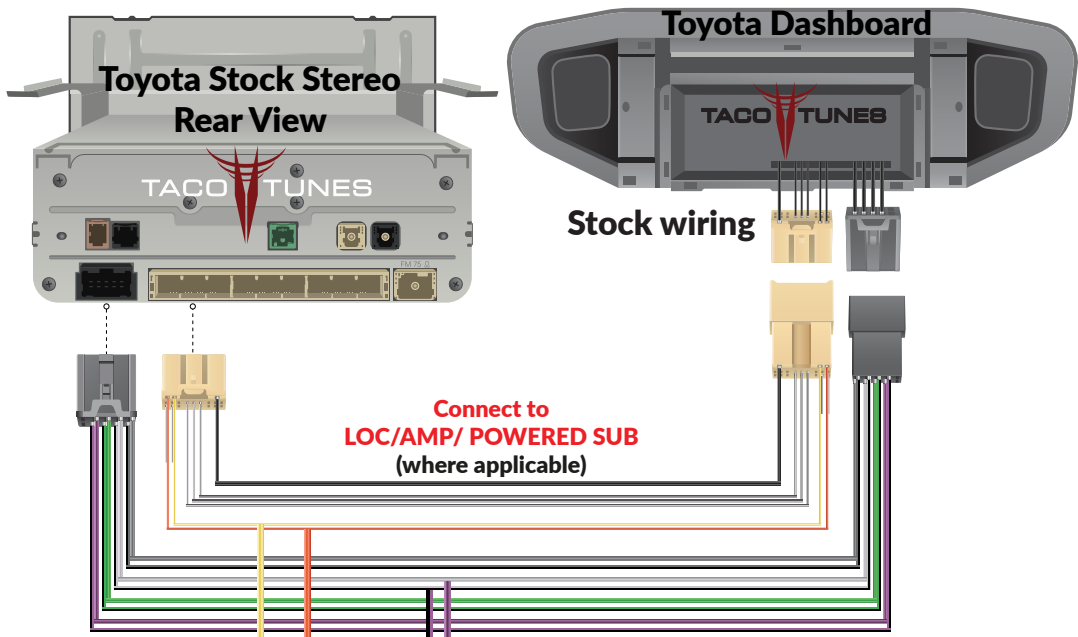


Power
(from battery)

Ground

How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness.

LOW LEVEL INPUT WITH POWERED 2 CHANNEL LOC

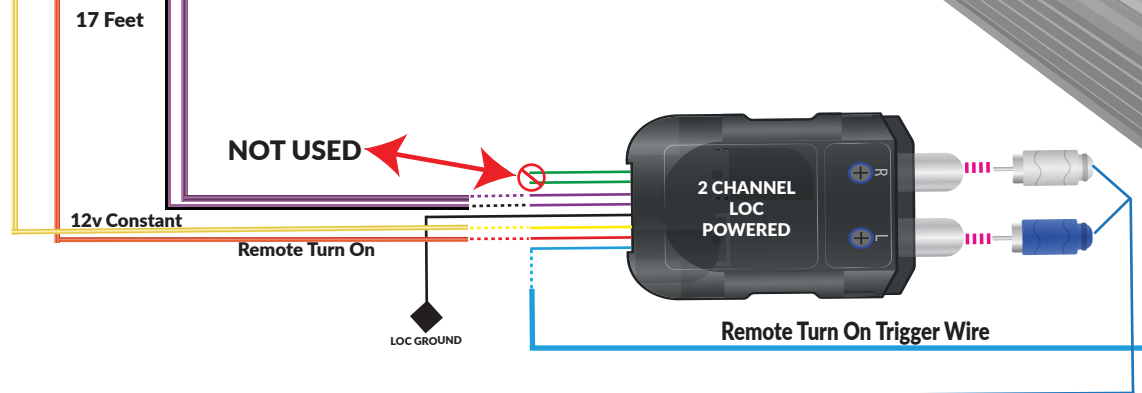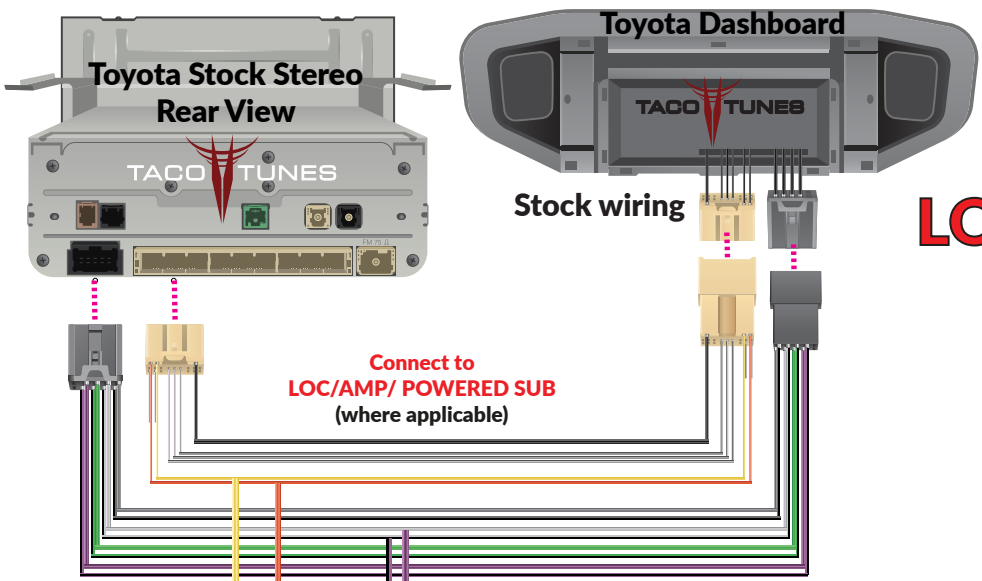


POWER (FROM BATTERY)

Ground



How to add a powered sub to stock stereo using tacotunes Add a Subwoofer Harness.

LOW LEVEL INPUT WITH 2 CHANNEL LOC

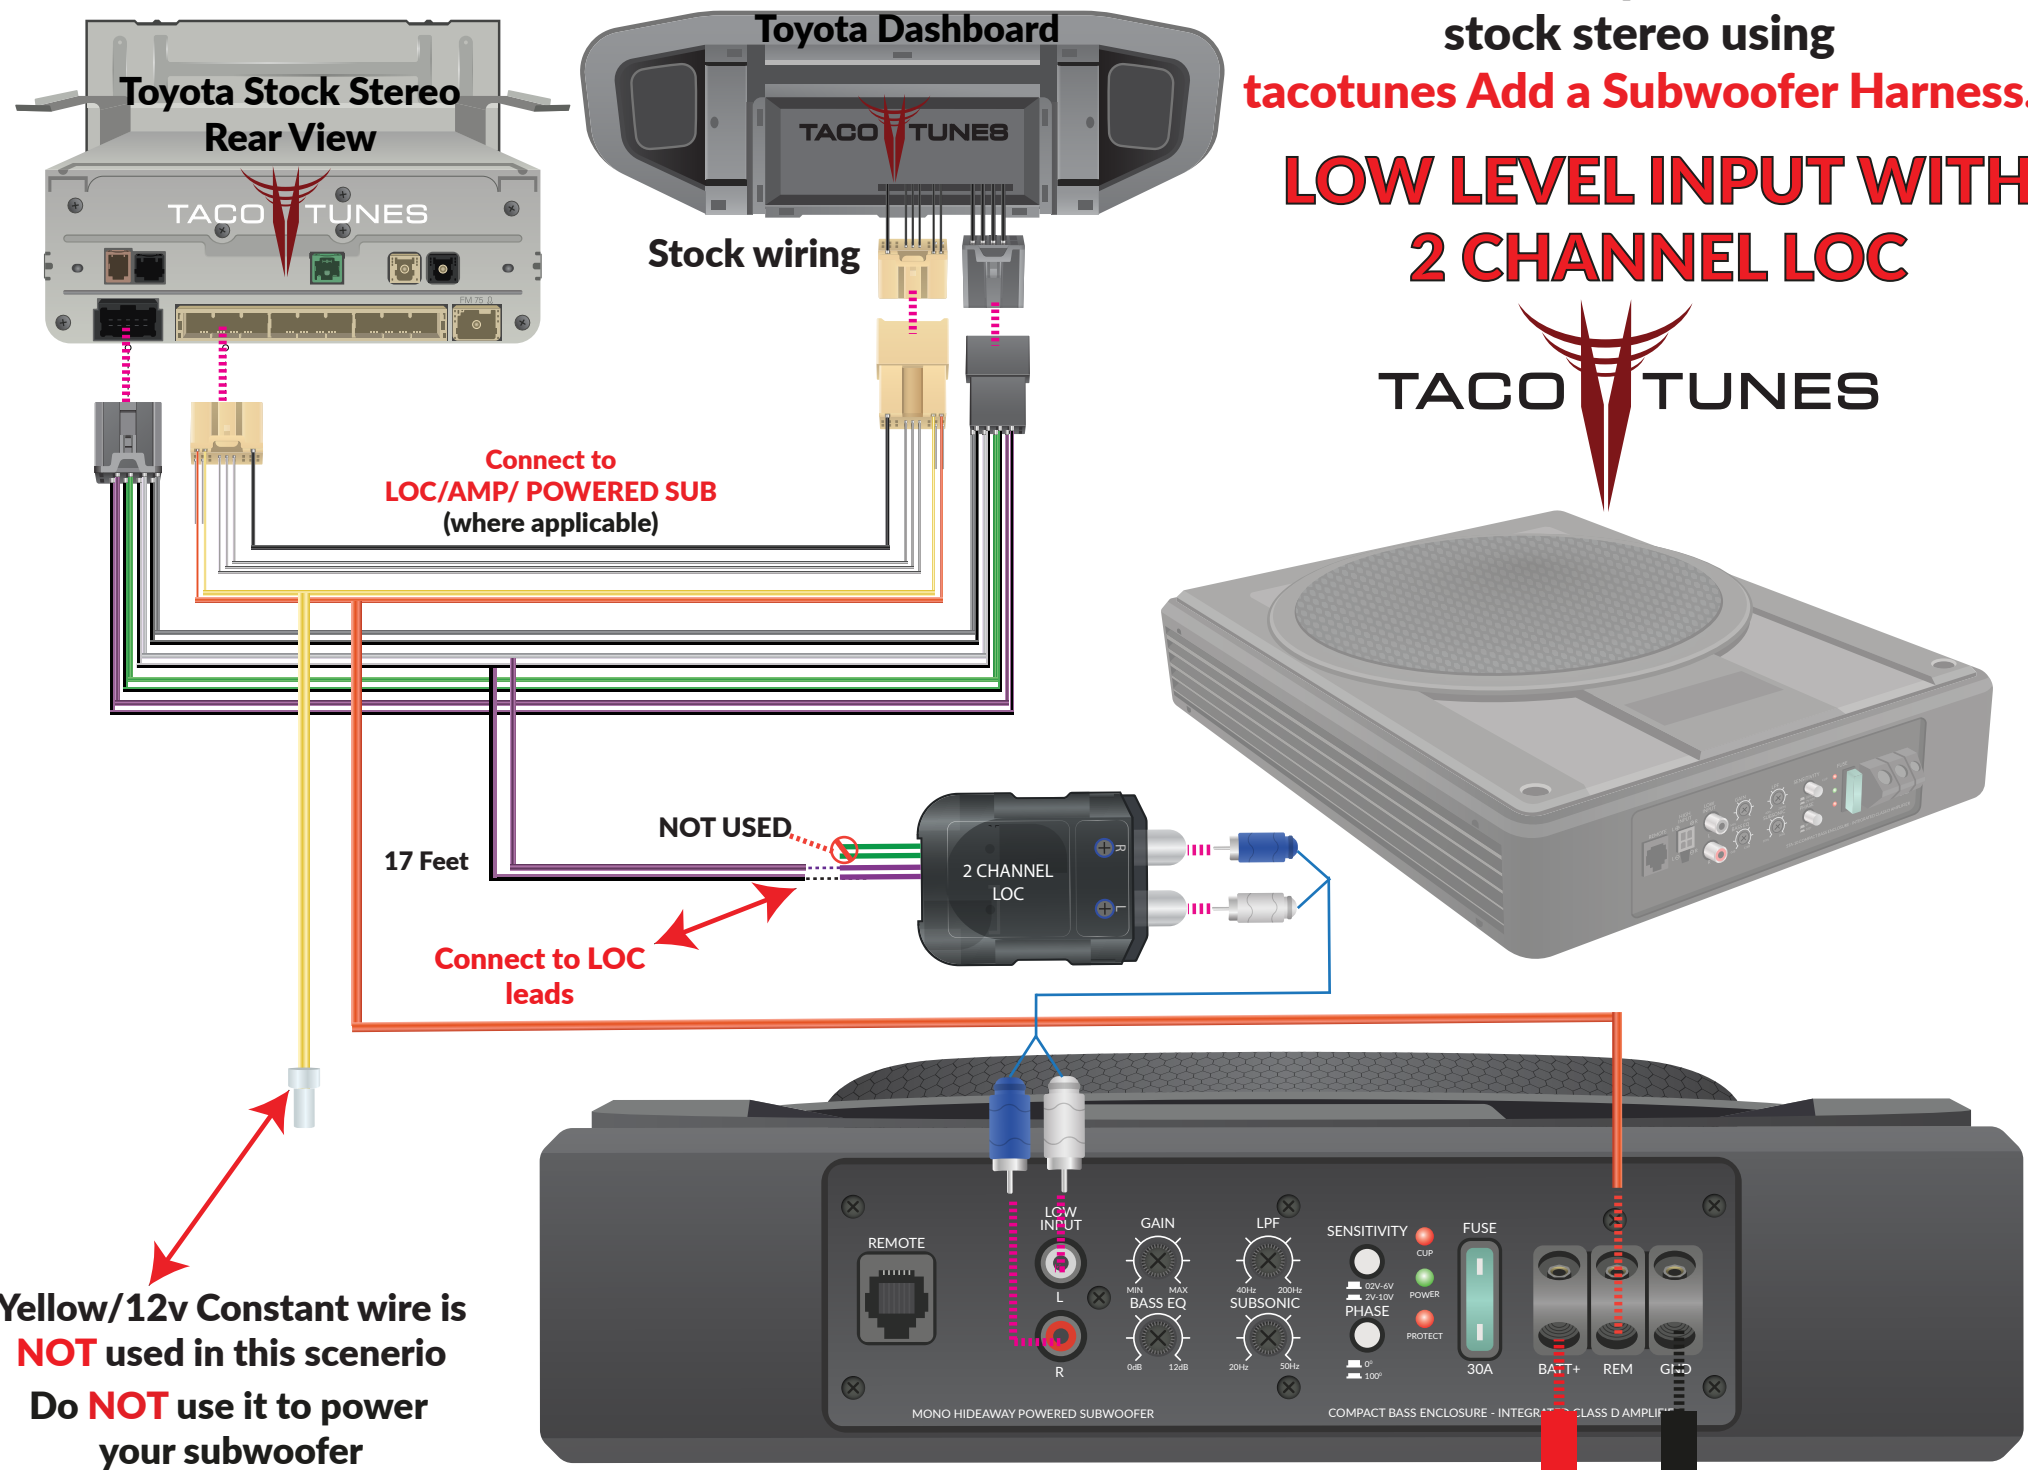

Yellow/12v Constant wire is **NOT** used in this scenerio
Do **NOT** use it to power your subwoofer

Power (from battery) Ground

Click here for notes on how to set up your powered sub and list of FAQ

Example Powered Subwoofer

