


# 2020+ Toyota 4Runner

Add amplifier(s) to stock stereo - fast & easy!


- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

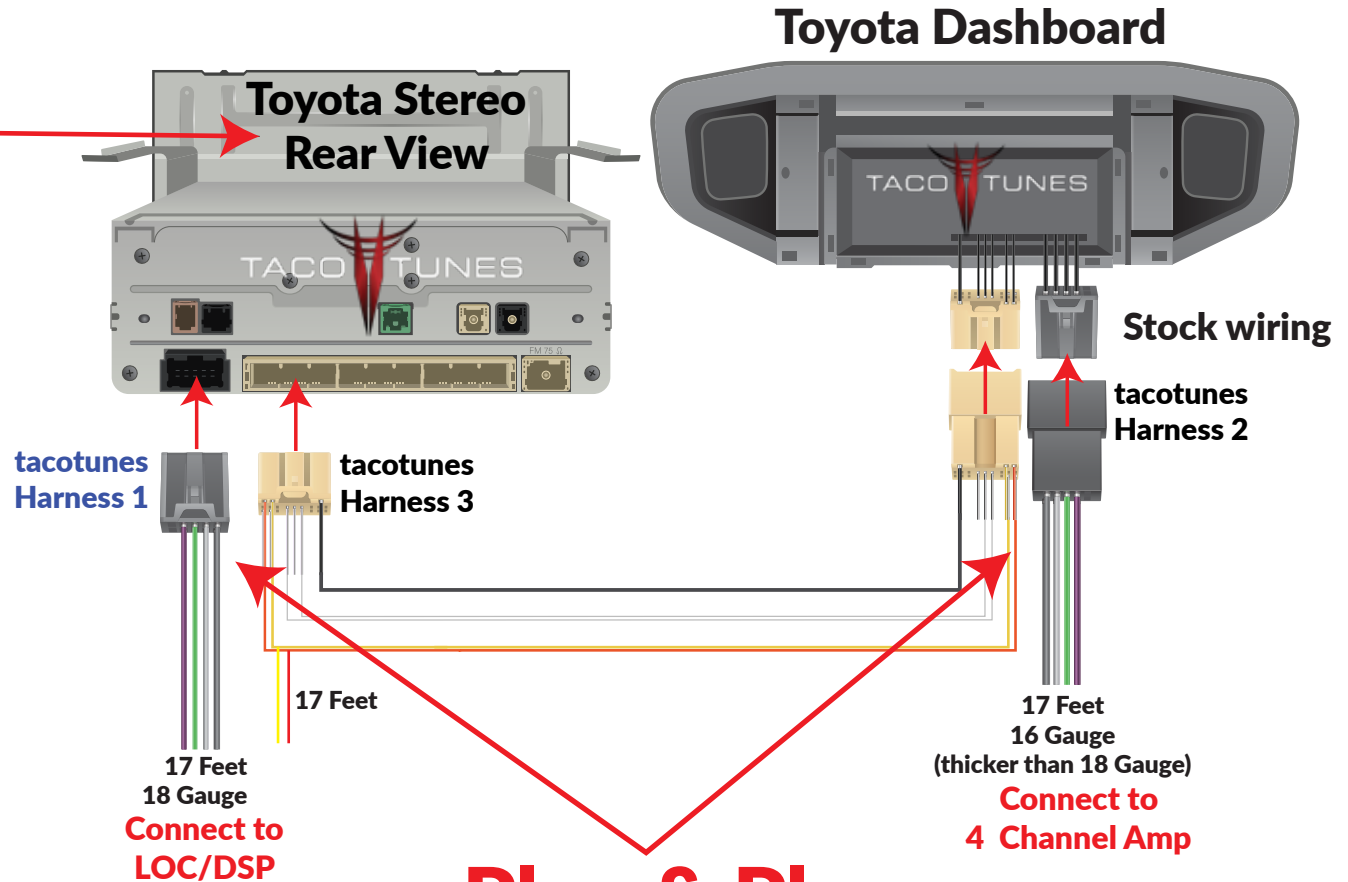


**Plug & Play  
Harnesses**



# How to connect tacotunes plug & play wiring to: tacotunes NTUNE6

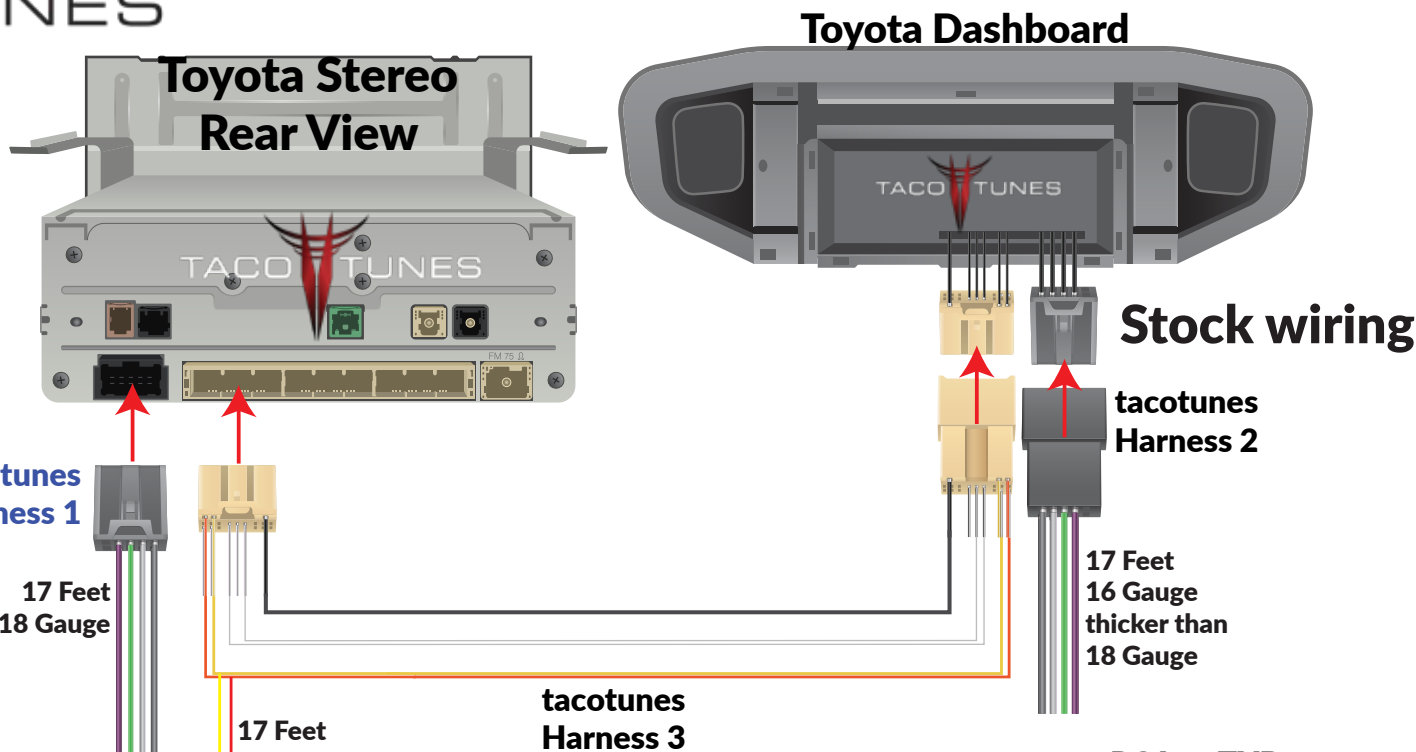




**Connect to NTUNE6  
(Color coded  
Installation)**

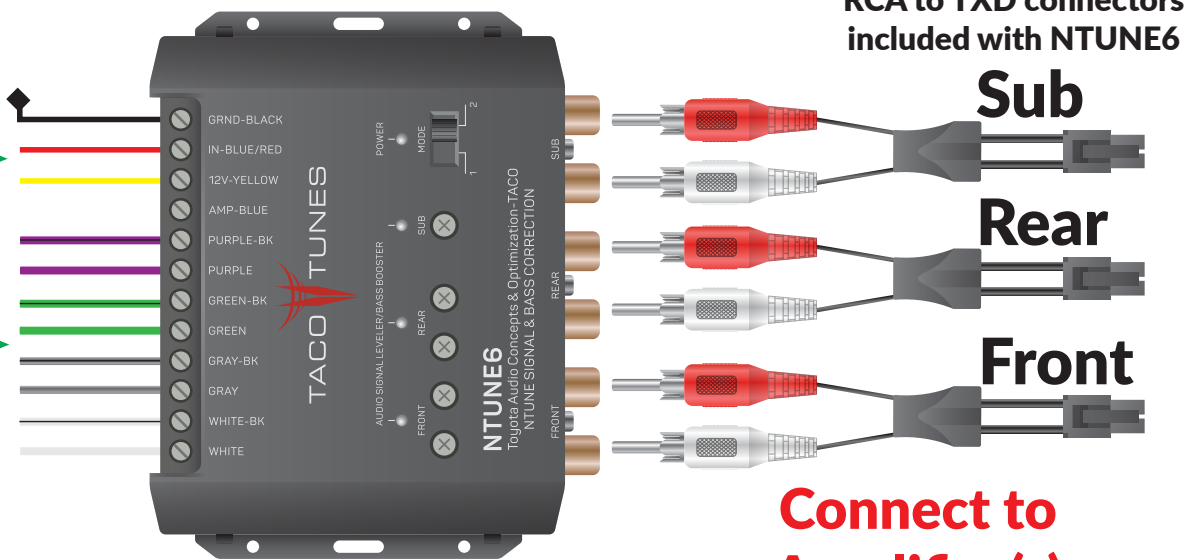

# How to connect tacotunes NTUNE6 to amplifiers




RCA to TXD Connectors, included with NTUNE6

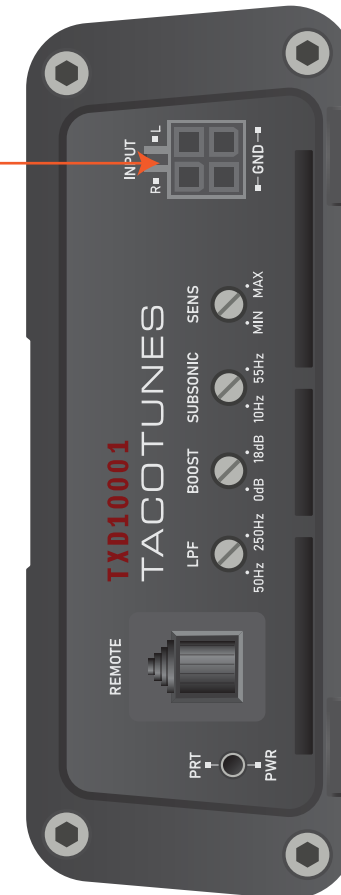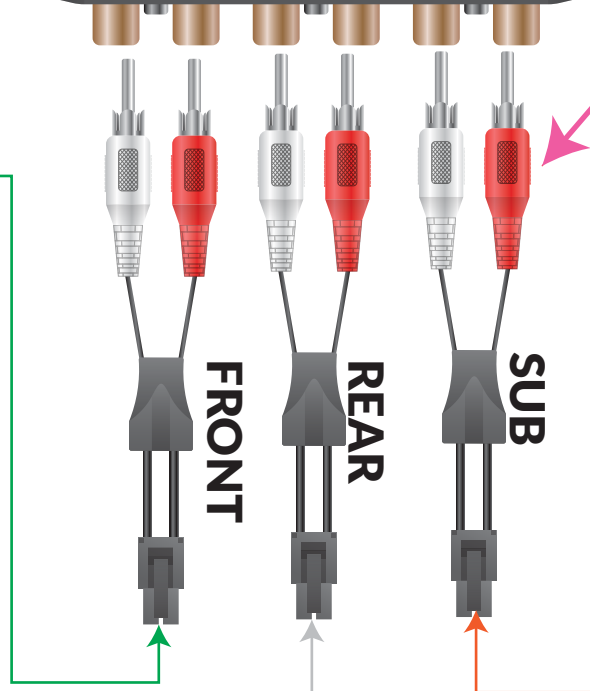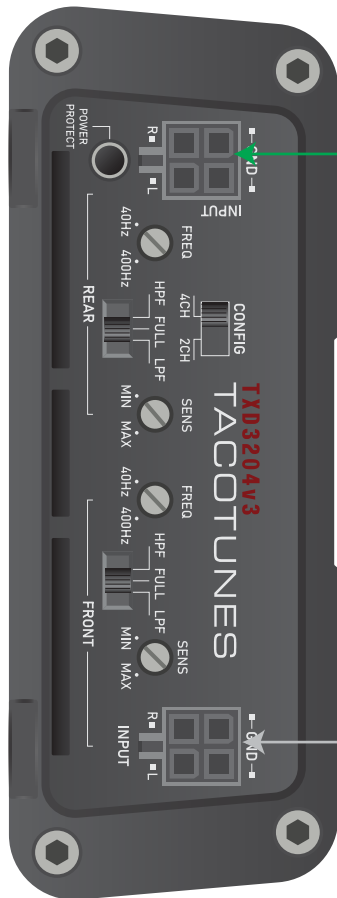


# 4 Channel & Subwoofer amplifier overview

TACOTUNES TXD 4 CHANNEL

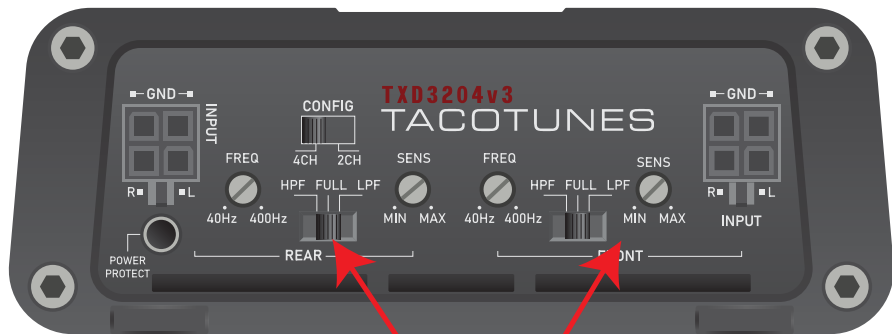

**Tuning/Configuration knobs & switches:**  
Check out our video(s) on how to properly adjust these settings.

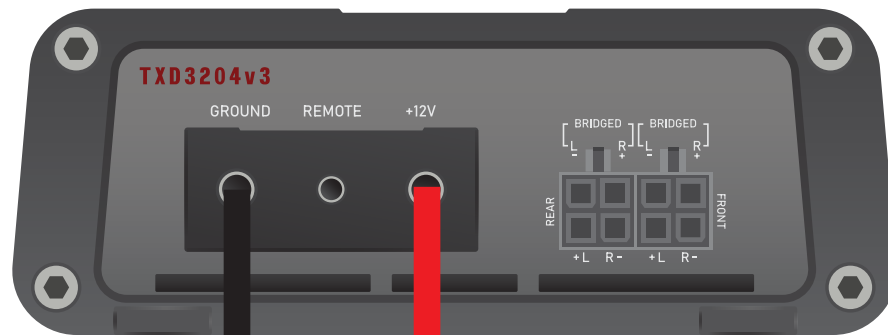


**Power Wire:**

We offer TXD Amp Kits designed for our TXD amps! Check out our website for more info.

Direct Connect Molex Plugs



TACOTUNES TXD SUBWOOFER AMP

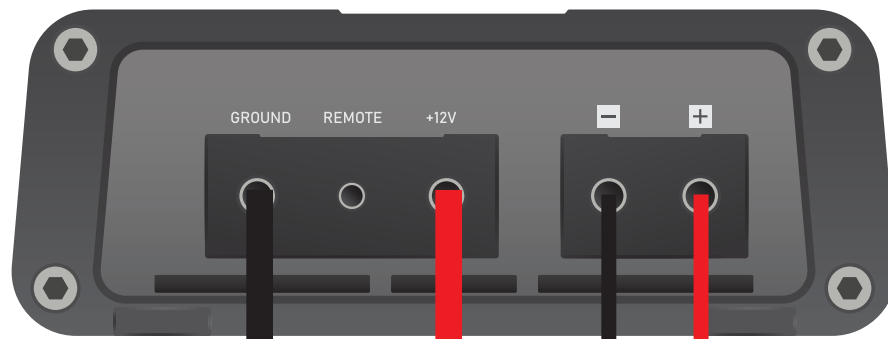

Subwoofer Output




[Link to YouTube Channel](#)

# 2020+ Toyota Prius

How to add tacotunes amplifiers to stock stereo using Ntune6.

Plug and Play, easy install,  
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

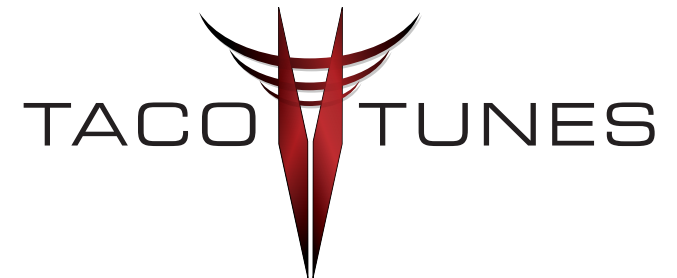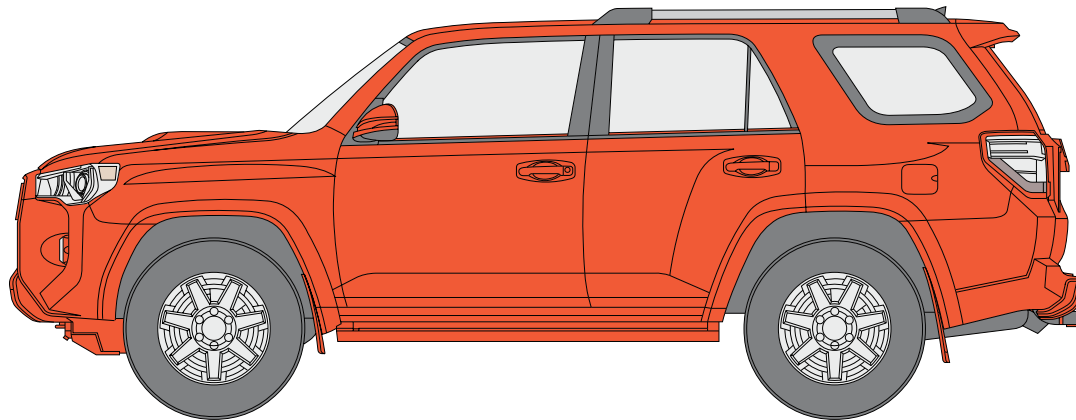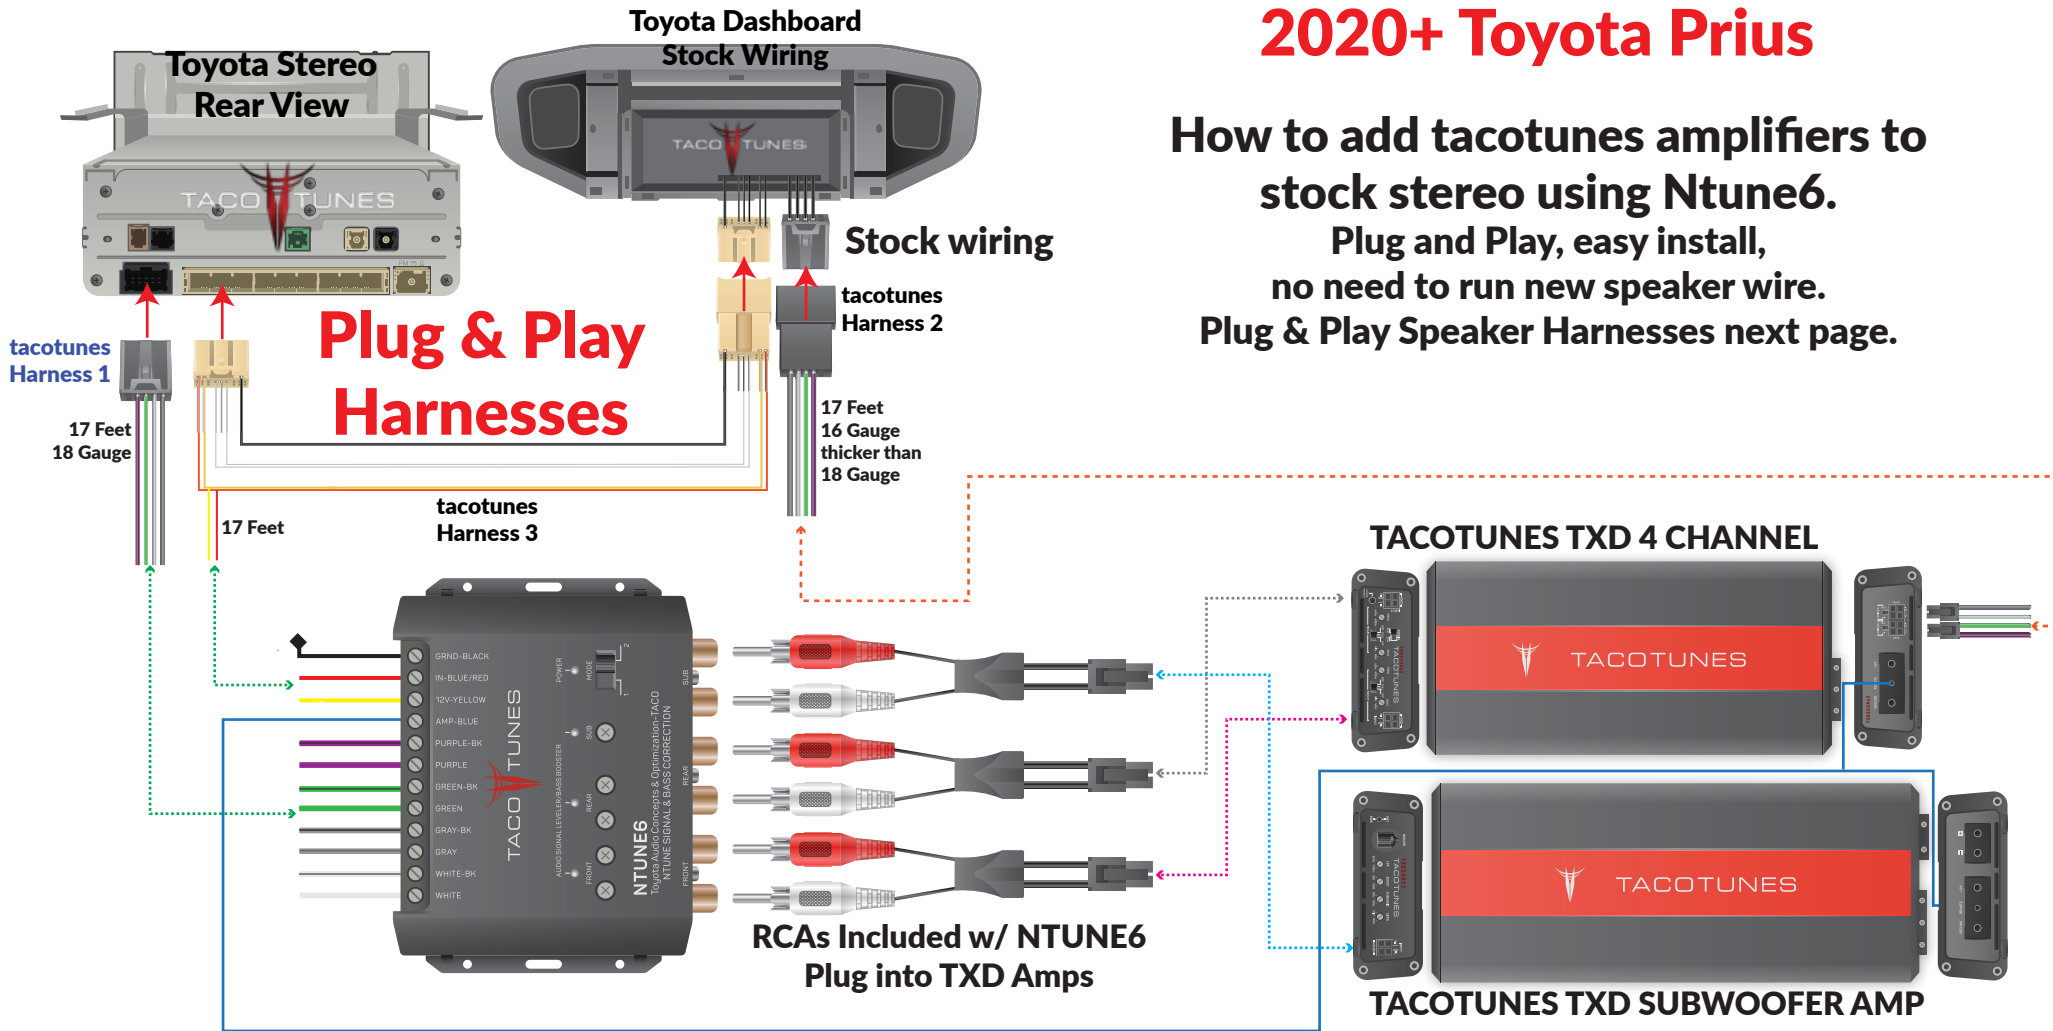


[CLICK HERE FOR HARNESSSES](#)

# 2020+ Toyota 4Runner


Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **4Runner!**

We will explain how your Toyota is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

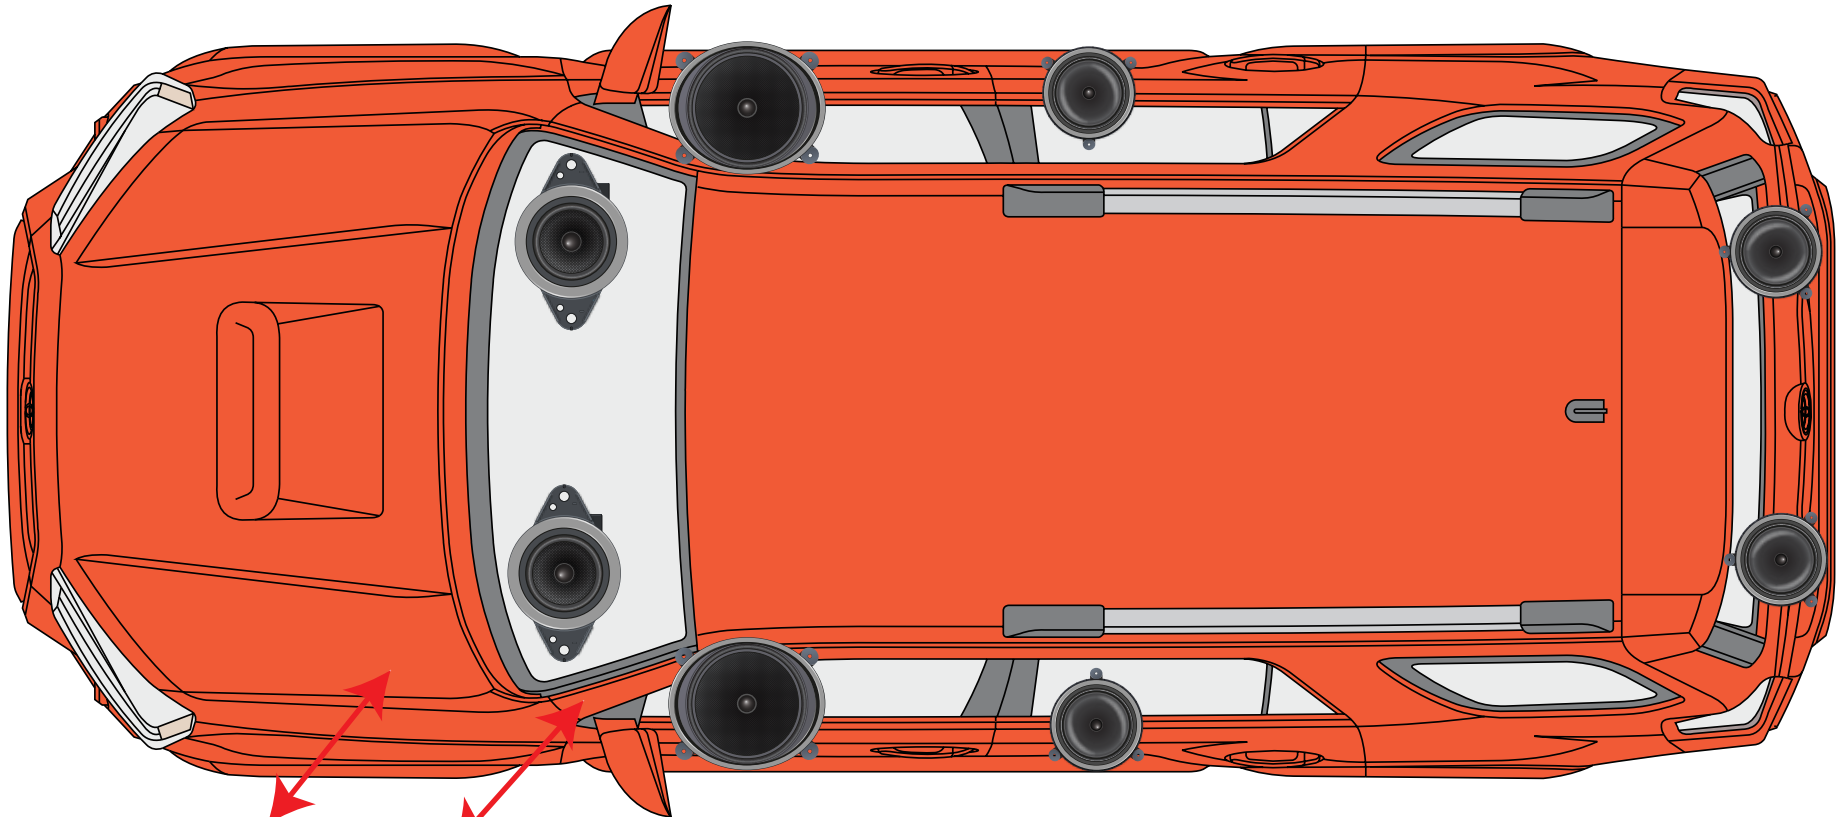

[CLICK HERE](#)  
HARNESS A1 HARNESS A2

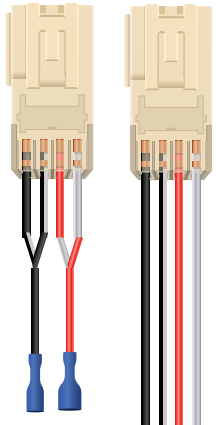

[CLICK HERE](#)  
HARNESS A1 HARNESS A2

