
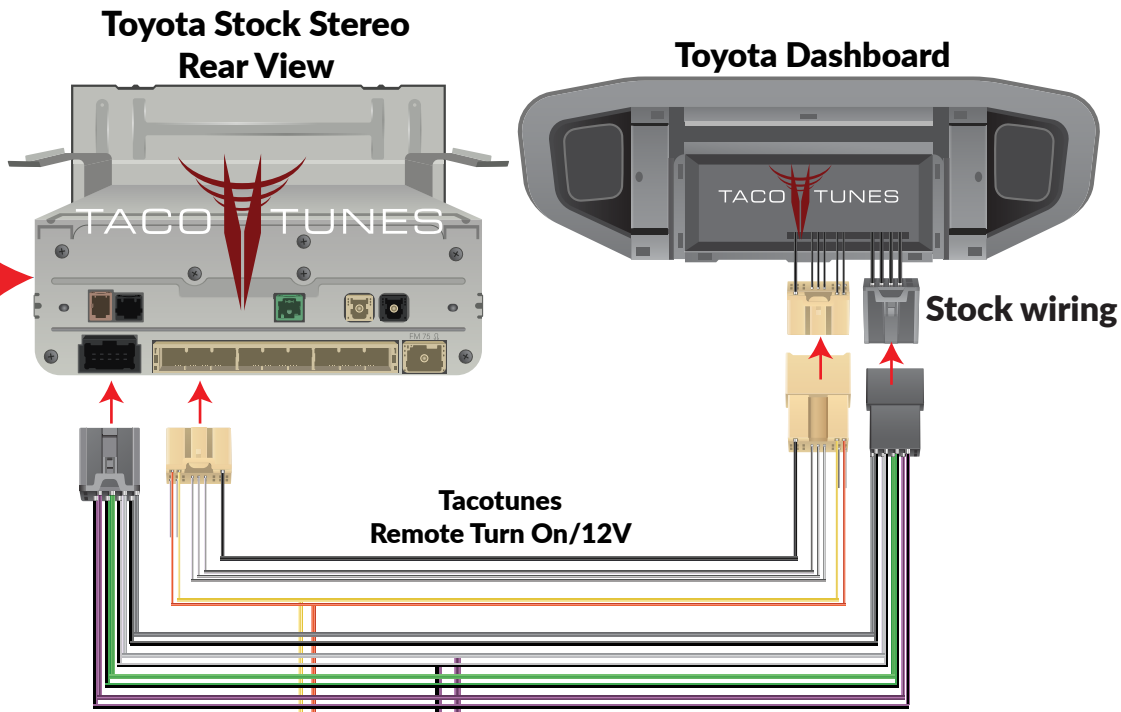


2020+ Toyota Highlander

Add Subwoofer(s) to stock stereo -
mono subwoofer amplifier installation diagrams.

- No cutting or splicing factory wires!
- Works with most amplifier brands.

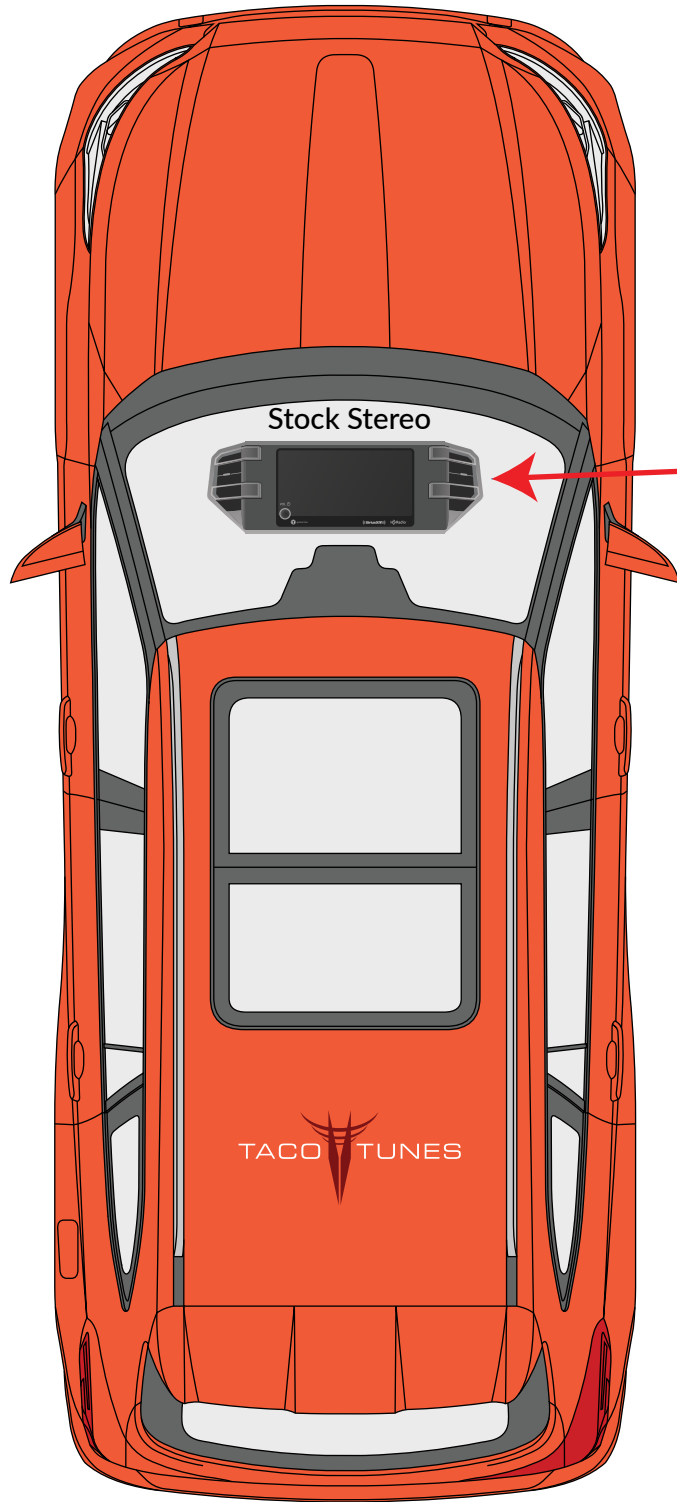


Connect to
LOC/AMP/ POWERED SUB
(where applicable)

17 Feet



Tacotunes
Add a Subwoofer Harness

TACO TUNES

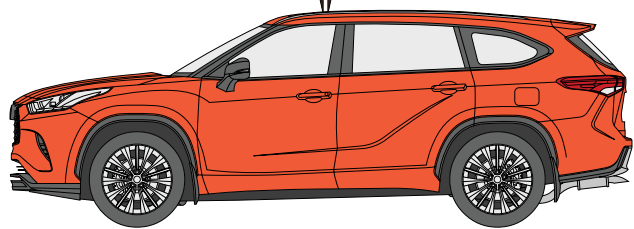

[CLICK HERE](#)
Plug & Play Harnesses

Example 1A:
Mono amp with high level input & autostart

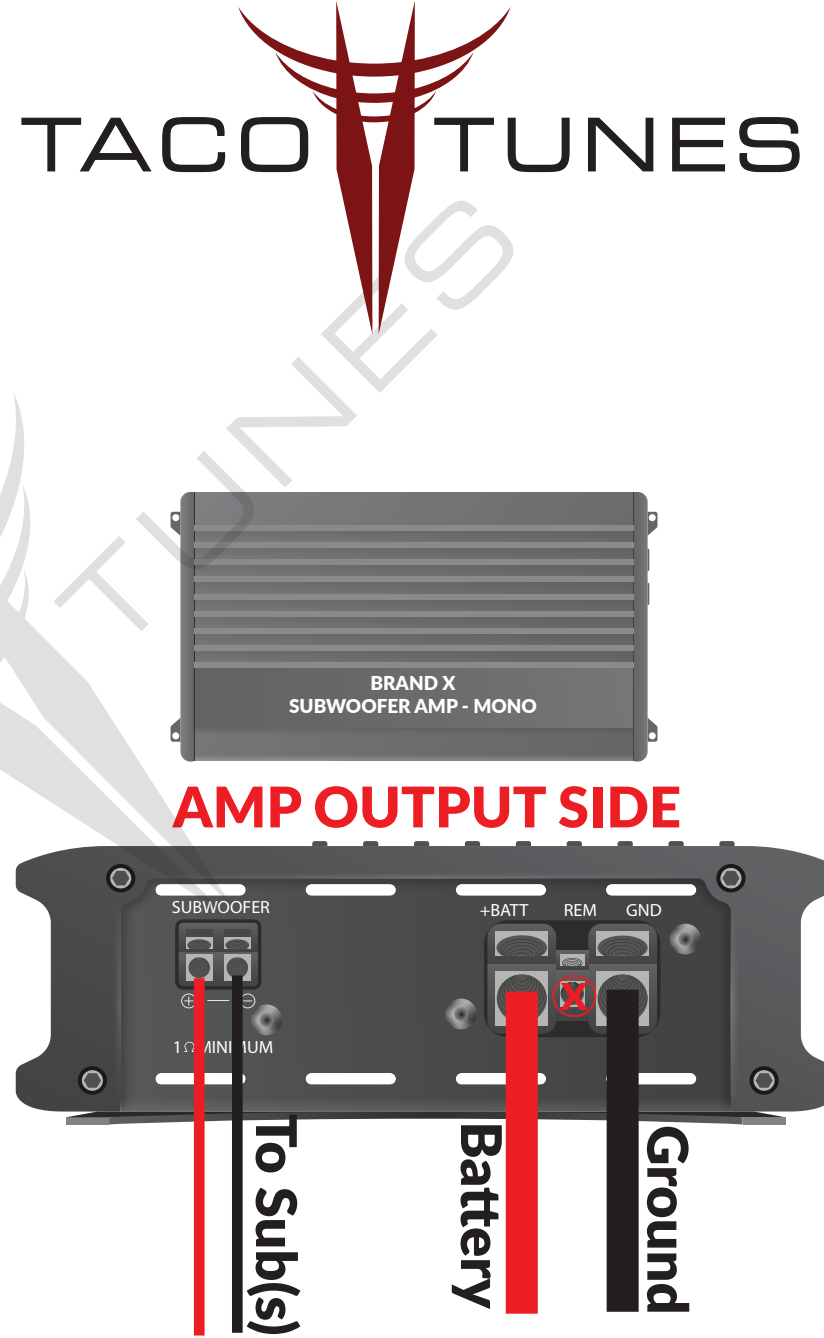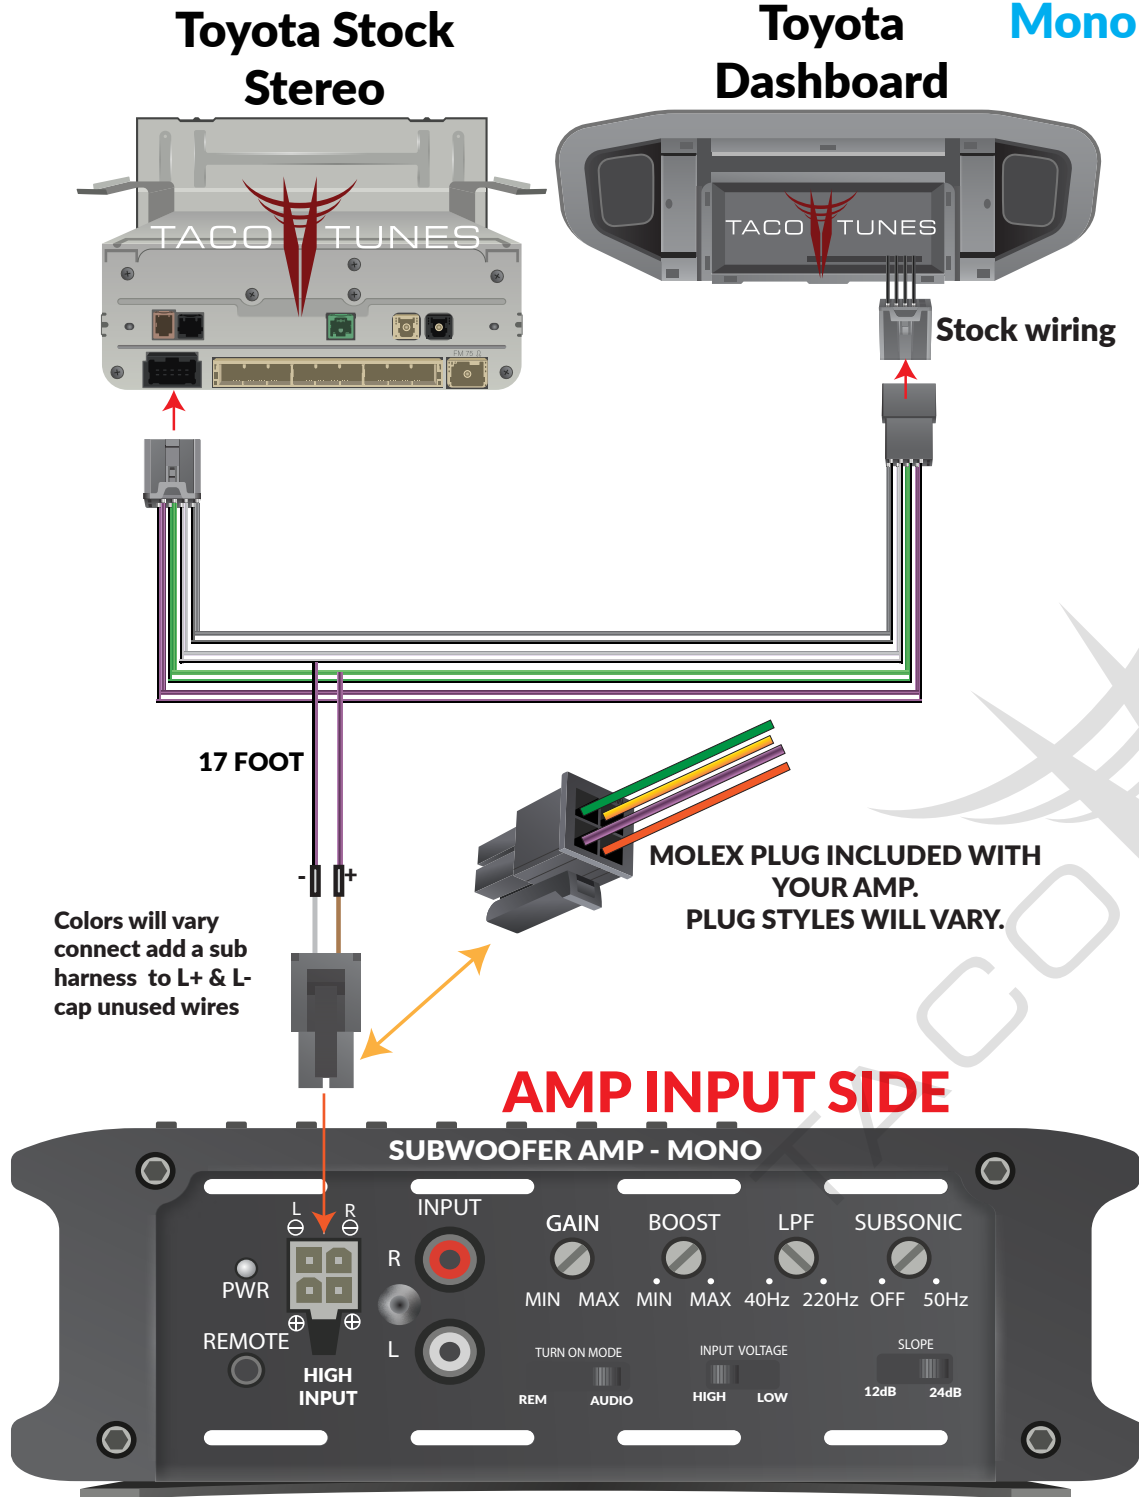


Example 1B:

Mono amp with high level input & autostart

Toyota Stock Stereo


Toyota Dashboard

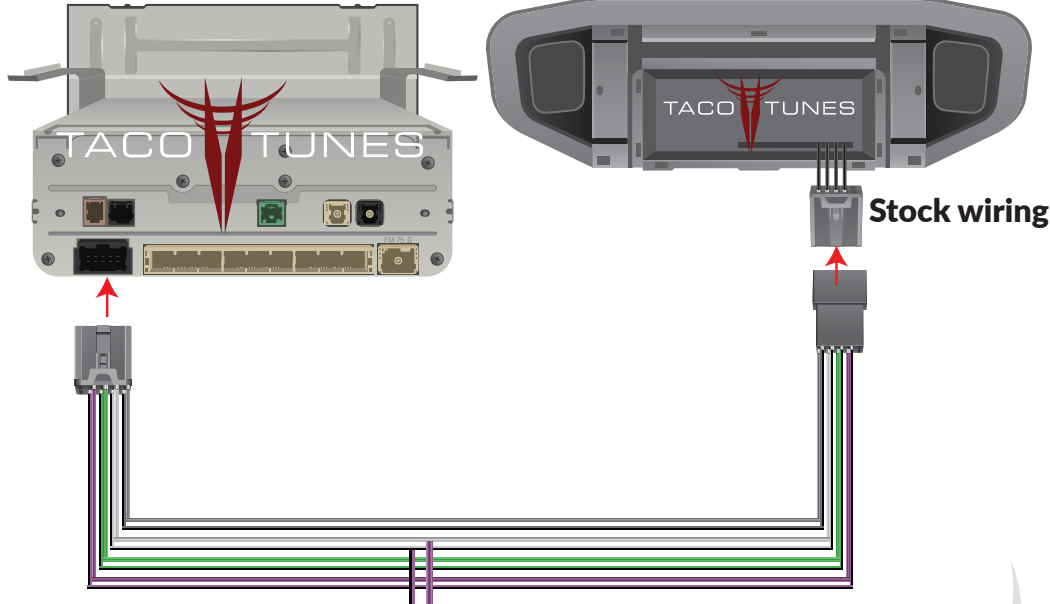


17 FOOT

High Level to RCA
Available on our website.

AMP INPUT SIDE

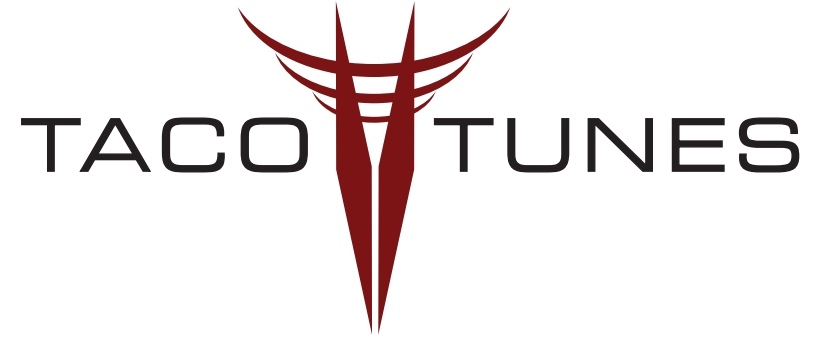


AMP OUTPUT SIDE

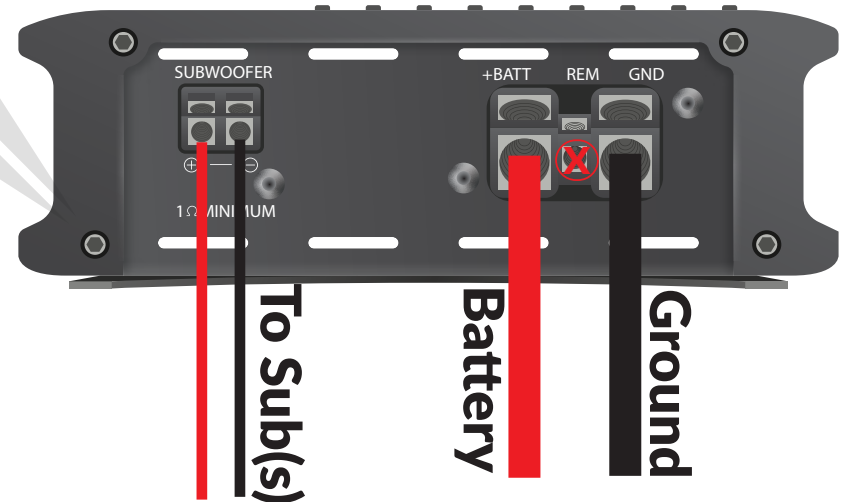


Toyota Stock Stereo Rear View

Toyota Dashboard


Example 2A: Mono amp with low level input Audio Control LC2i Pro

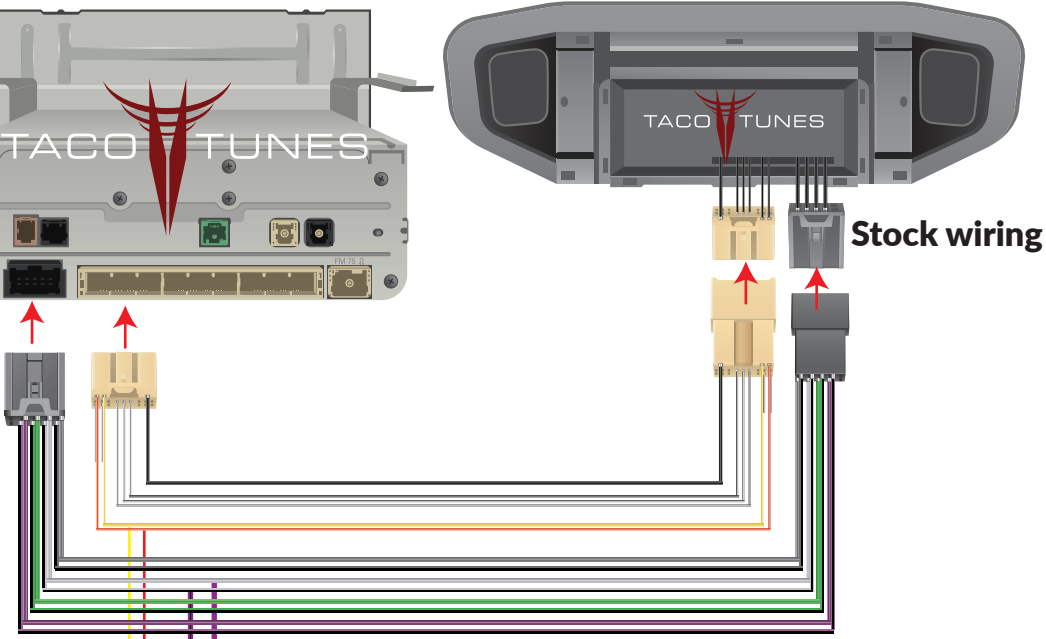

AMP OUTPUT SIDE

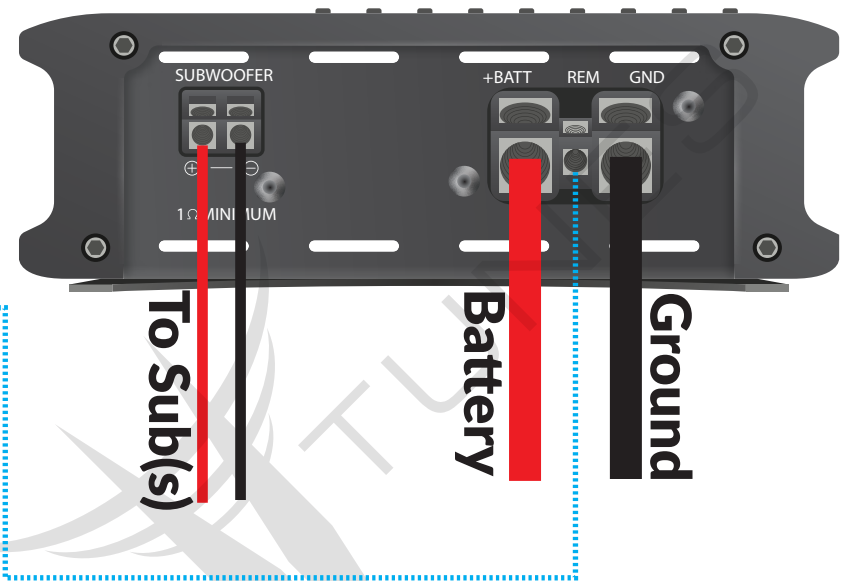



AMP INPUT SIDE

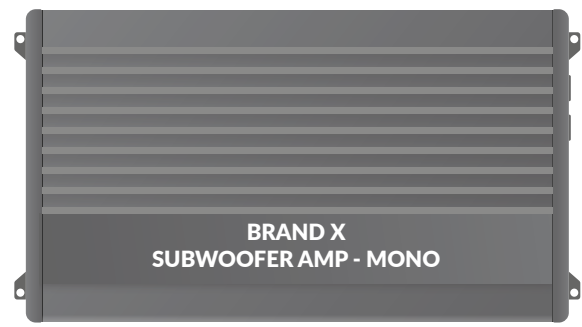



Toyota Stock Stereo Rear View

Toyota Dashboard

Example 2B: Mono amp with low level input Powered Line Out Converter (LOC)

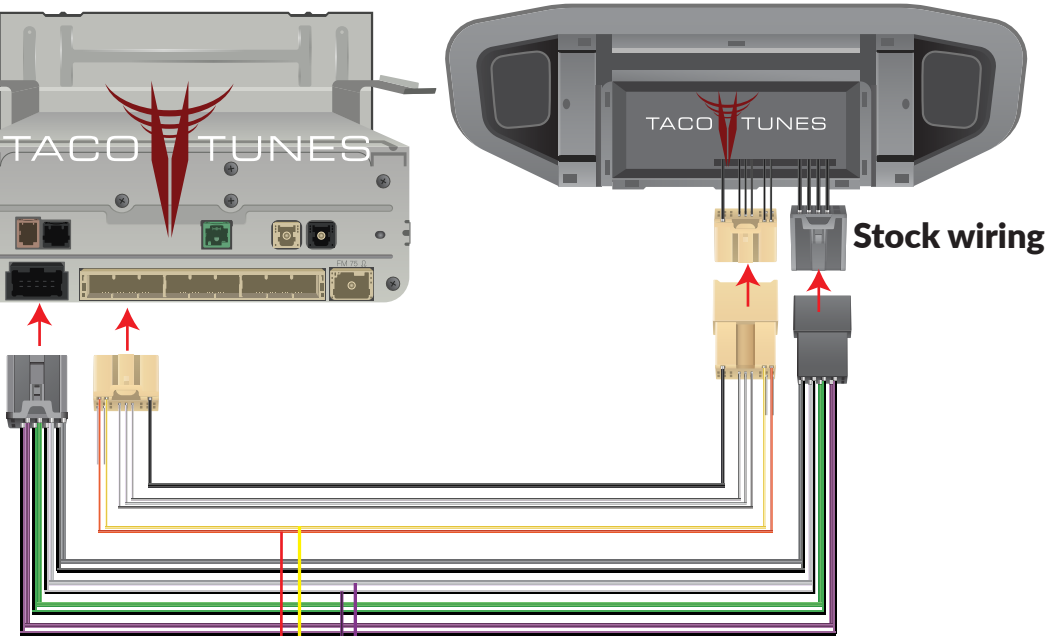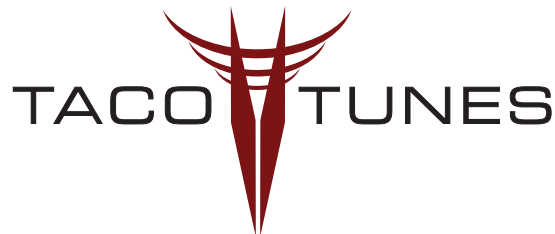


AMP OUTPUT SIDE

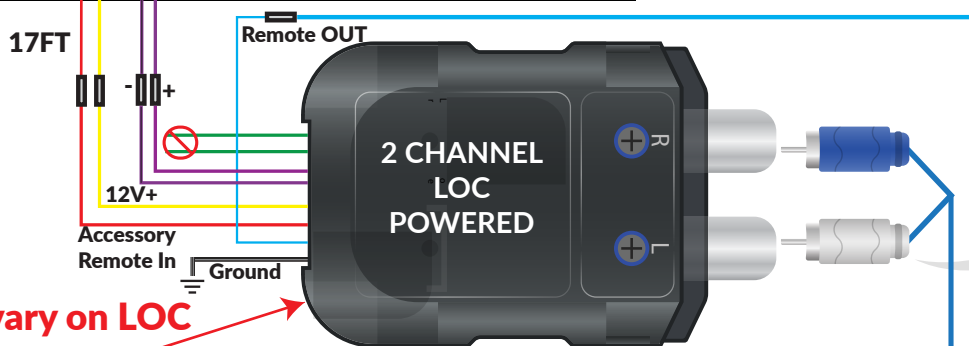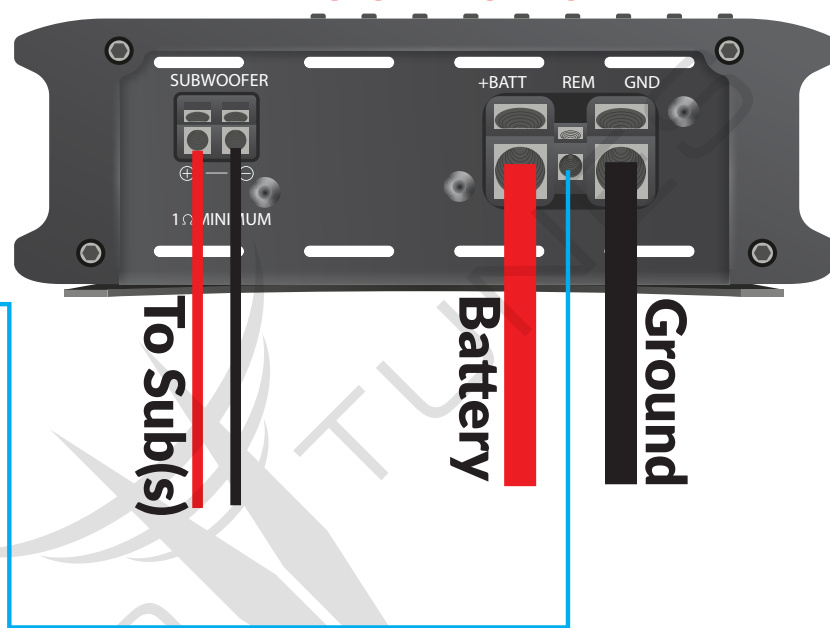

Colors may vary on LOC
Connect purple wires from harness to L+ & L-.


AMP INPUT SIDE

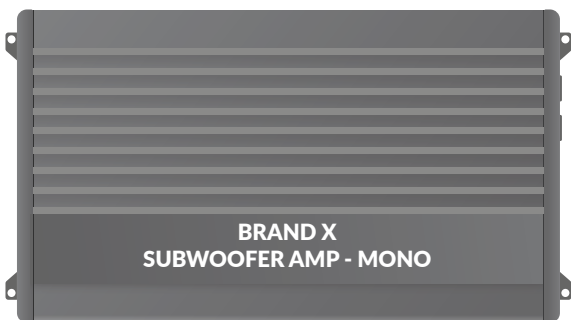

Example Subwoofer amplifier.

[Click here for notes on how to setup your amplifier and a list of FAQ.](#)

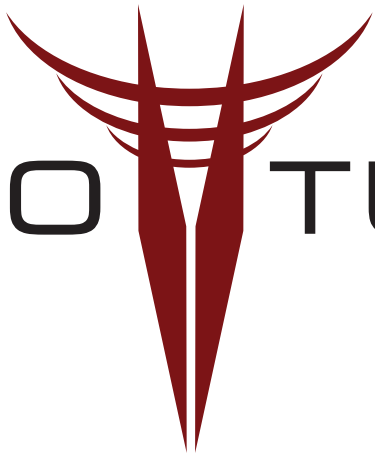

TACO  TUNES