
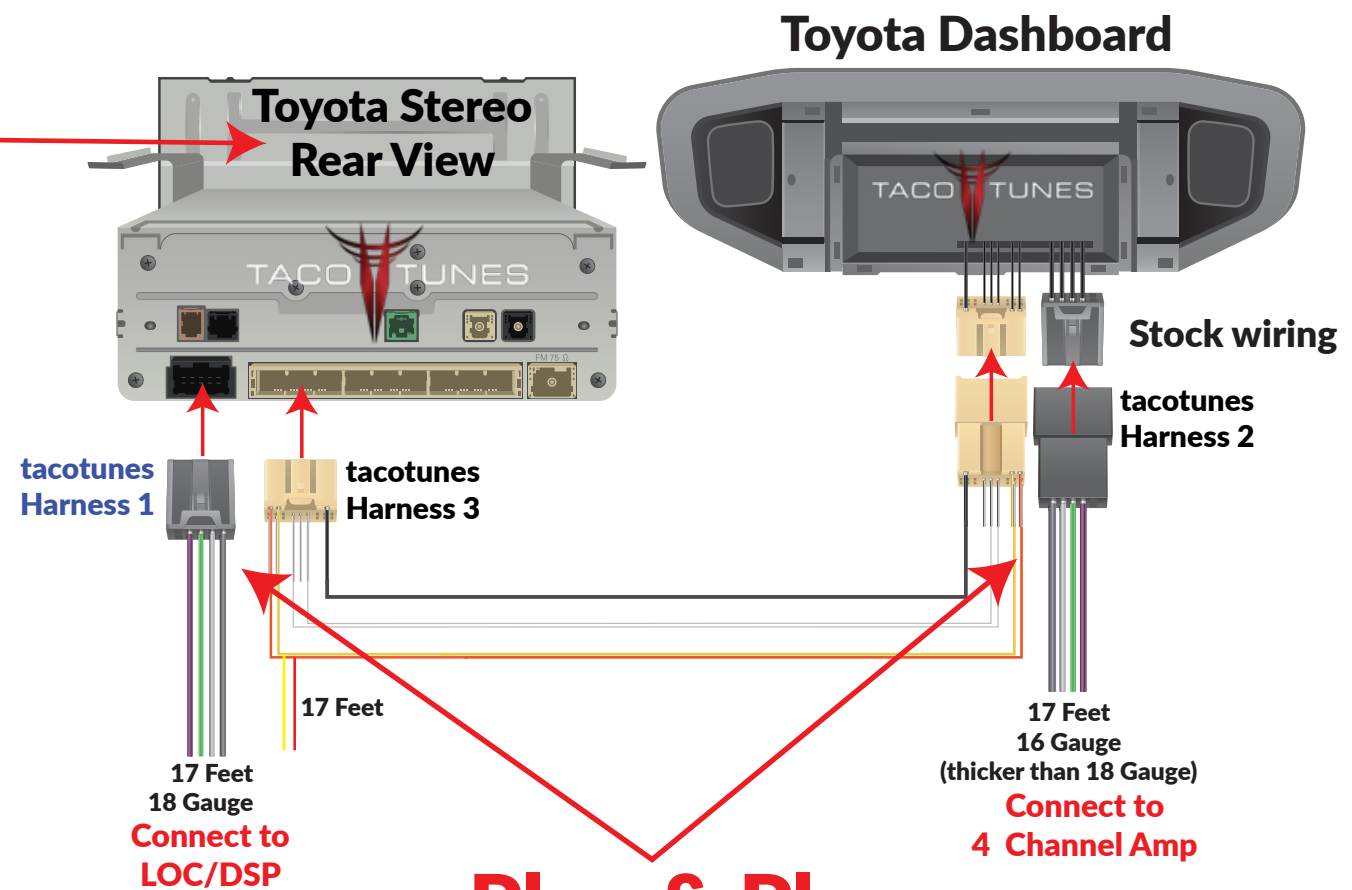


2020+ Toyota Prius

Add amplifier(s) to stock stereo - fast & easy!


- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

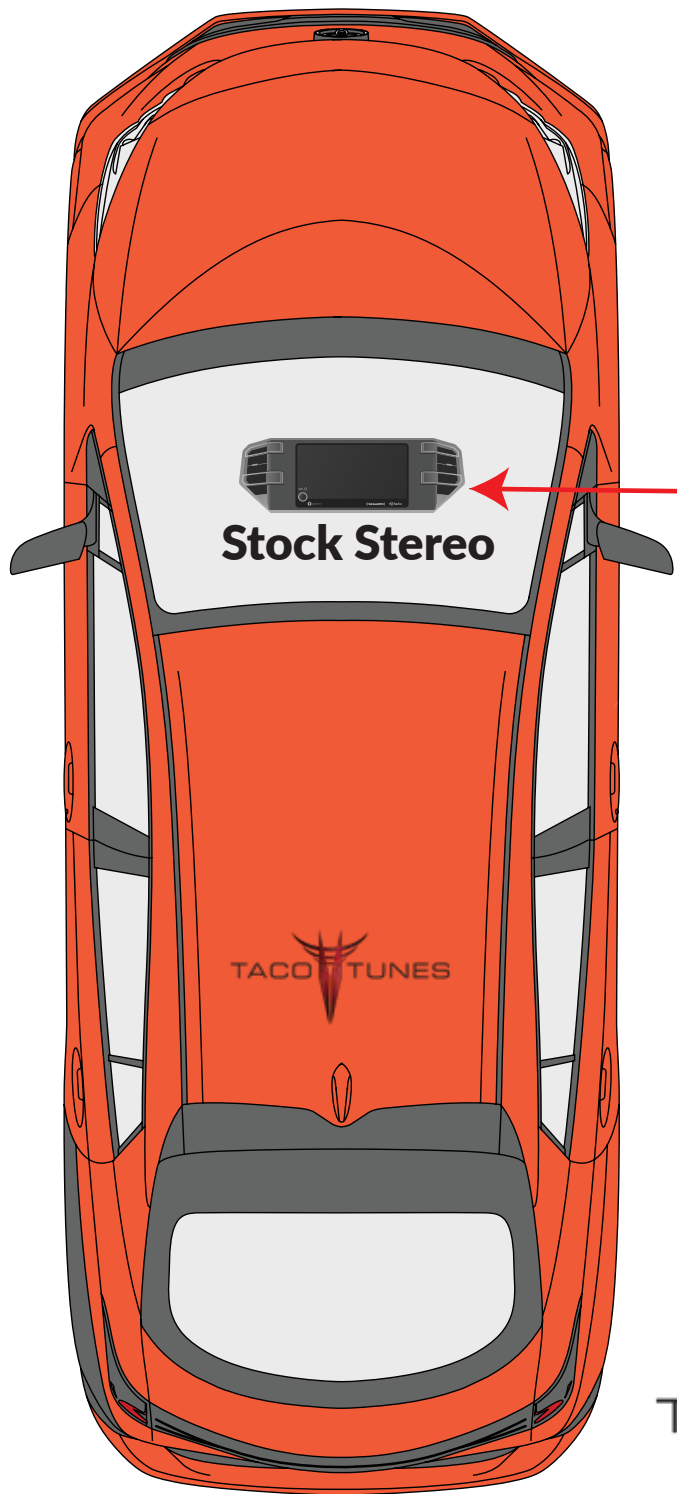

Plug & Play Harnesses



How to connect tacotunes plug & play wiring to: AudioControl LC5i Pro

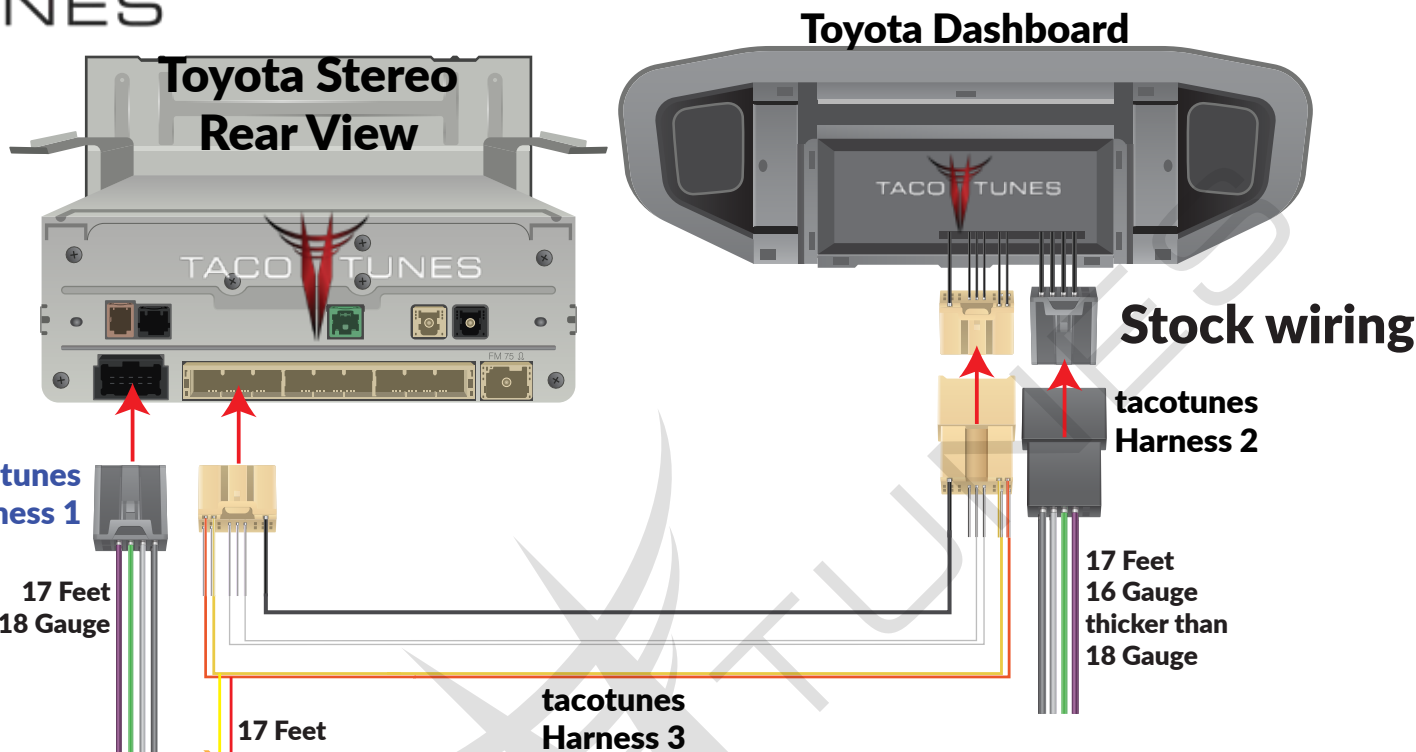

**NOTE: The input / output signal(s) have a few options.
The settings above are summing all channels for full range to
all outputs**

**Connect to LC5i
(Color coded
Installation)**






**Connect to
Amplifier(s)**

How to connect tacotunes LC5I Pro to tacotunes amplifiers




RCA to TXD Connectors, included with NTUNE6

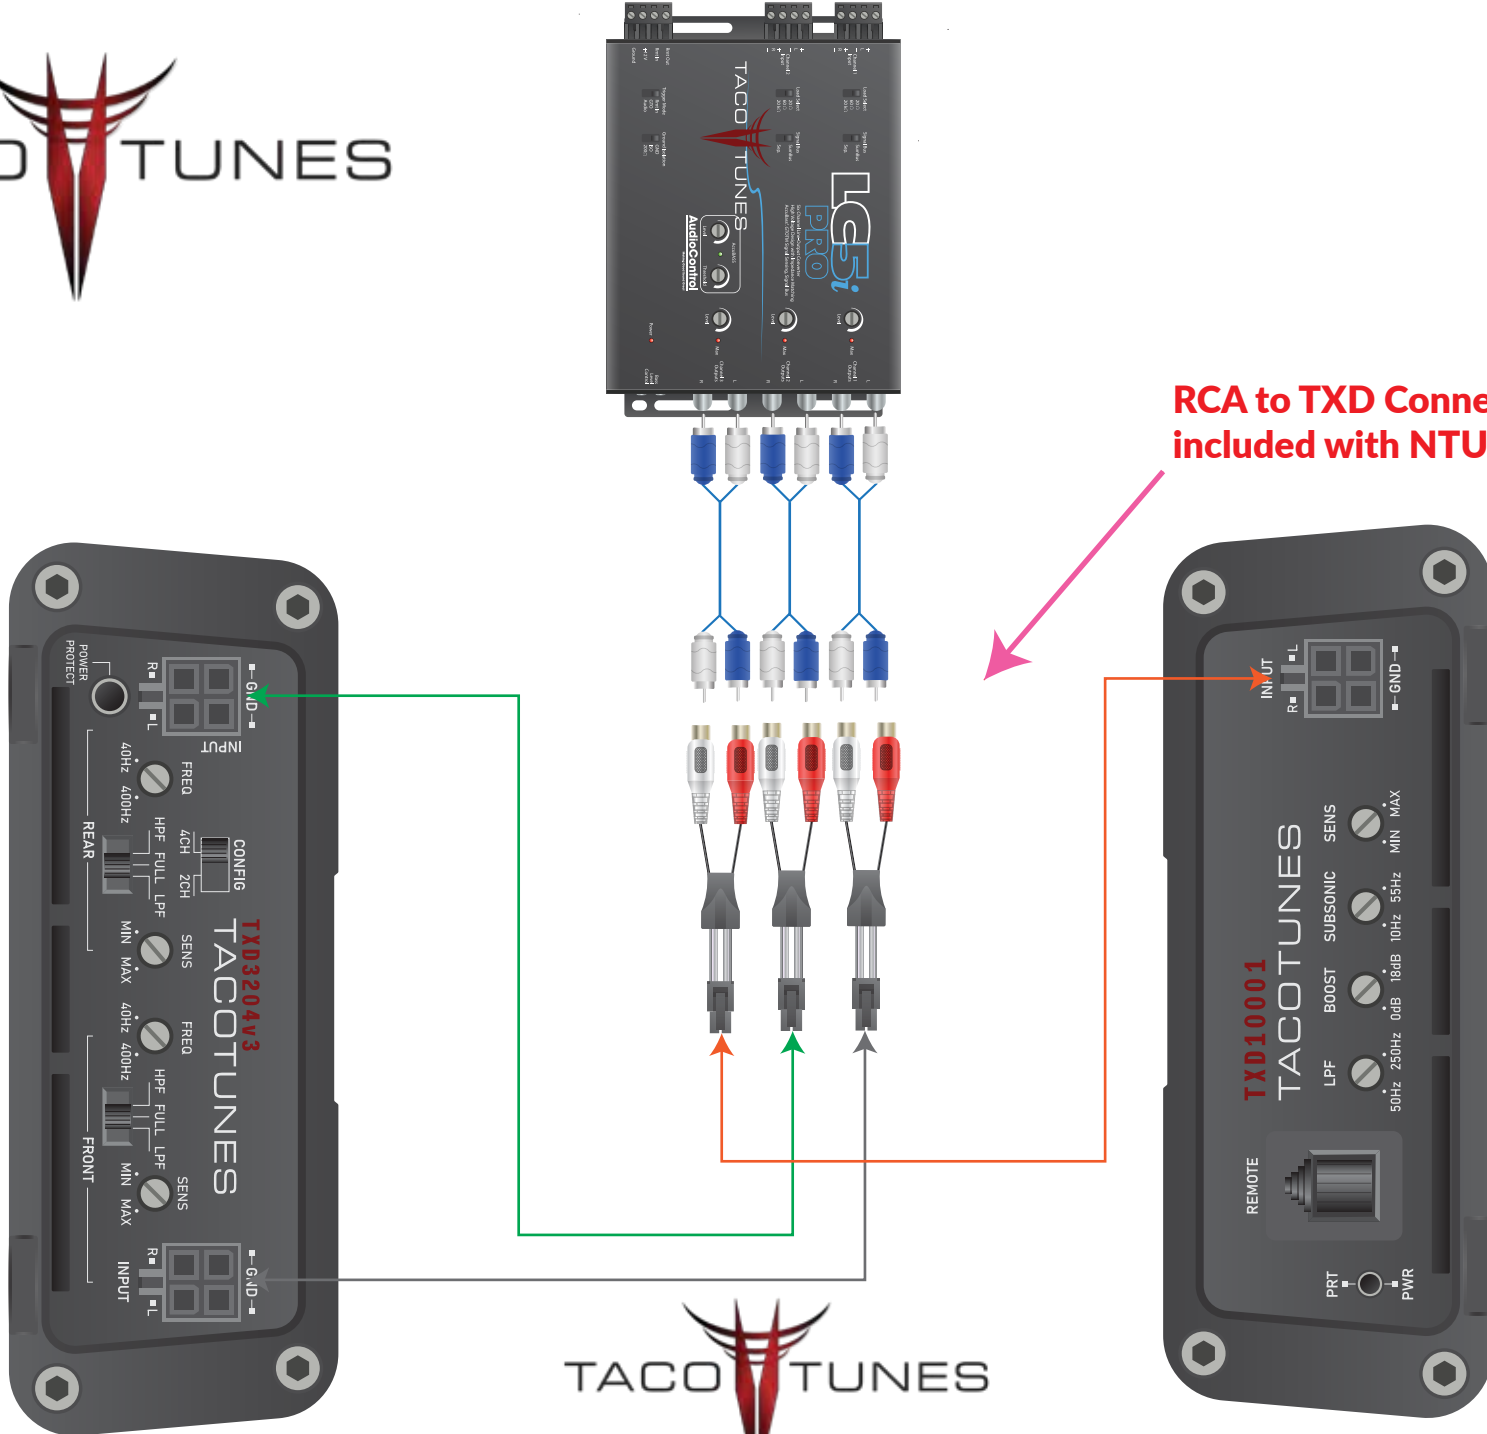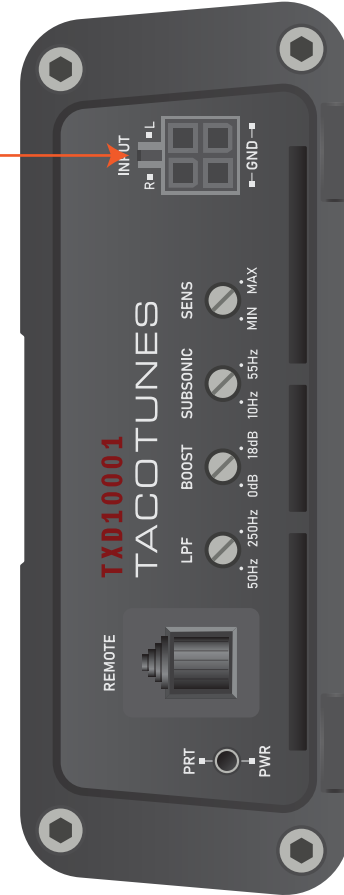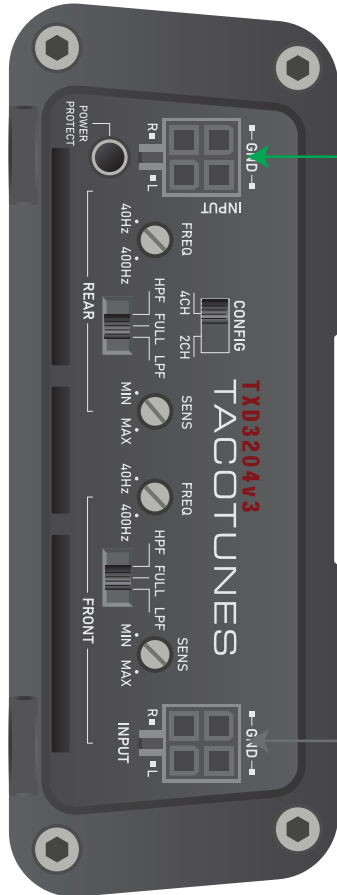


4 Channel & Subwoofer amplifier overview

TACOTUNES TXD 4 CHANNEL

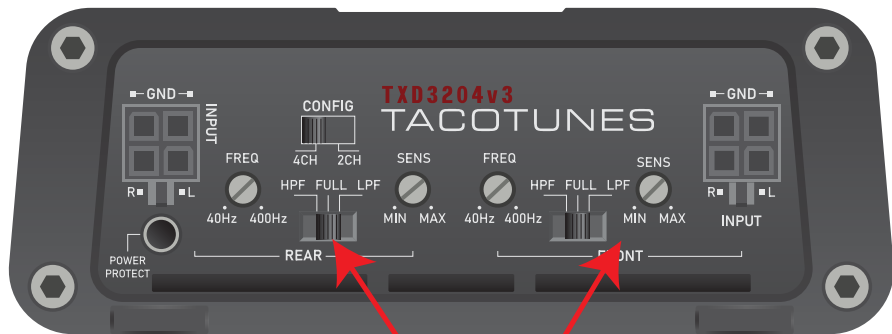

Tuning/Configuration knobs & switches:
Check out our video(s) on how to properly adjust these settings.

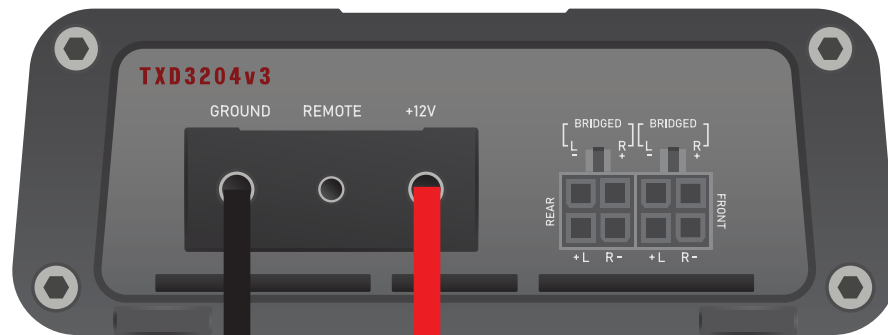

Power Wire:

We offer TXD Amp Kits designed for our TXD amps! Check out our website for more info.

Direct Connect Molex Plugs



TACOTUNES TXD SUBWOOFER AMP



Subwoofer Output



[Link to YouTube Channel](#)

2020+ Toyota Prius

How to add tacotunes amplifiers to stock stereo using LC5i Pro.

Plug and Play, easy install,
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

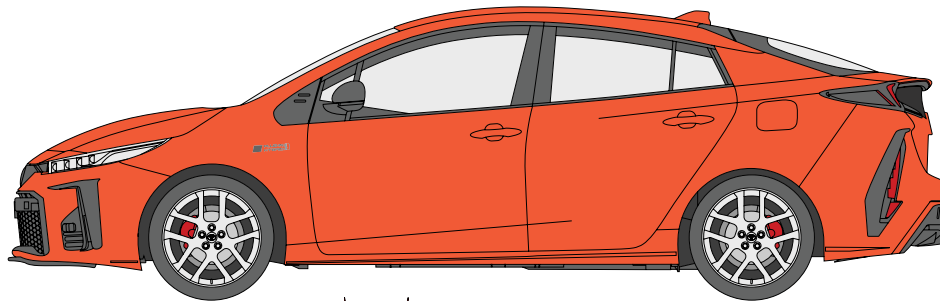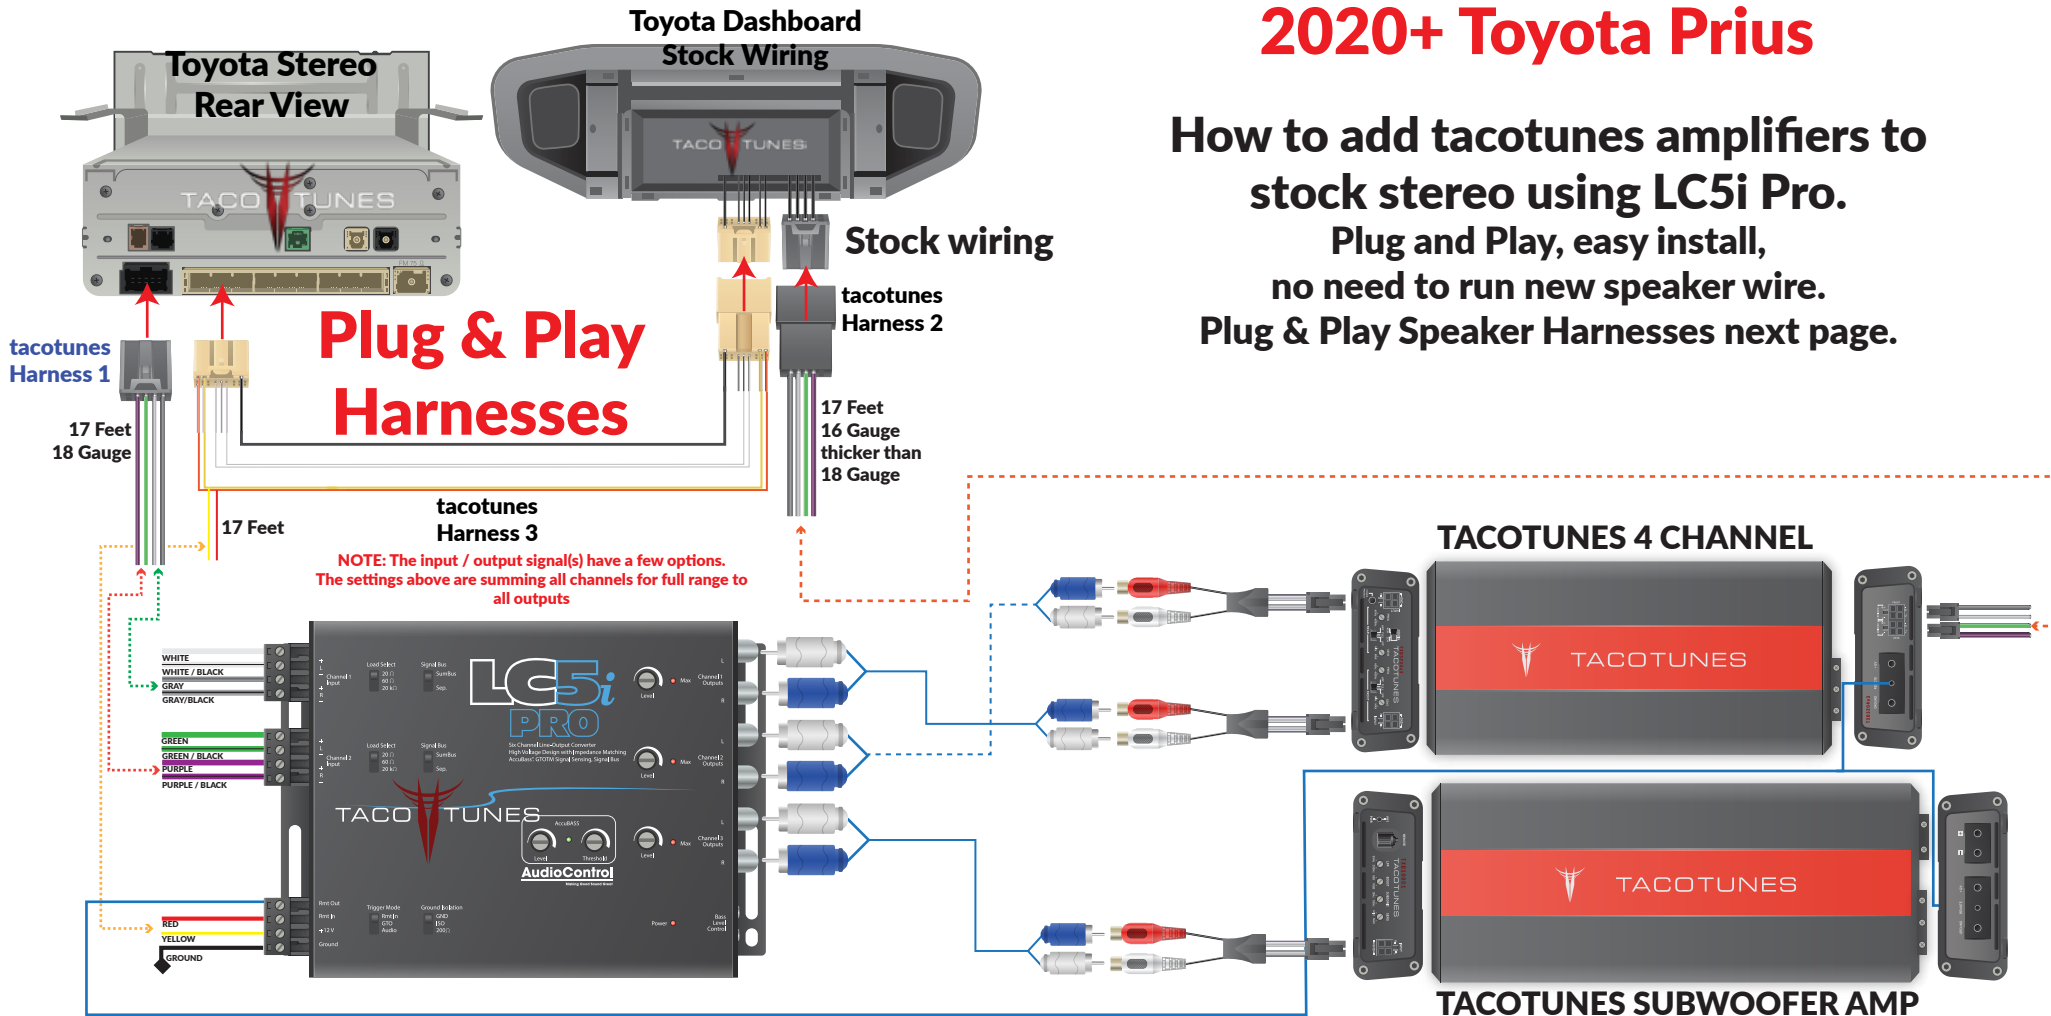


[CLICK HERE FOR HARNESSSES](#)

2020+ Toyota Prius


Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **Prius!**


We will explain how your Toyota is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

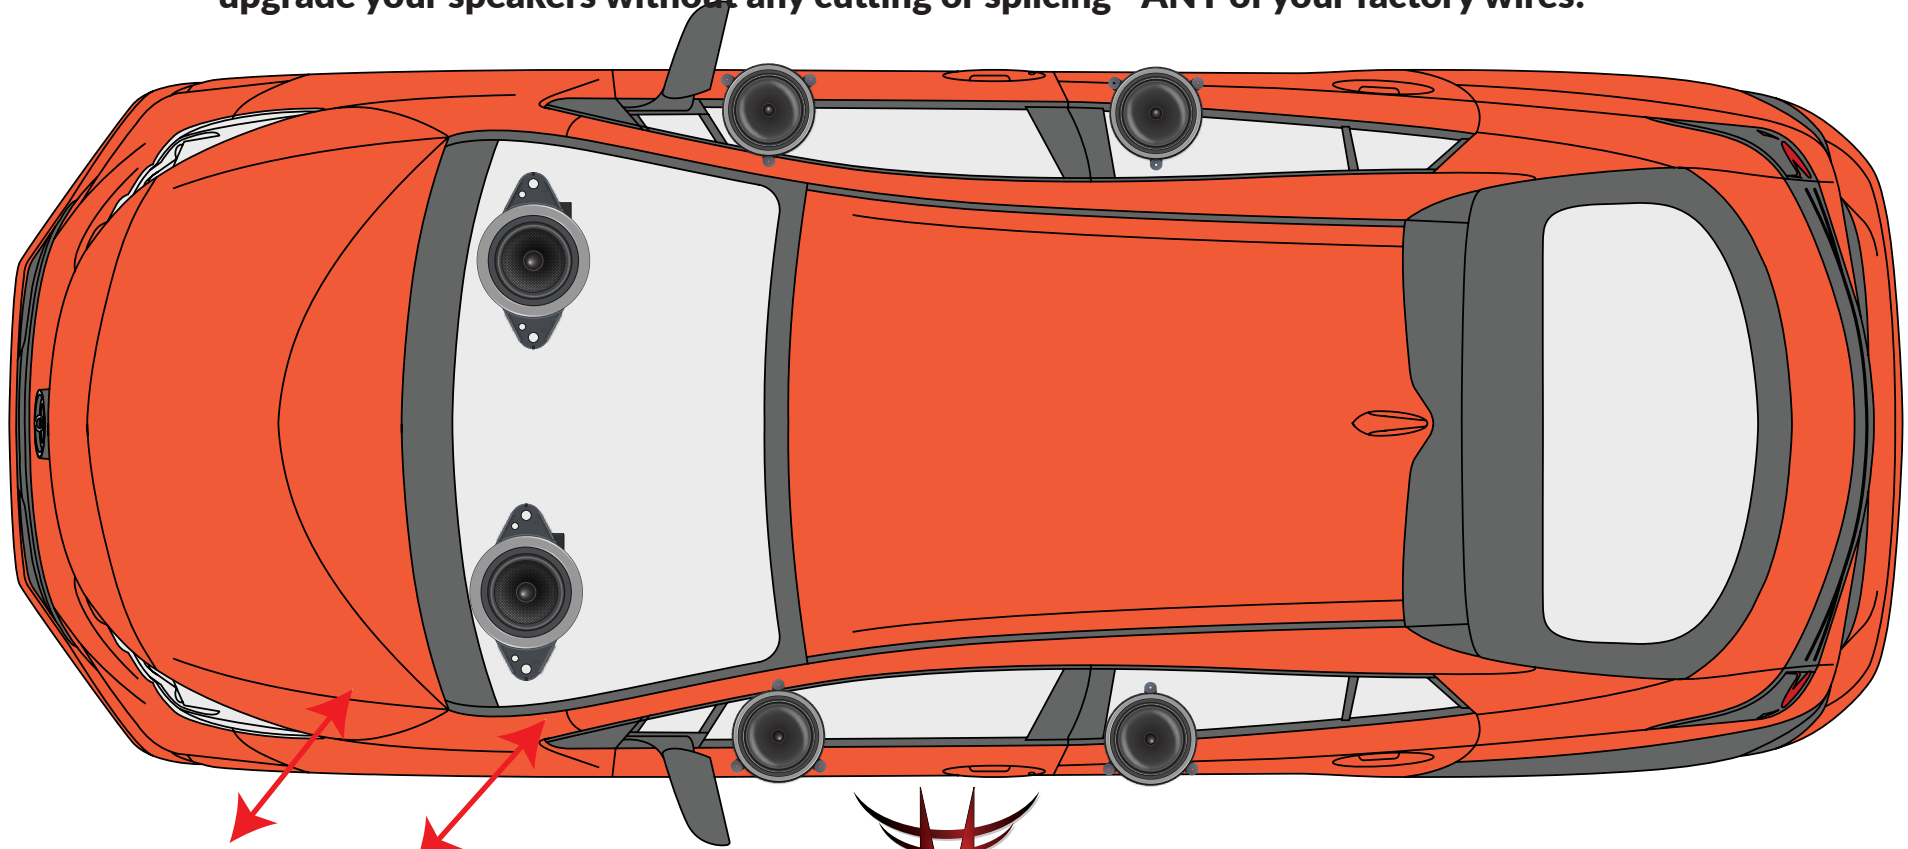

[CLICK HERE](#)
HARNESS A1 HARNESS A2

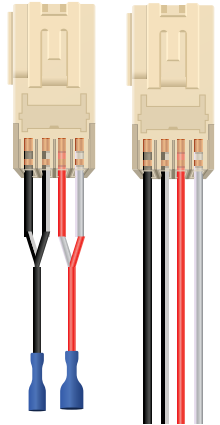

[CLICK HERE](#)
HARNESS A1 HARNESS A2

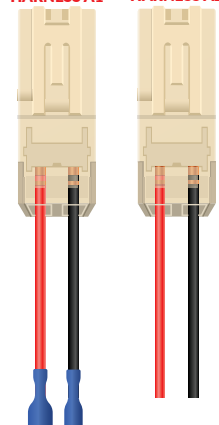

TACO TUNES

