
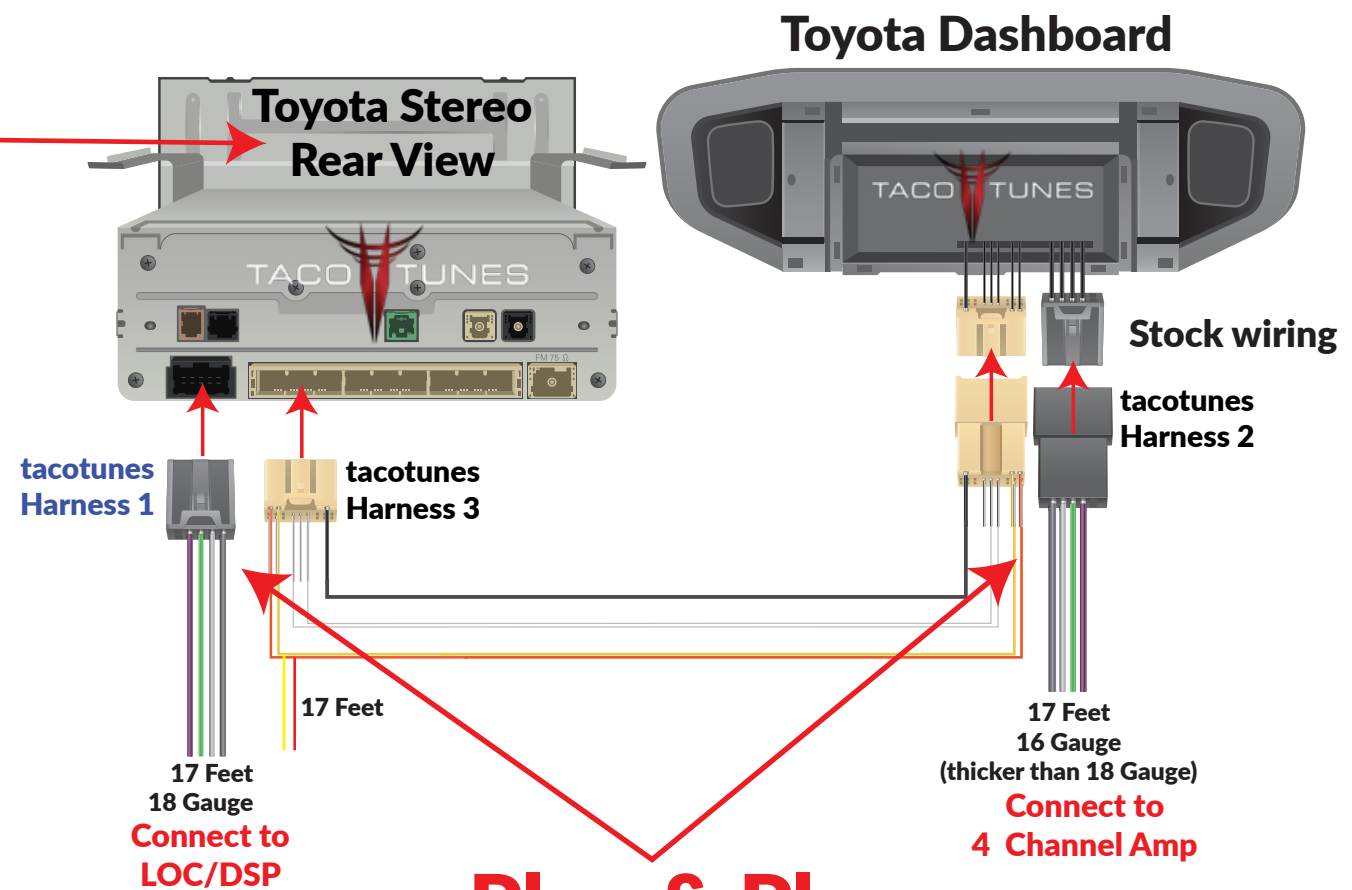


# 2020+ Toyota Prius

Add amplifier(s) to stock stereo - fast & easy!


- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

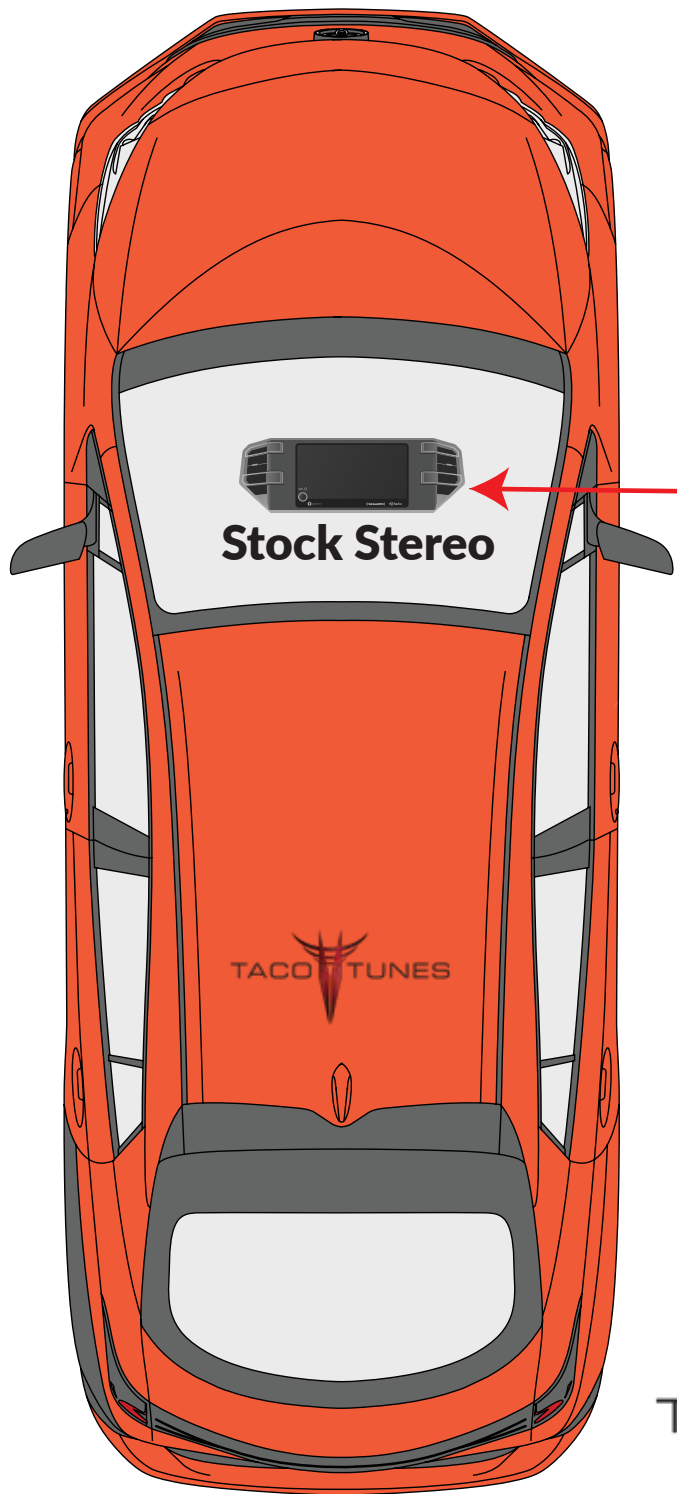


## Plug & Play Harnesses





# How to connect tacotunes plug & play wiring to: tacotunes NTUNE6

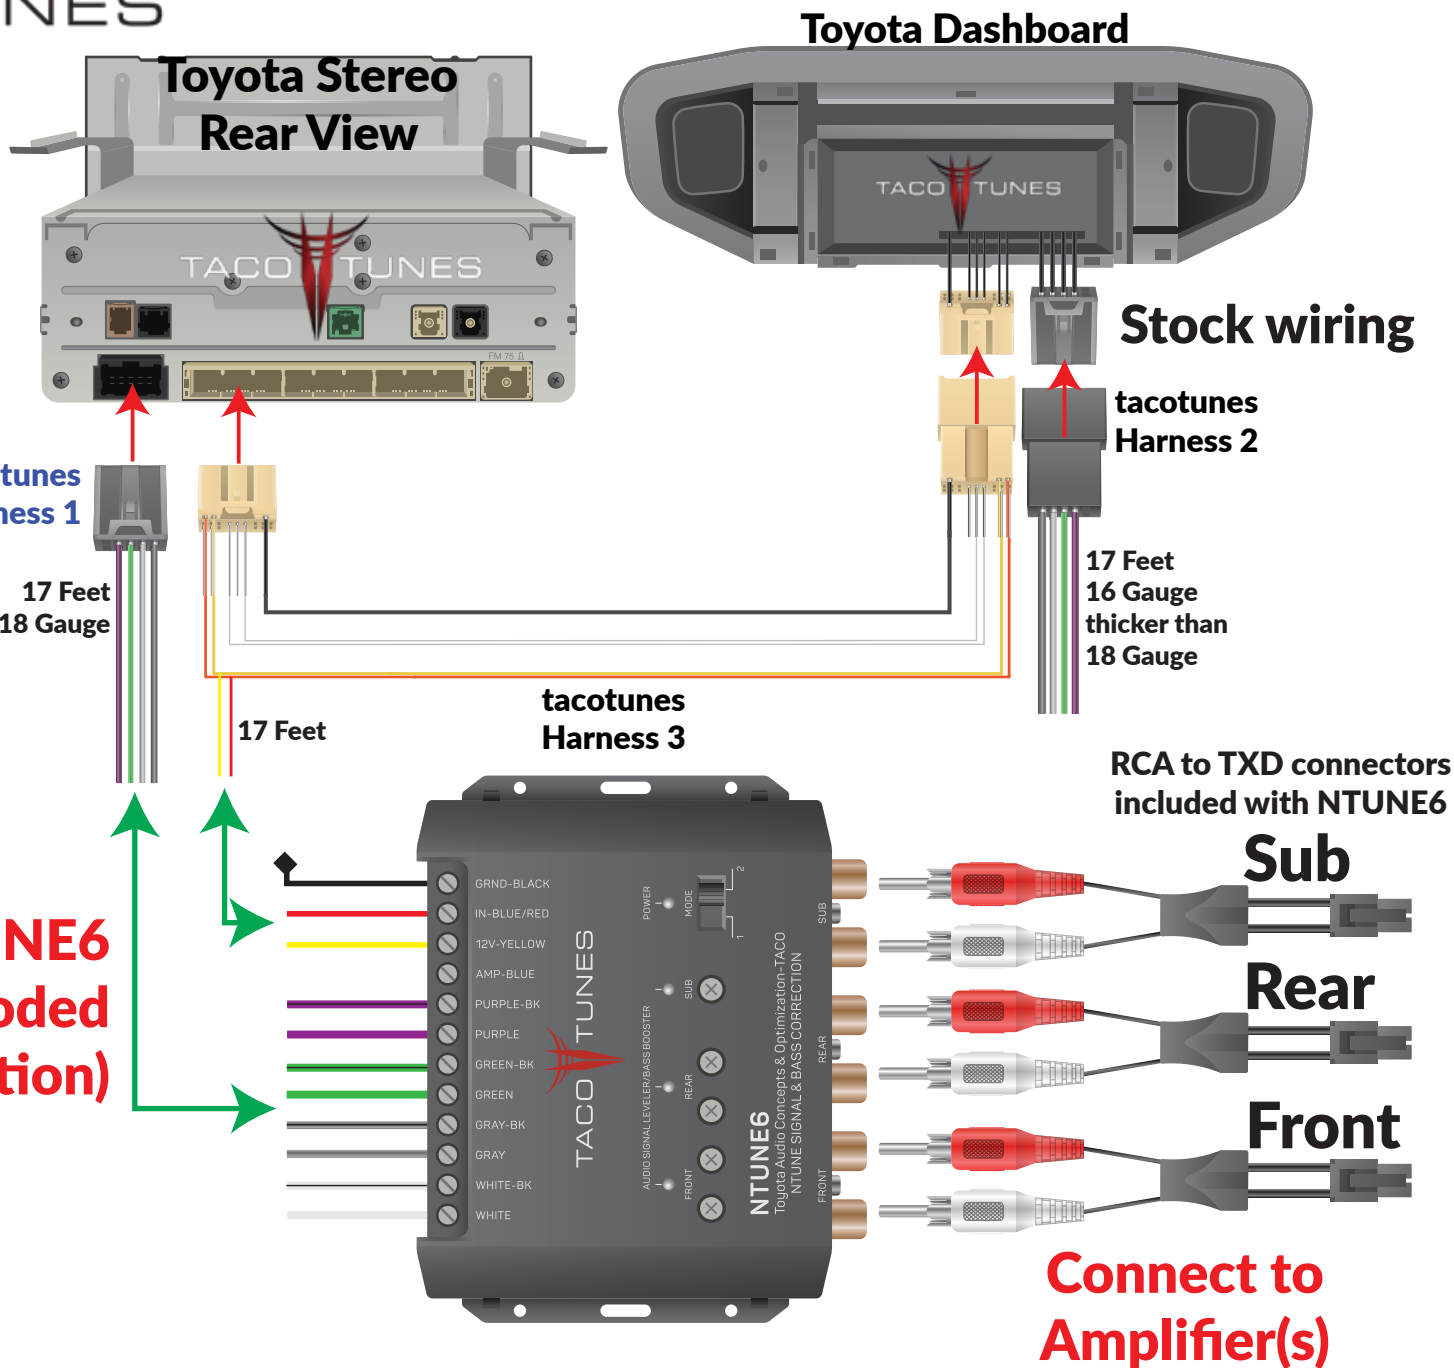

# How to connect tacotunes NTUNE6 to amplifiers

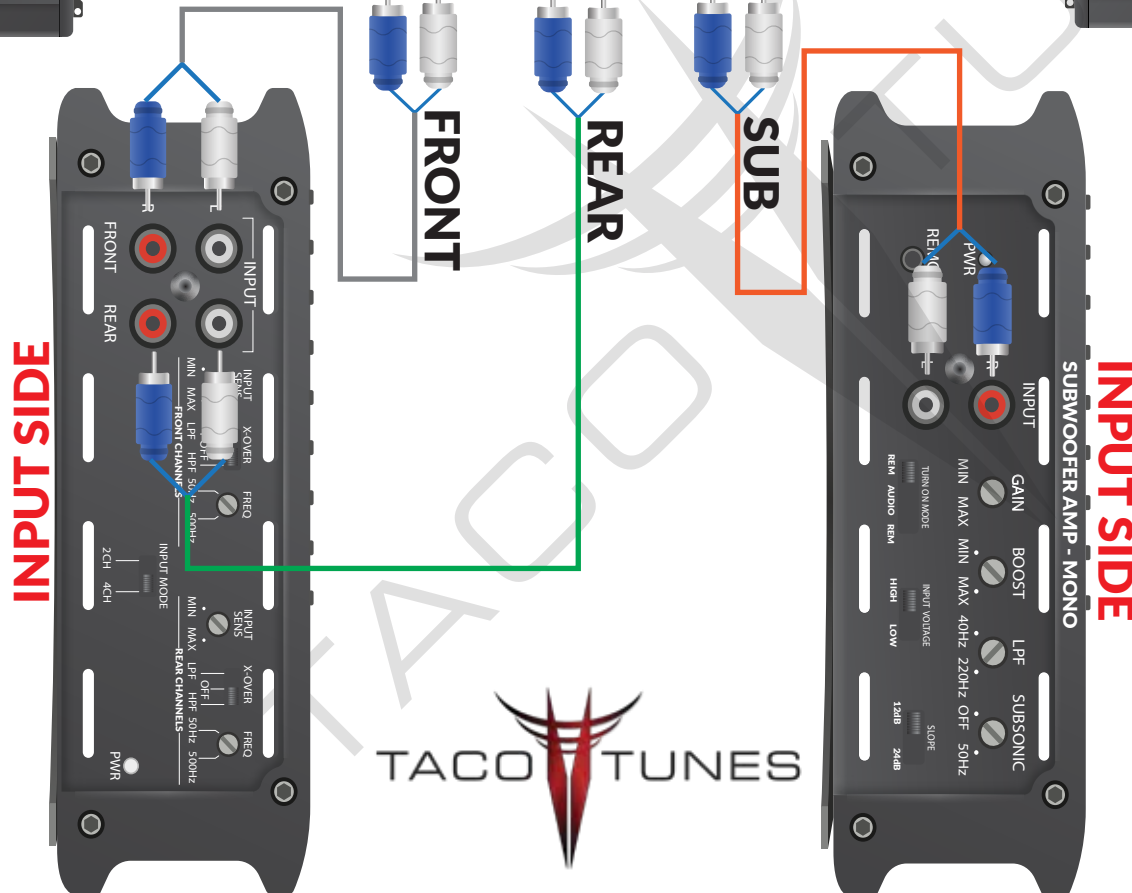

# 4 Channel & Subwoofer amplifier overview

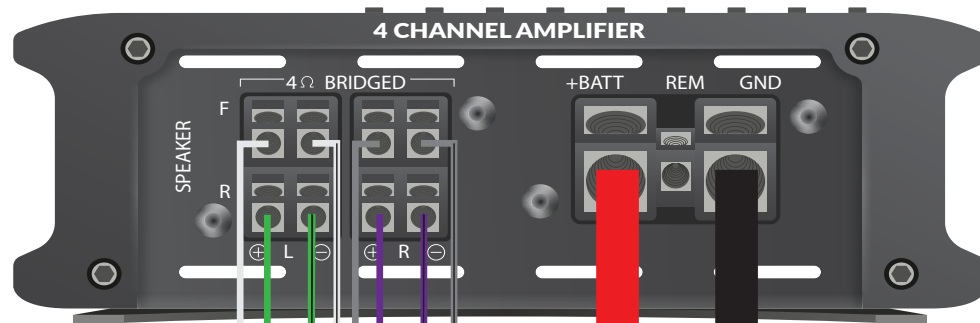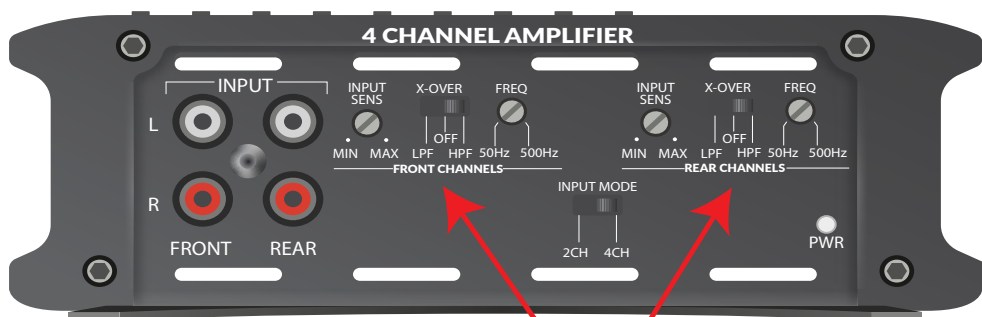


Connect to harness 3.

Power Wire:

From battery / distribution block.  
Important: Check with your amp manufacturer  
for the proper gauge & fuses

Tuning/Configuration knobs & switches:  
Check out our video(s) on how to properly  
adjust these settings.

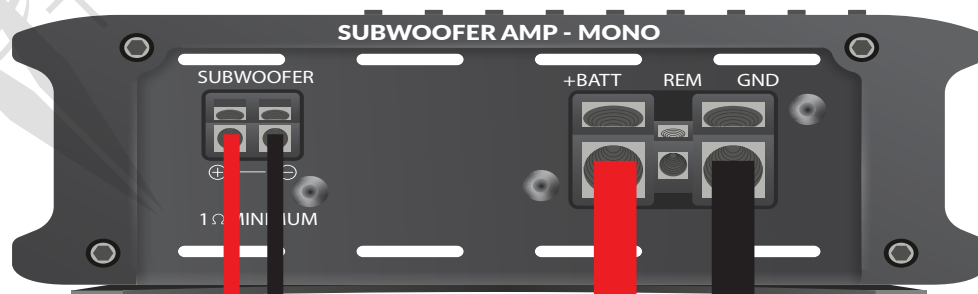

Subwoofer Output

[Link to YouTube Channel](#)


# 2020+ Toyota Prius

## How to add tacotunes amplifiers to stock stereo using NTUNE6

Plug and Play, easy install,  
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

MAX 100 WATTS RMS X 4

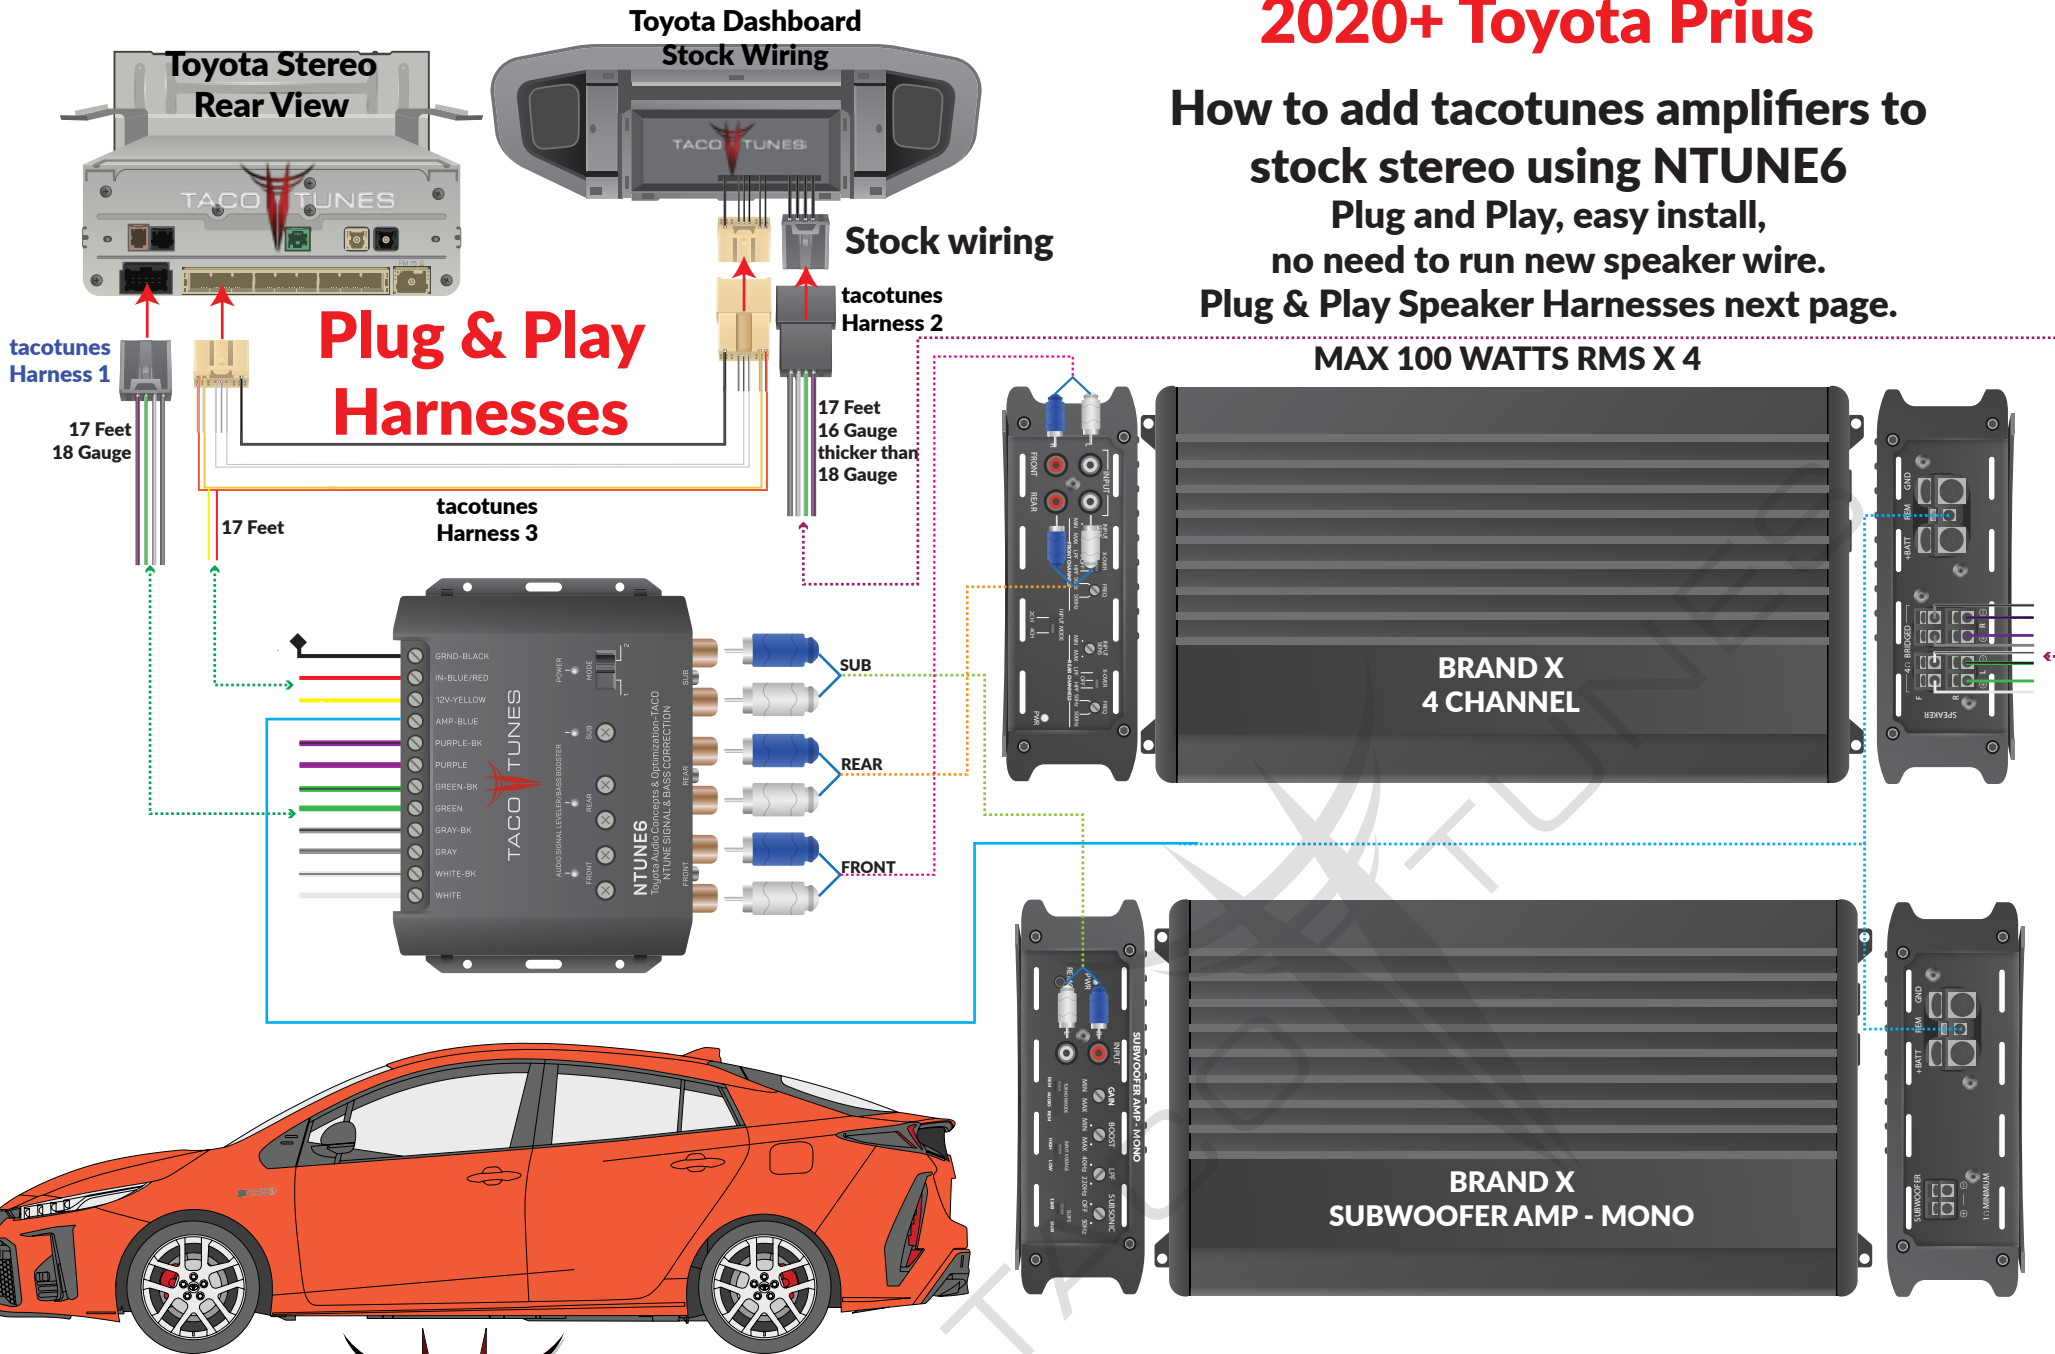

[CLICK HERE FOR HARNESSSES](#)




# 2020+ Toyota Prius


Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **Prius!**


We will explain how your Toyota is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

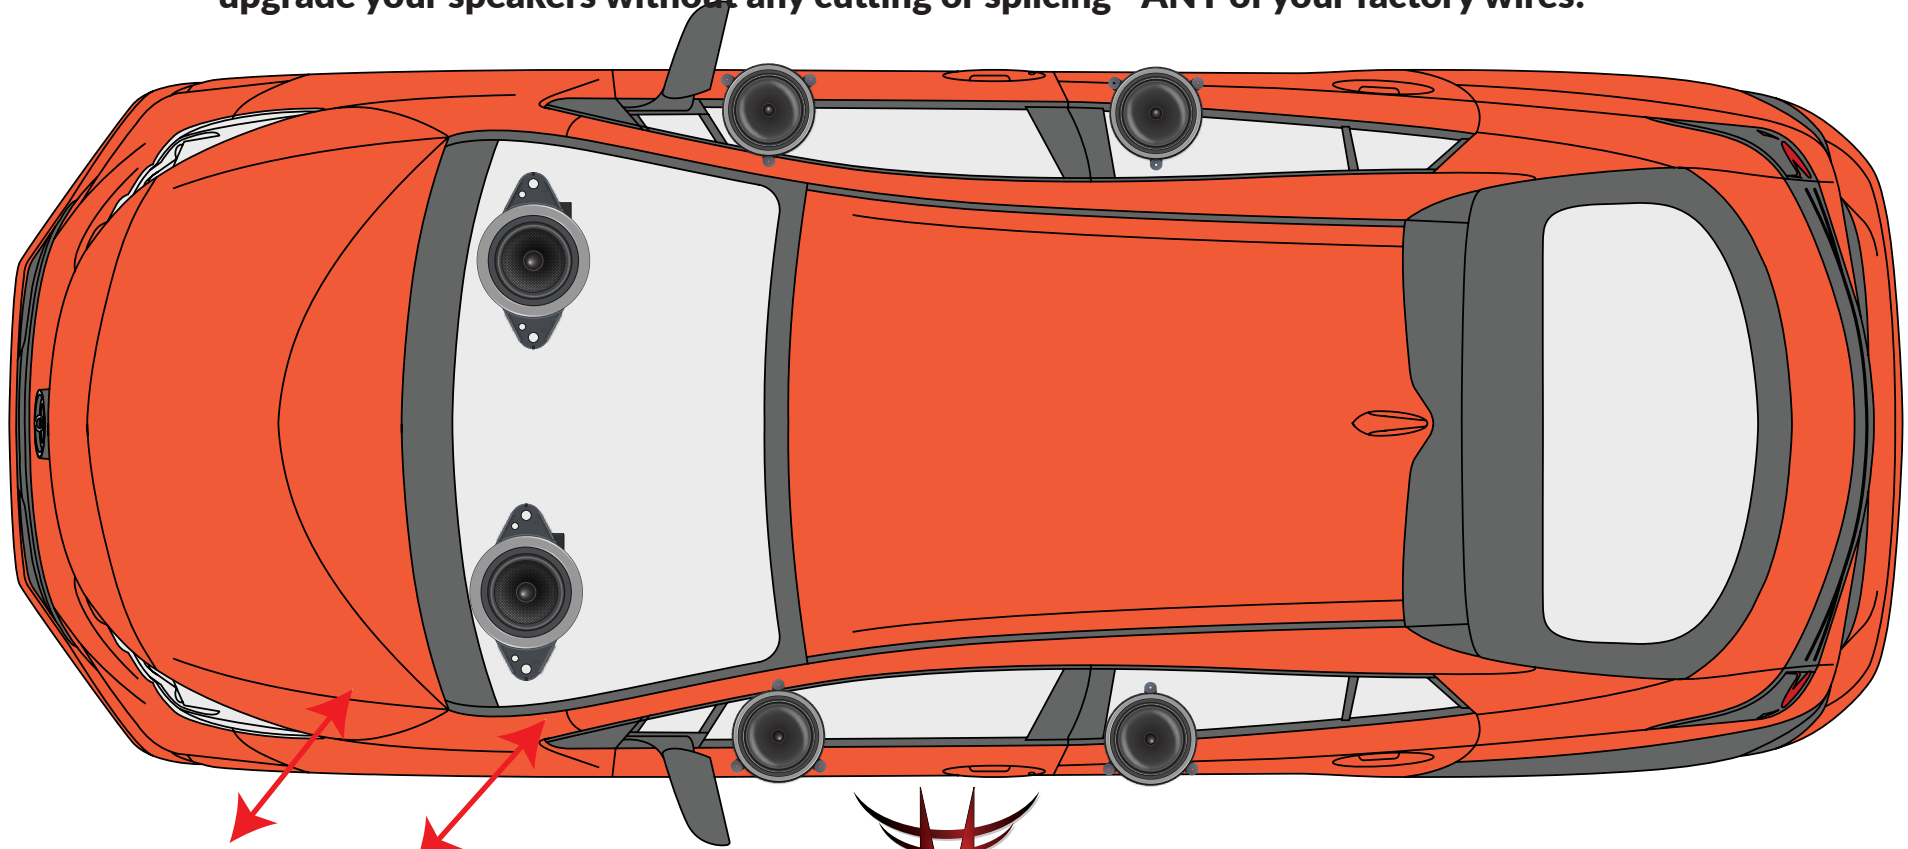

[CLICK HERE](#)  
HARNESS A1 HARNESS A2

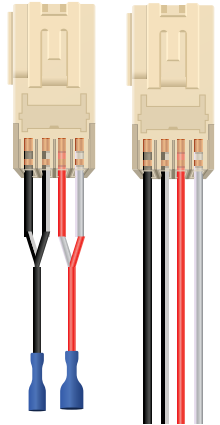

[CLICK HERE](#)  
HARNESS A1 HARNESS A2

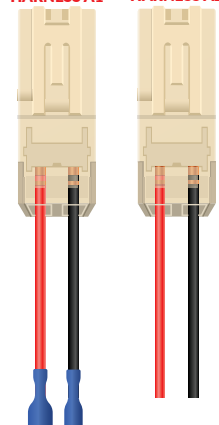

TACO TUNES

