


2021+ Toyota Venza

Add amplifier(s) to stock stereo - fast & easy!


- No cutting or splicing factory wires!
- No need to run new speaker wires!
- Works with most amplifier brands.
- Works with aftermarket stereos also!

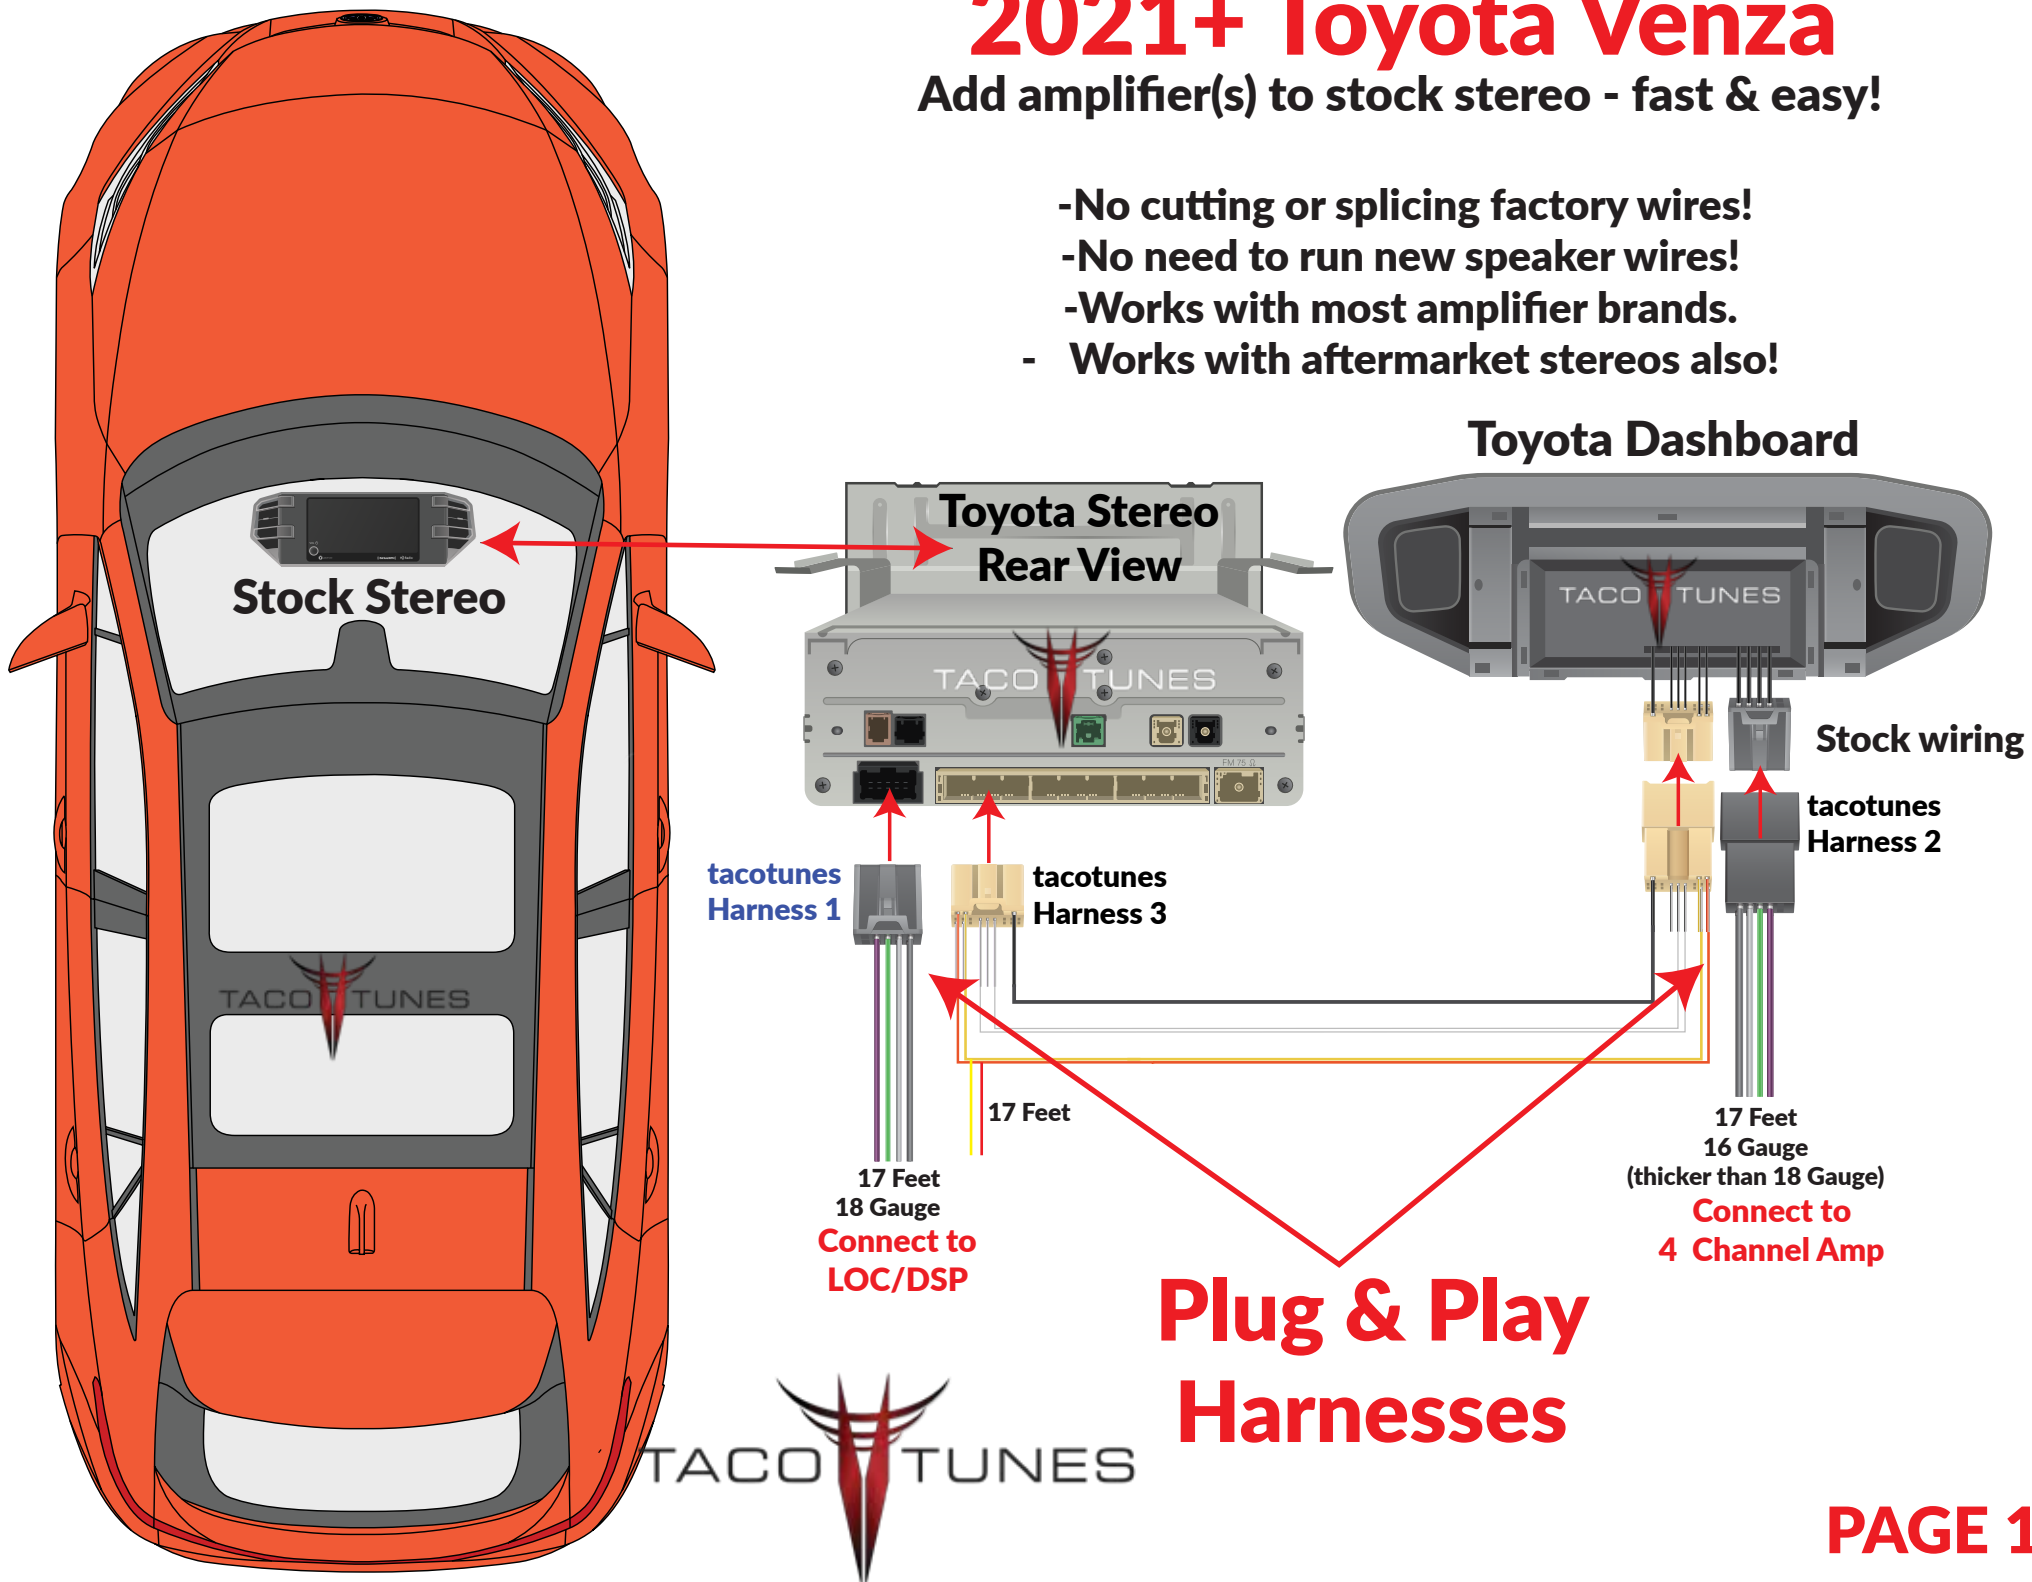


**Plug & Play
Harnesses**




How to connect tacotunes plug & play wiring to: tacotunes NTUNE6

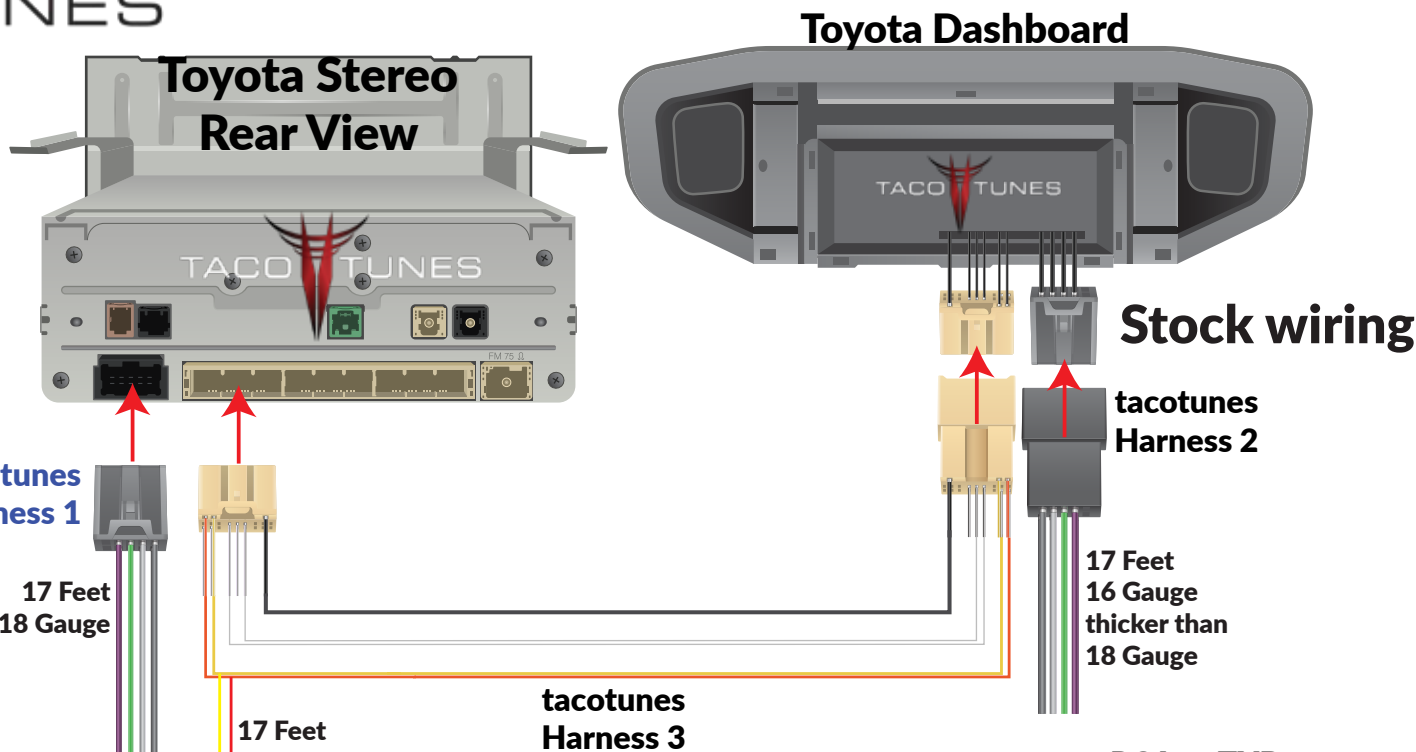



**Connect to NTUNE6
(Color coded
Installation)**

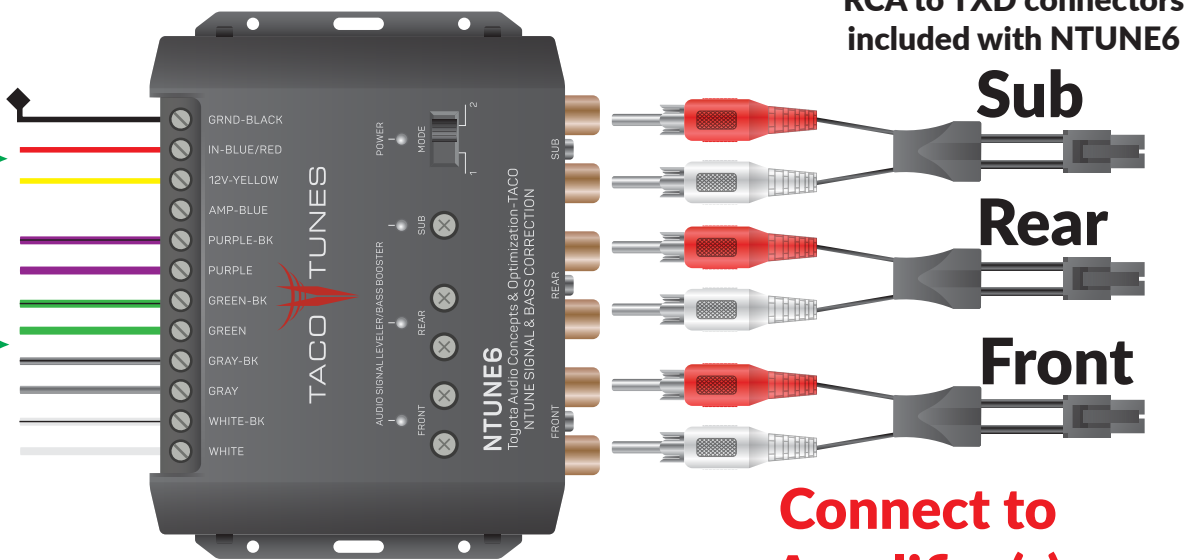

How to connect tacotunes NTUNE6 to amplifiers

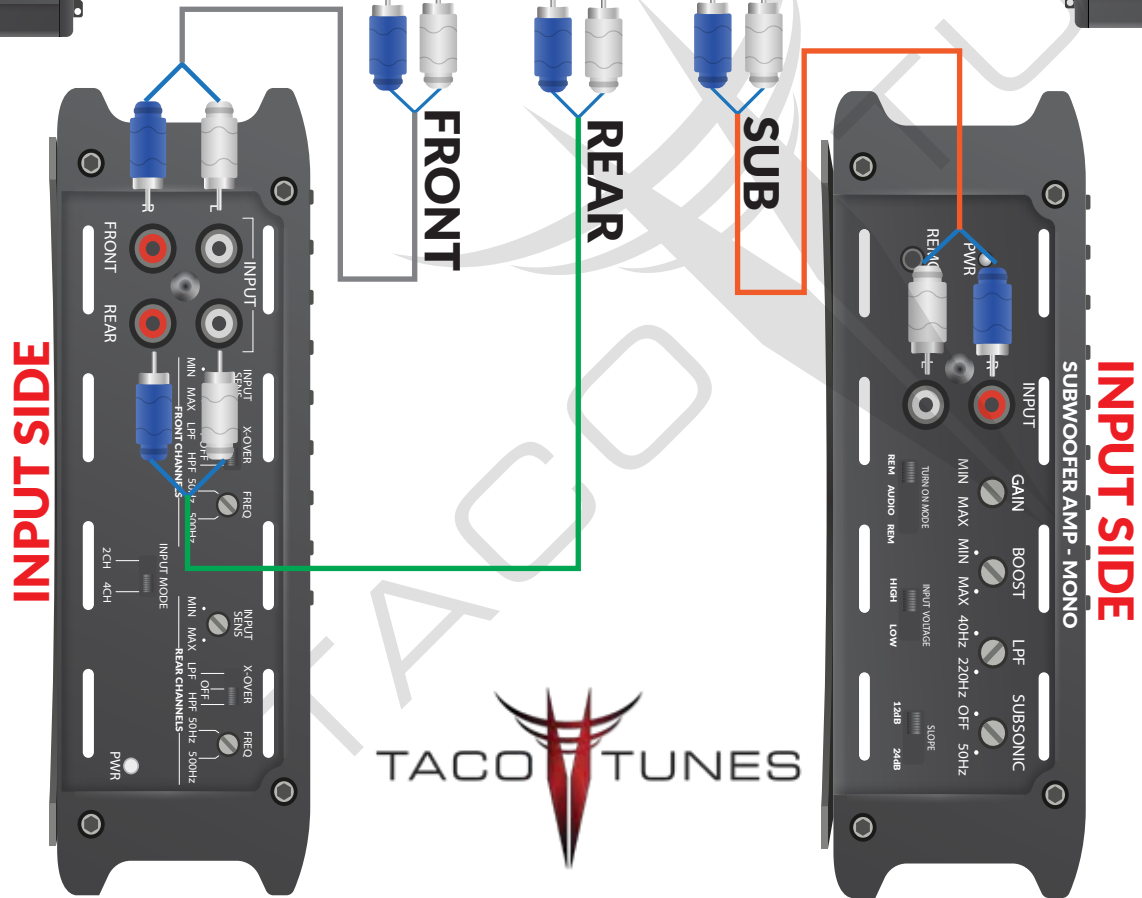

4 Channel & Subwoofer amplifier overview

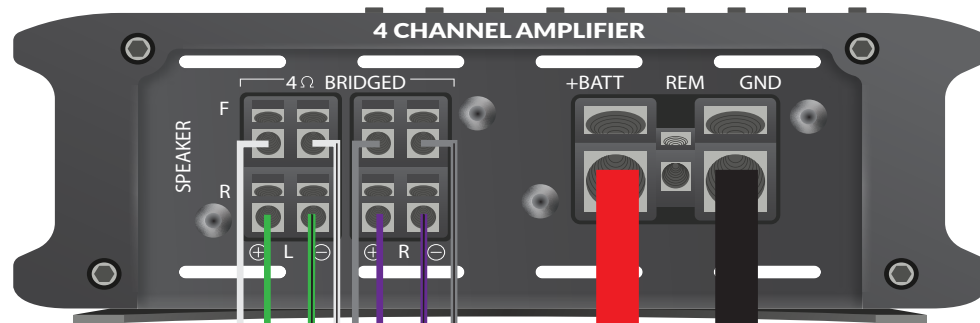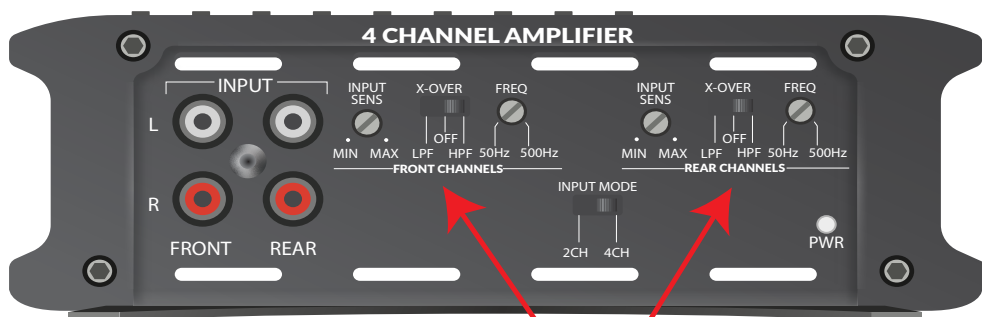


Connect to harness 3.

Power Wire:

From battery / distribution block.
Important: Check with your amp manufacturer
for the proper gauge & fuses

Tuning/Configuration knobs & switches:
Check out our video(s) on how to properly
adjust these settings.

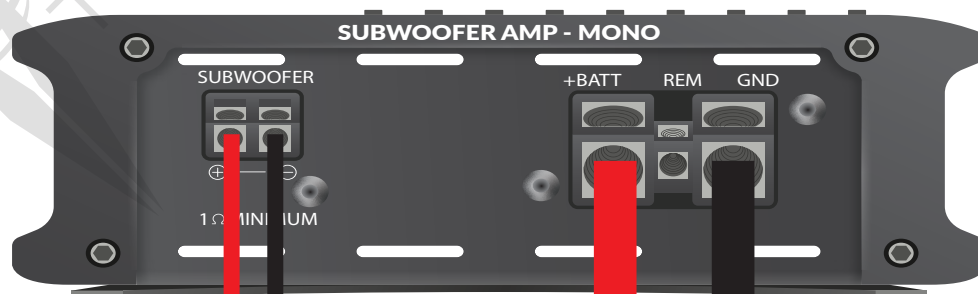

Subwoofer Output

[Link to YouTube Channel](#)


2021+ Toyota Venza

How to add tacotunes amplifiers to stock stereo using NTUNE6

Plug and Play, easy install,
no need to run new speaker wire.

Plug & Play Speaker Harnesses next page.

MAX 100 WATTS RMS X 4

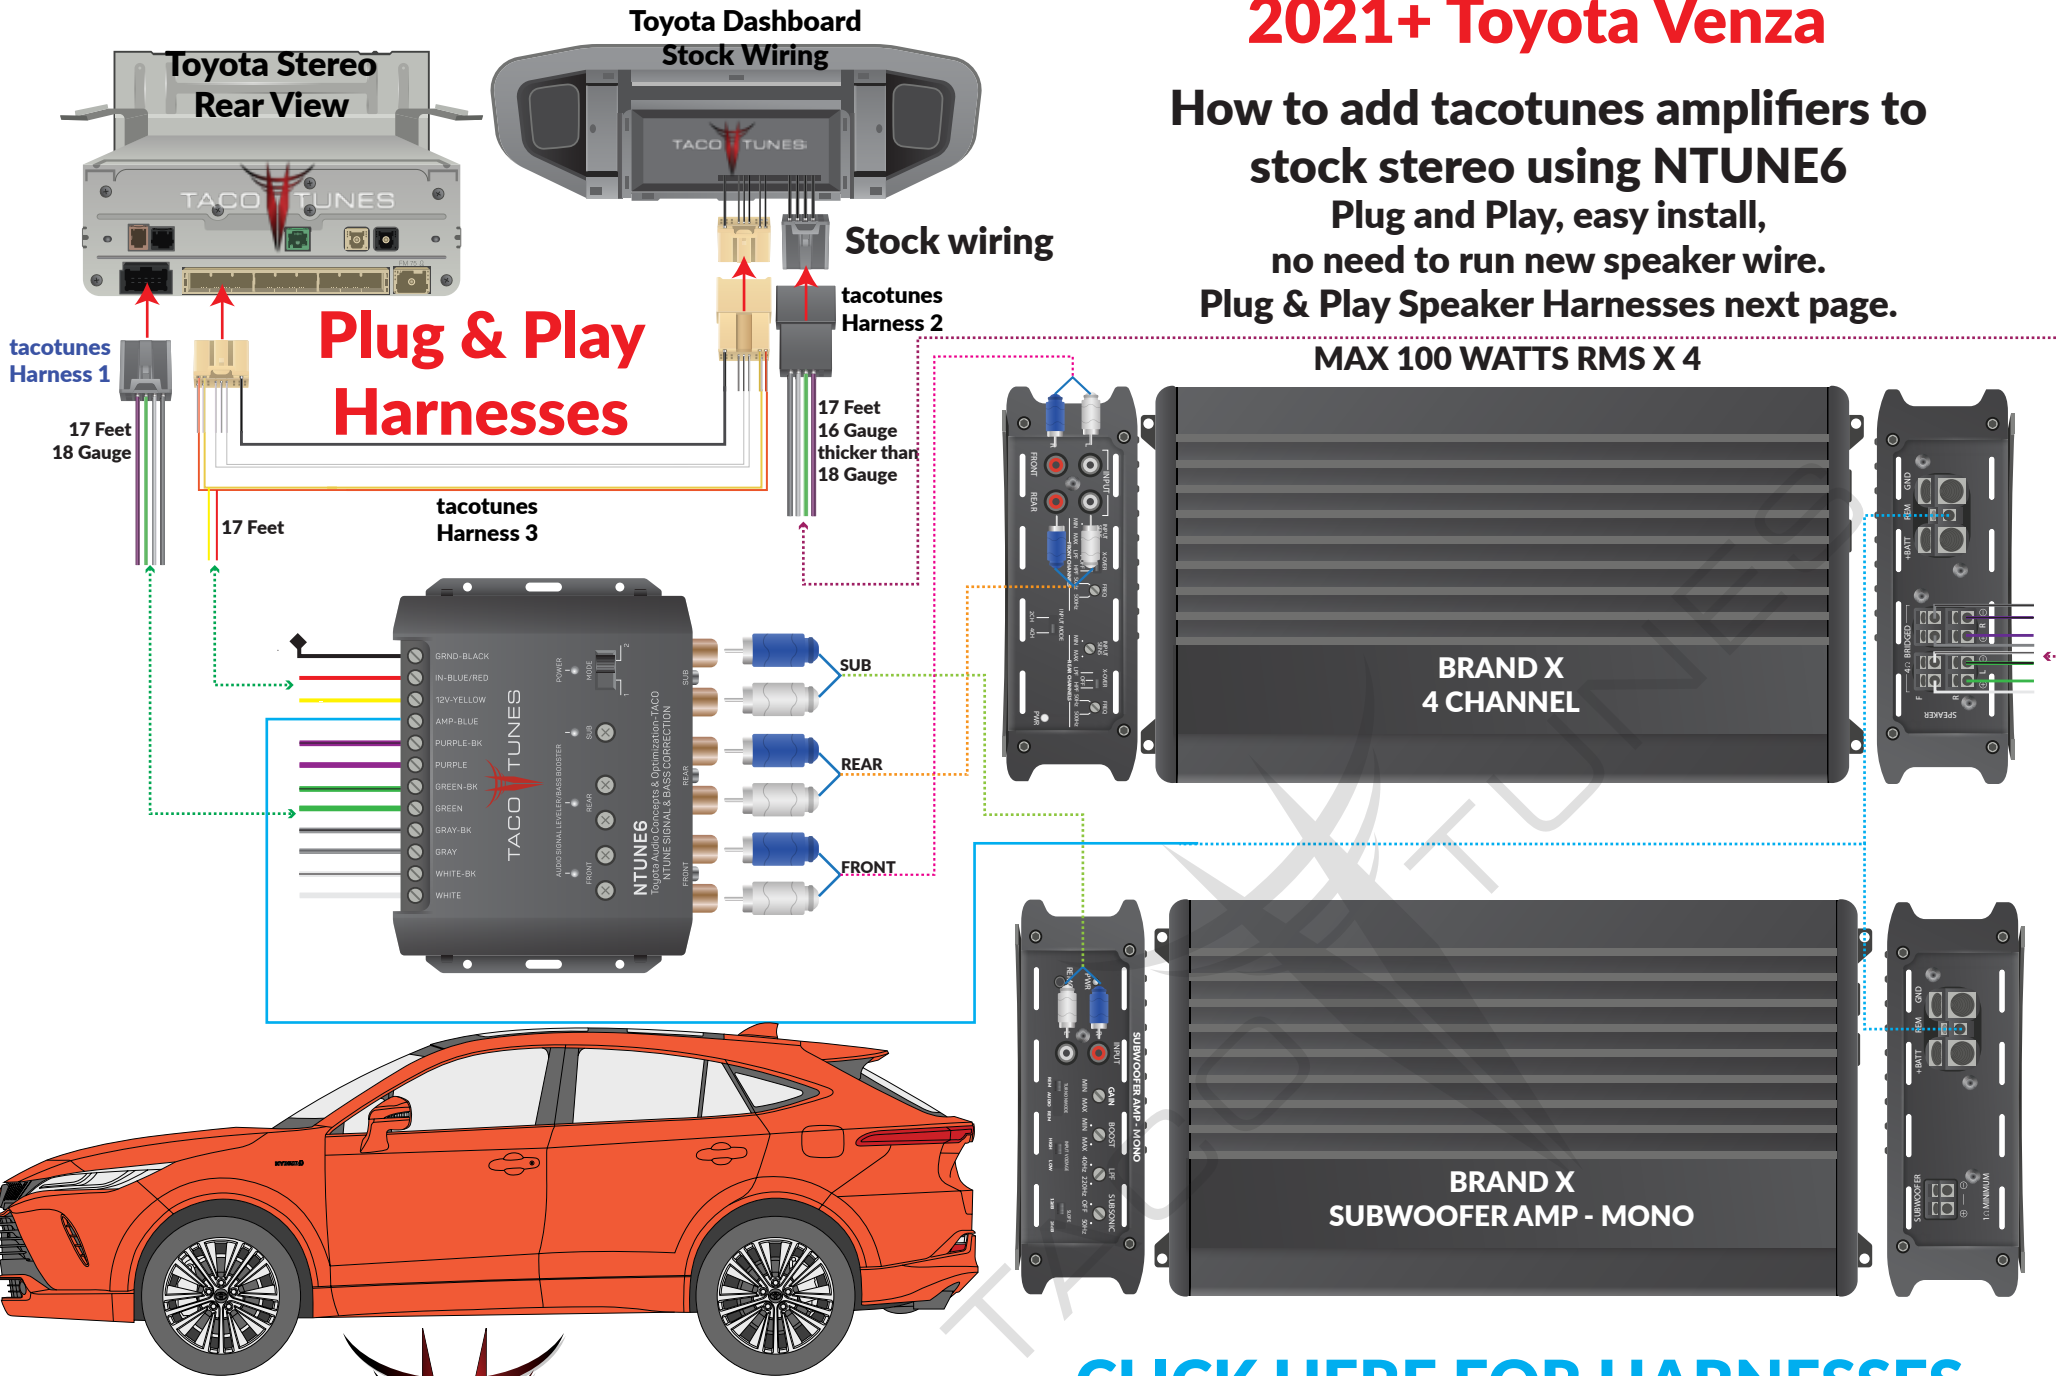

tacotunes
Harness 1
17 Feet
18 Gauge

**Plug & Play
Harnesses**

Stock wiring

tacotunes
Harness 2

17 Feet
16 Gauge
thicker than
18 Gauge

tacotunes
Harness 3

17 Feet

SUB


REAR

FRONT

BRAND X
4 CHANNEL

BRAND X
SUBWOOFER AMP - MONO

[CLICK HERE FOR HARNESSSES](#)

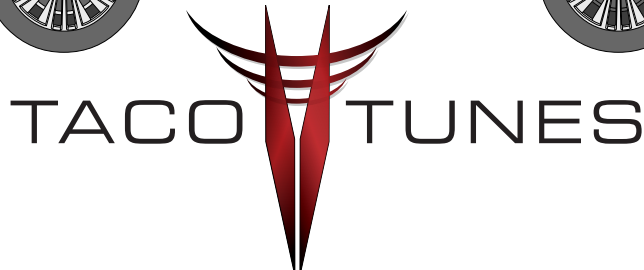

2021+ Toyota Venza

Stock speaker location overview / plug & play harnesses.

Be sure to check out our video(s) that show you how to easily upgrade the speakers in your **Venza**!

We will explain how your **Venza** is configured from the factory AND show you how to easily upgrade your speakers without any cutting or splicing - ANY of your factory wires!

