


2014-2021 Toyota Tundra Audio Upgrade

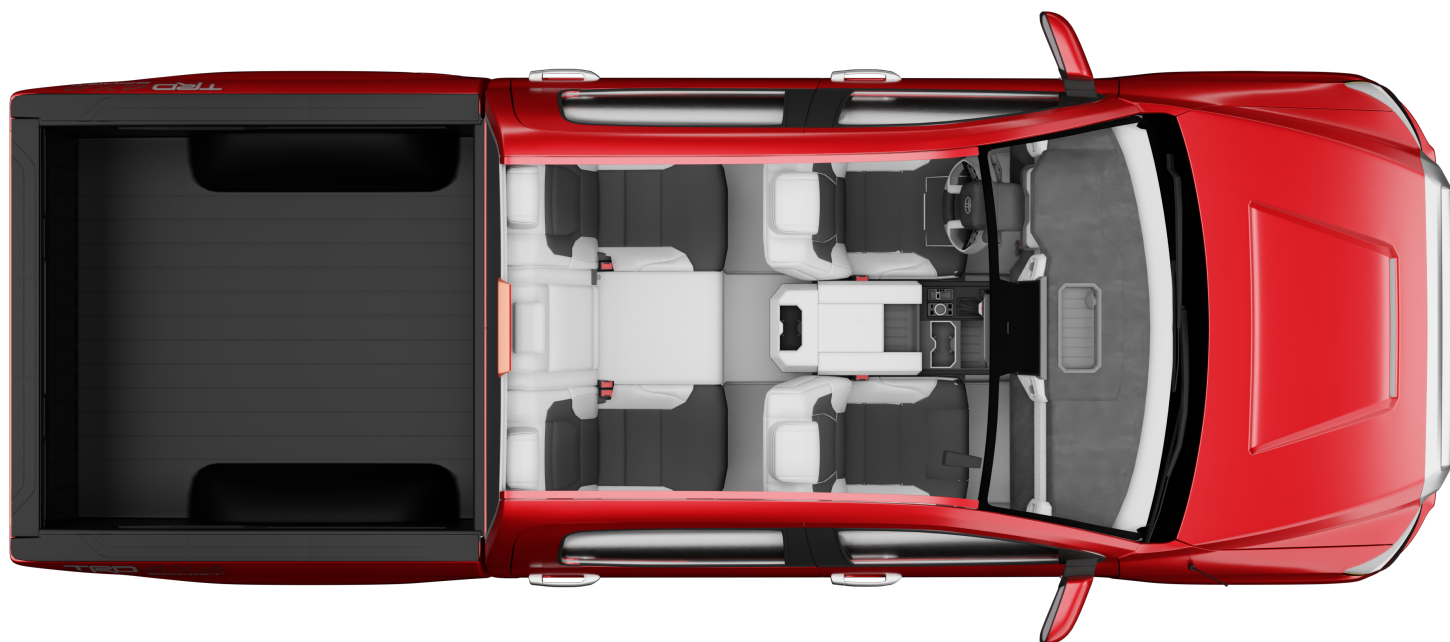


How to Add a Subwoofer



SECTION 1 -

Plug and Play Harness Integration



Factory Amp Under Seat

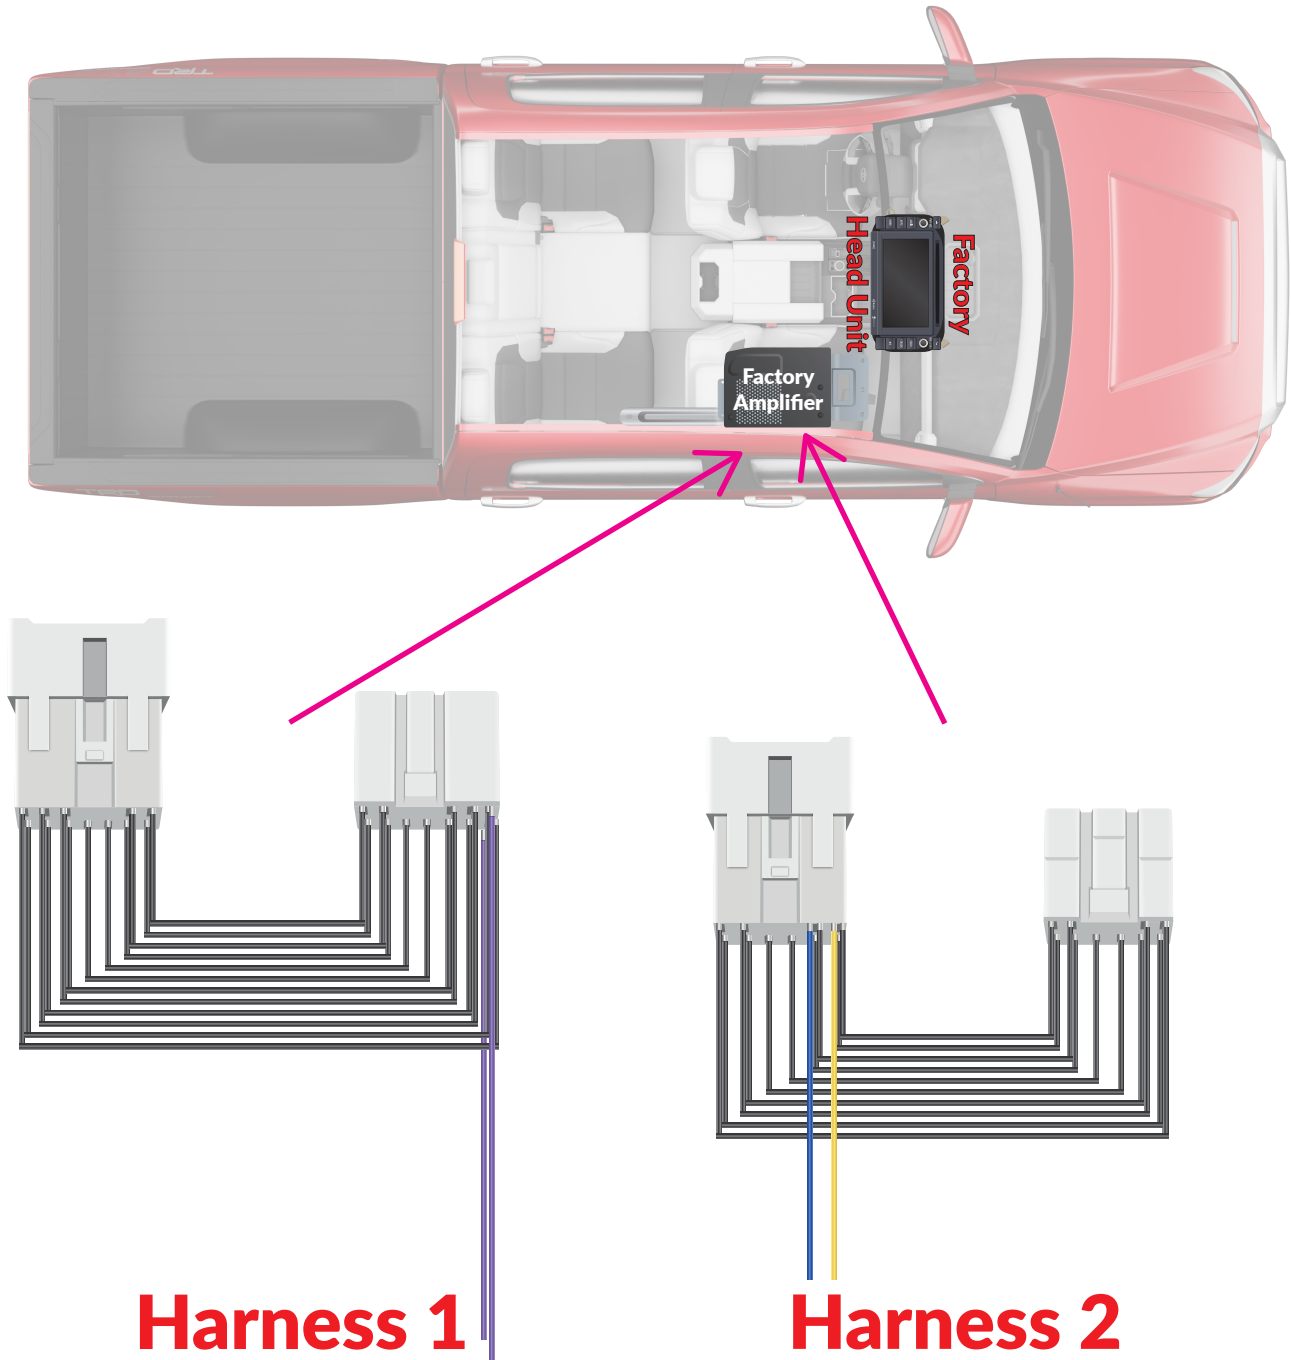



Harness 1 & 2 plug directly into your factory wiring under the passenger seat.

Install these harnesses according steps on the following pages


Remove Blue Molex Plugs to Amp Inputs

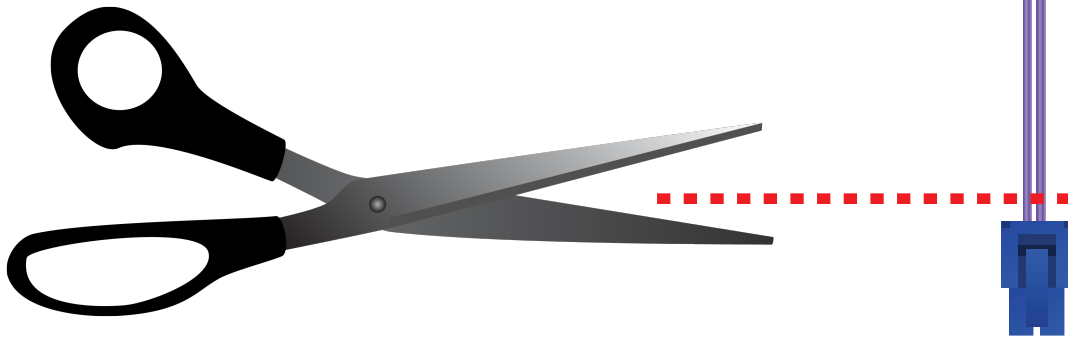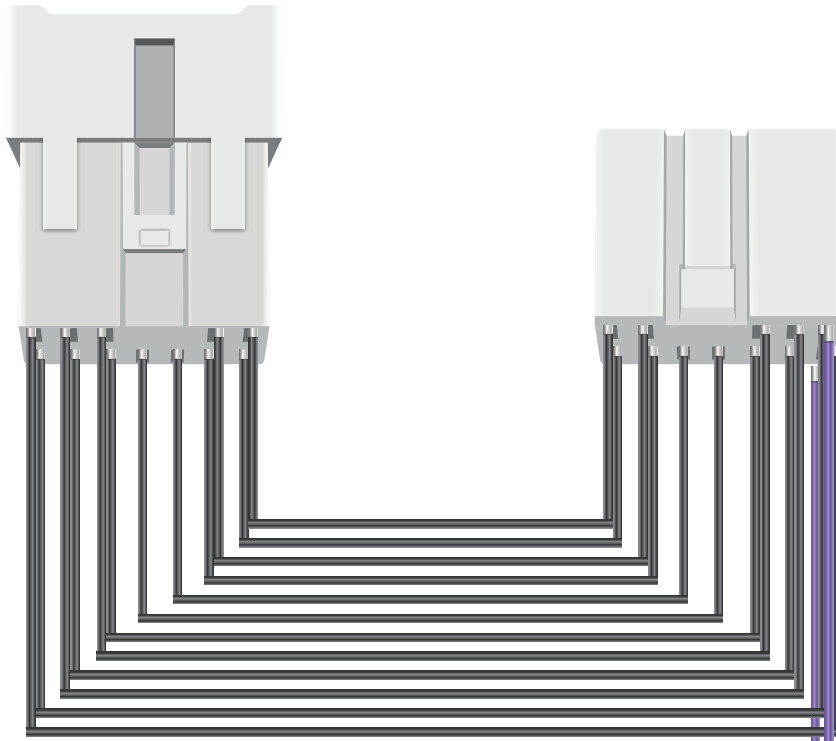

Remove Crimp Caps On Harness 2

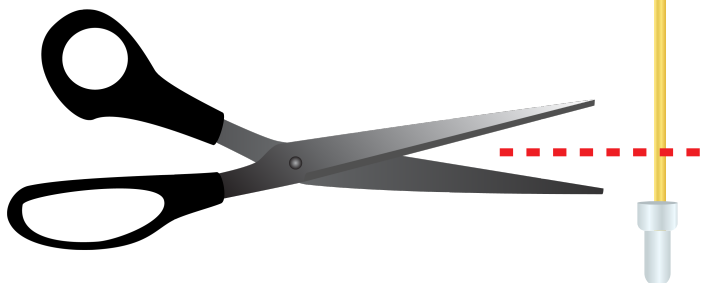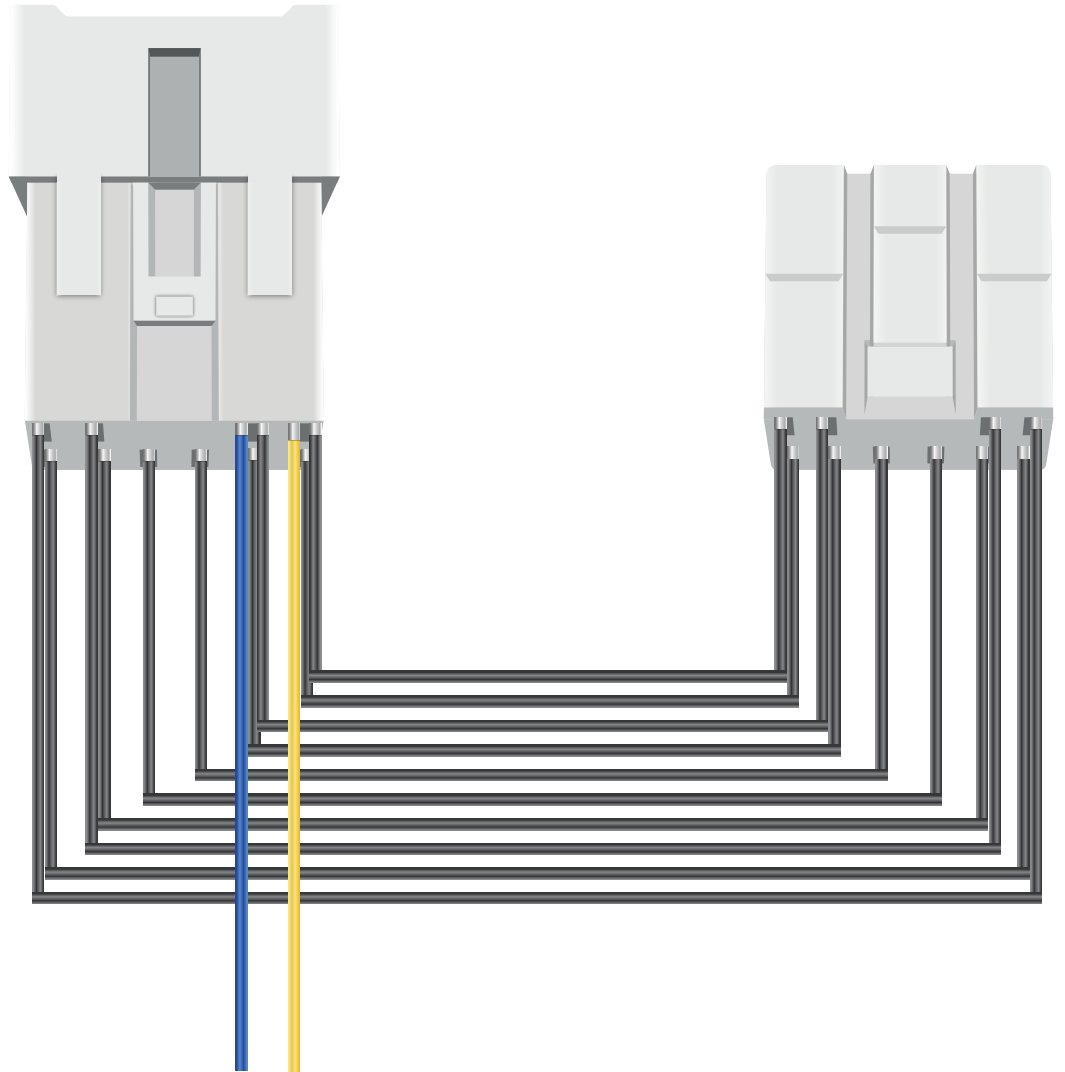


LC2i Pro Connections

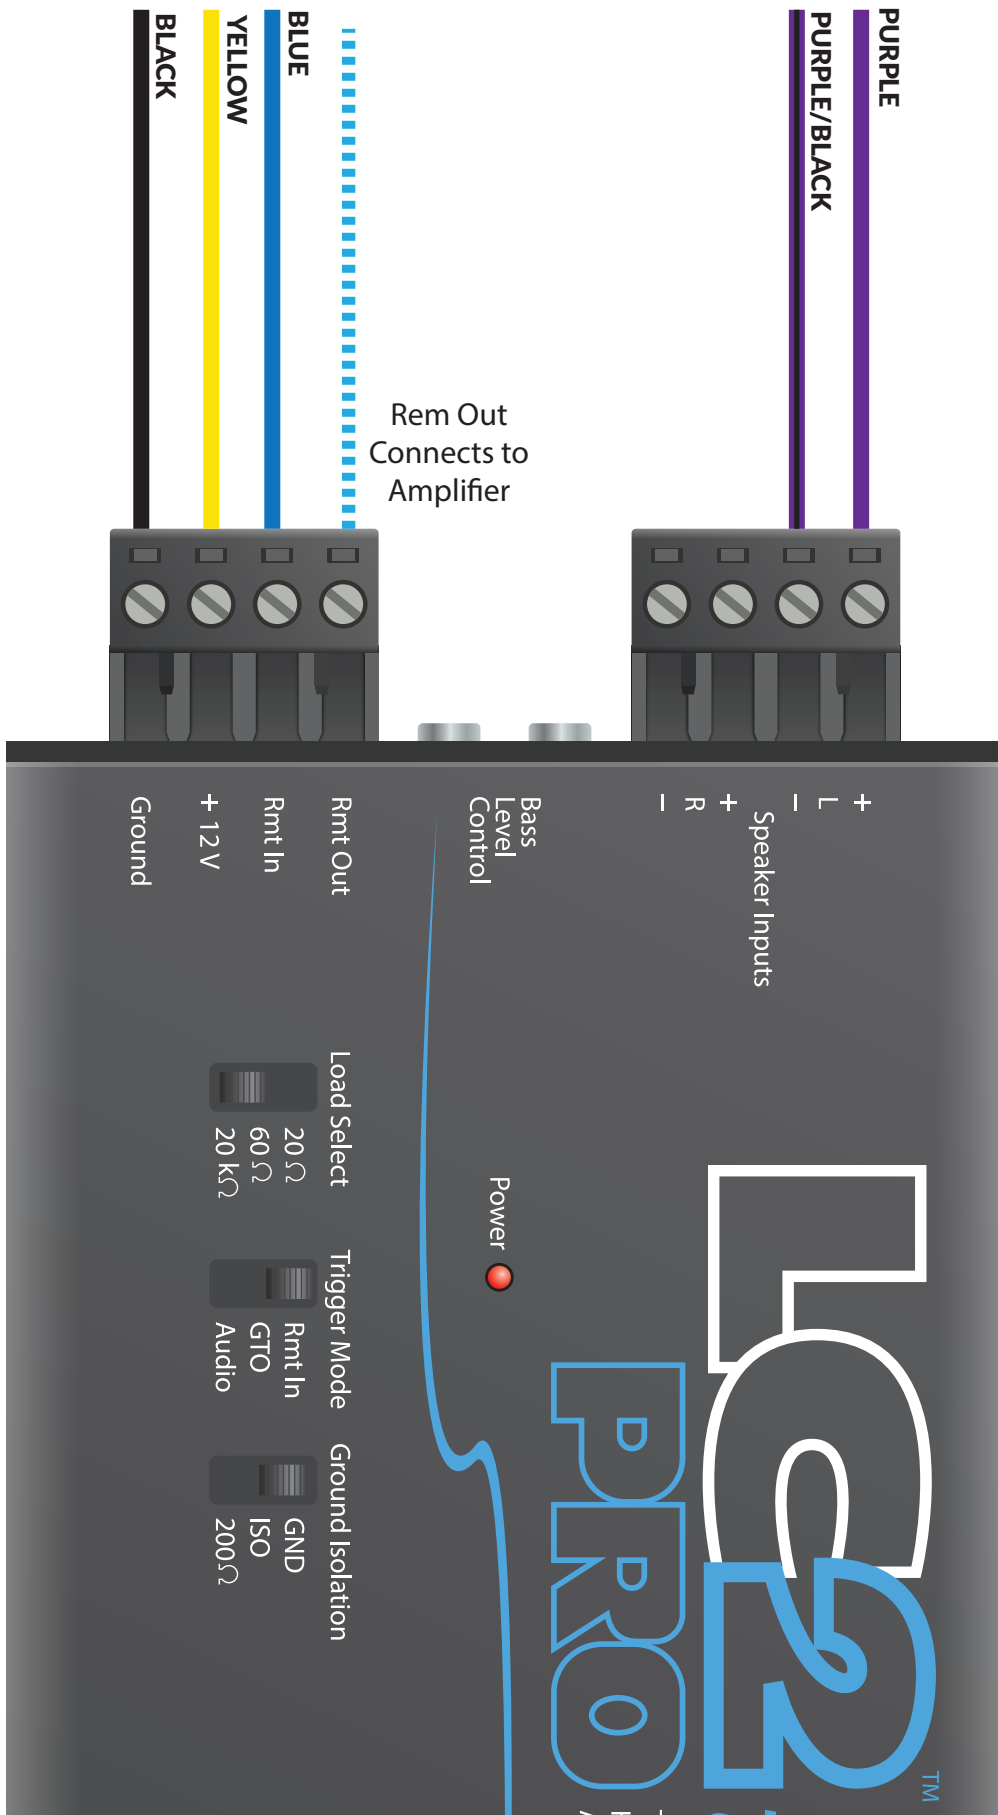


2014-2021 Tundra

Add a Subwoofer Complete Diagram

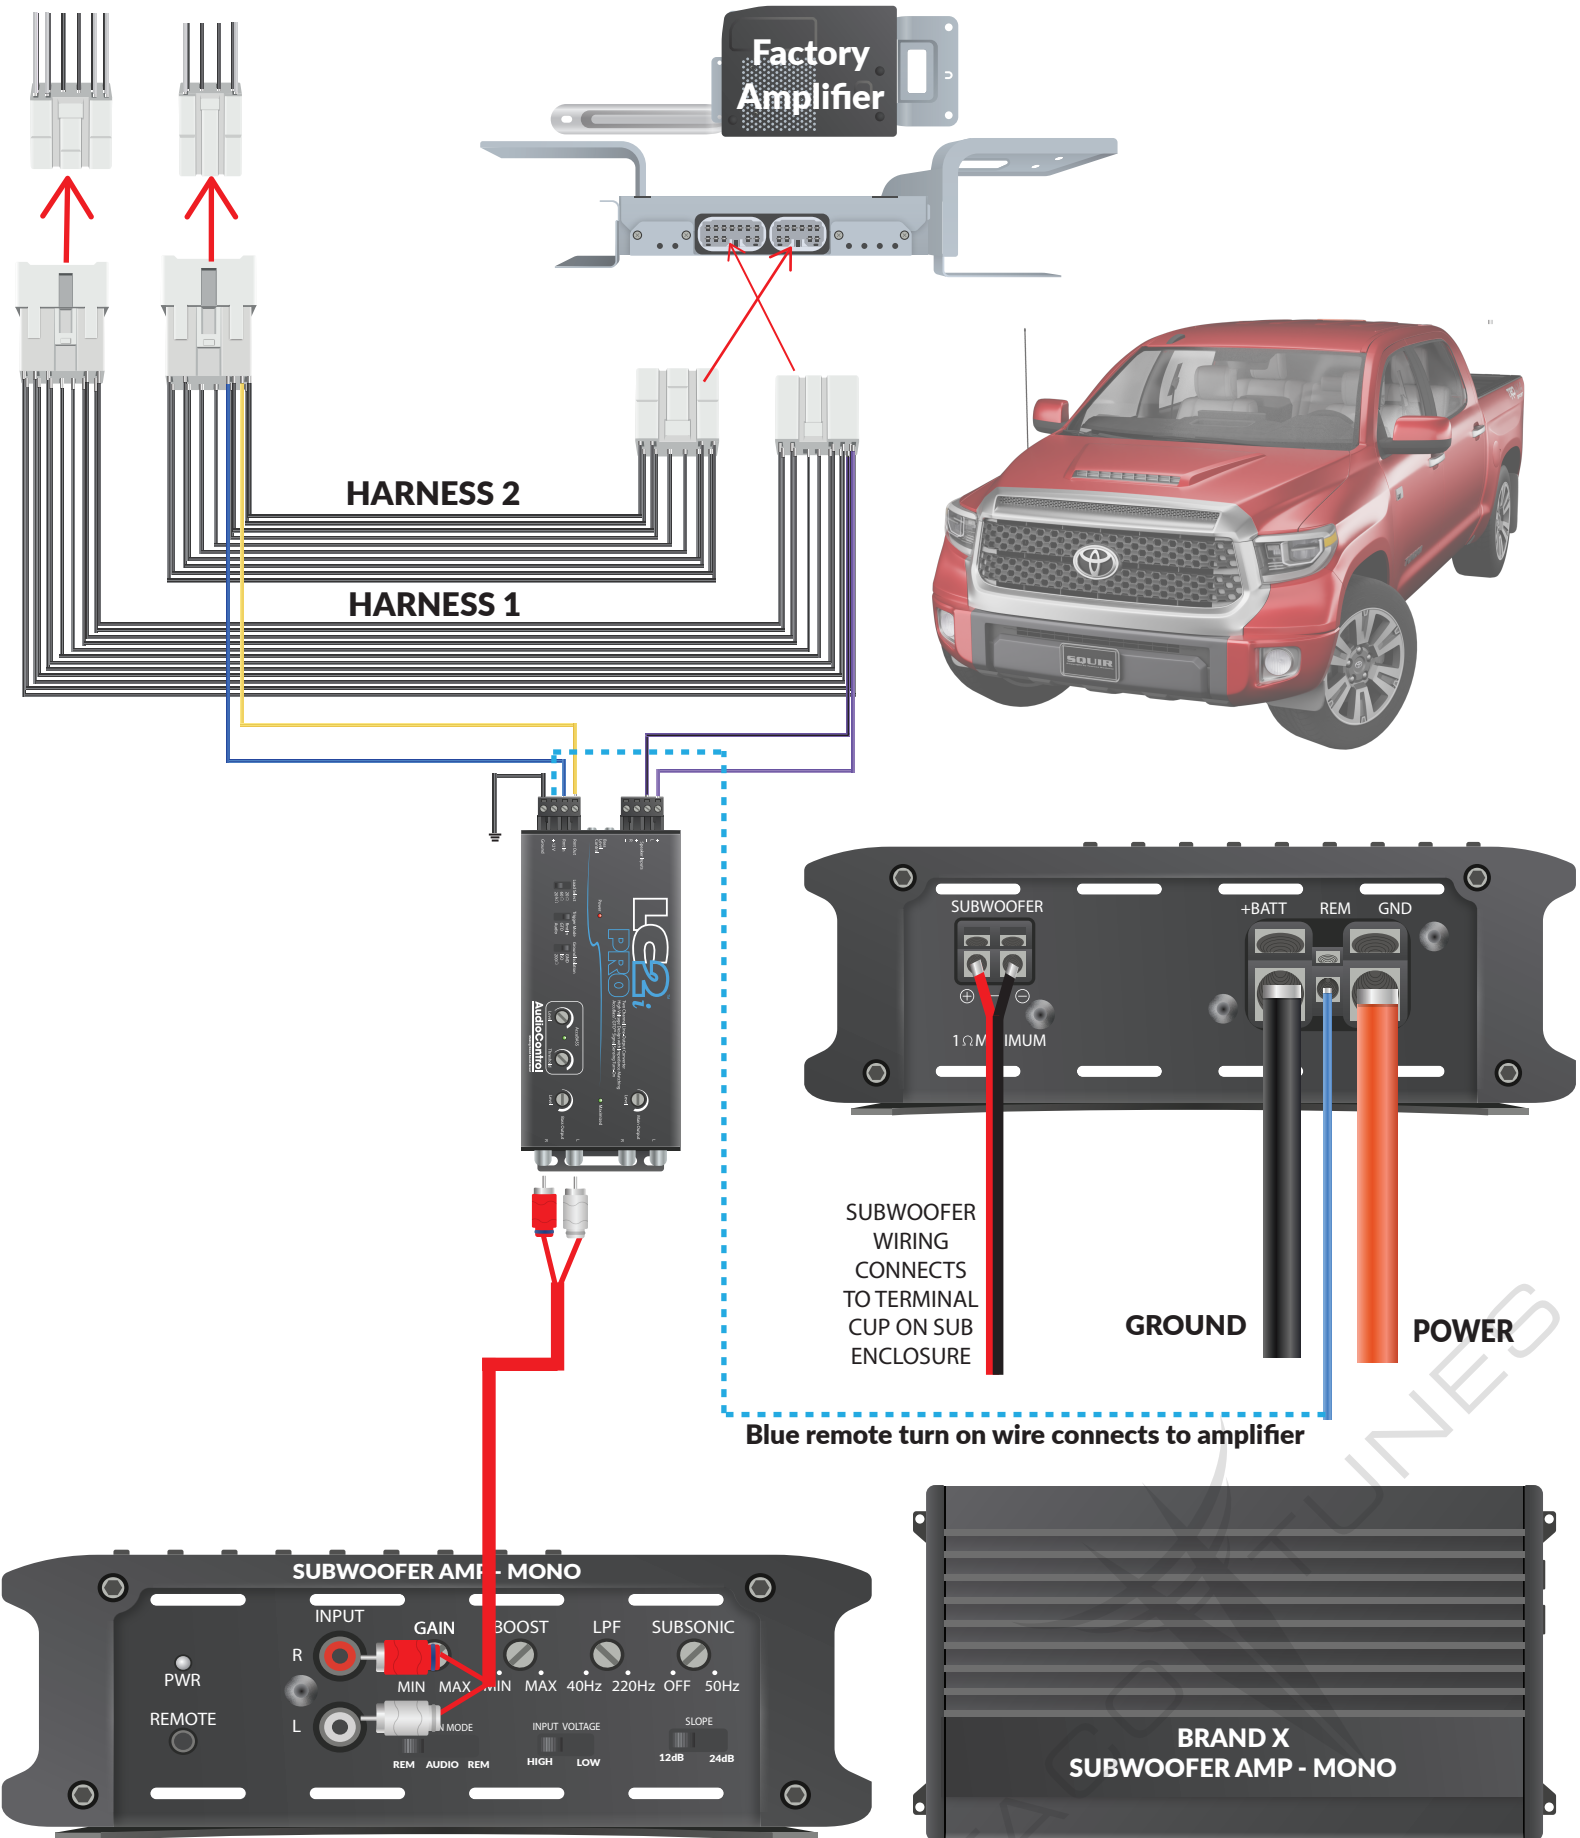

TXD SERIES SUBWOOFER AMPLIFIER CONNECTIONS

OUTPUT SIDE

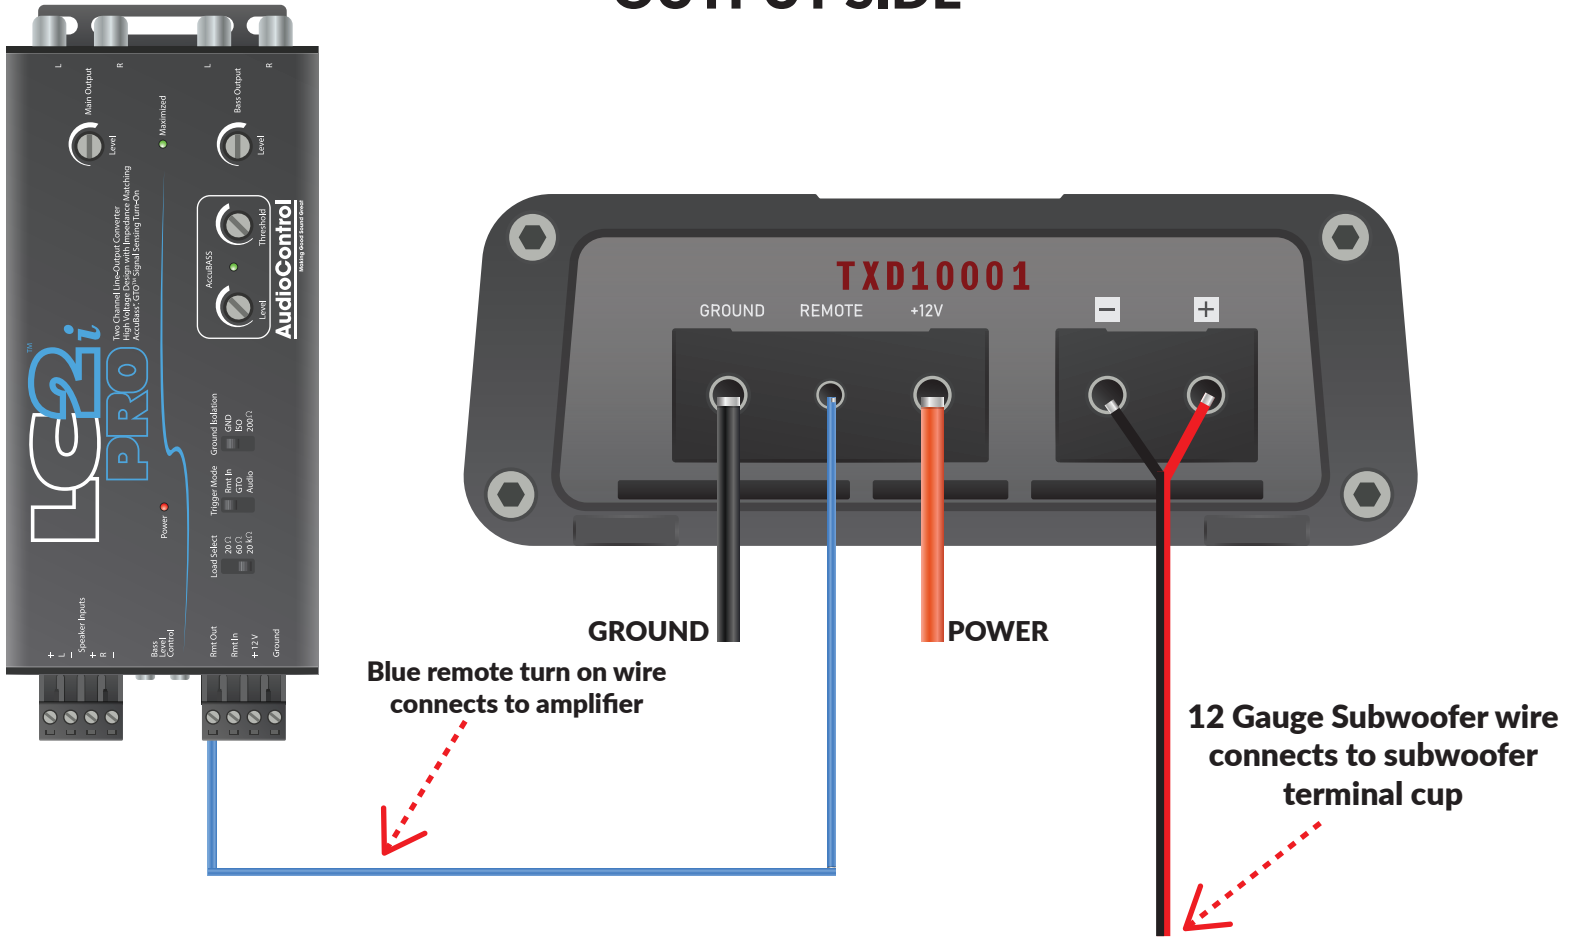

INPUT SIDE

