


2007-2013 Toyota Tundra Audio Upgrade


Plug & Play Harness Installation Manual

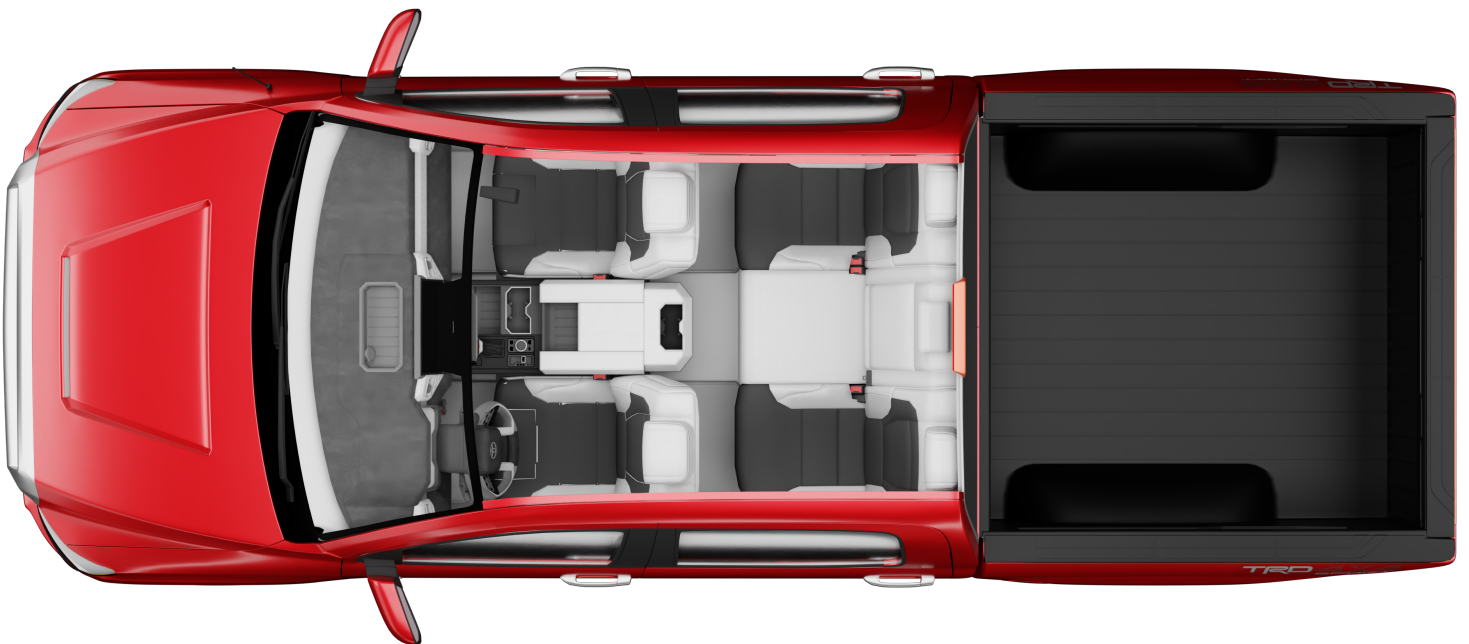

**Add 4 Channel & Subwoofer Amplifiers
to factory stereo**





PLUG & PLAY INTEGRATION OVERVIEW

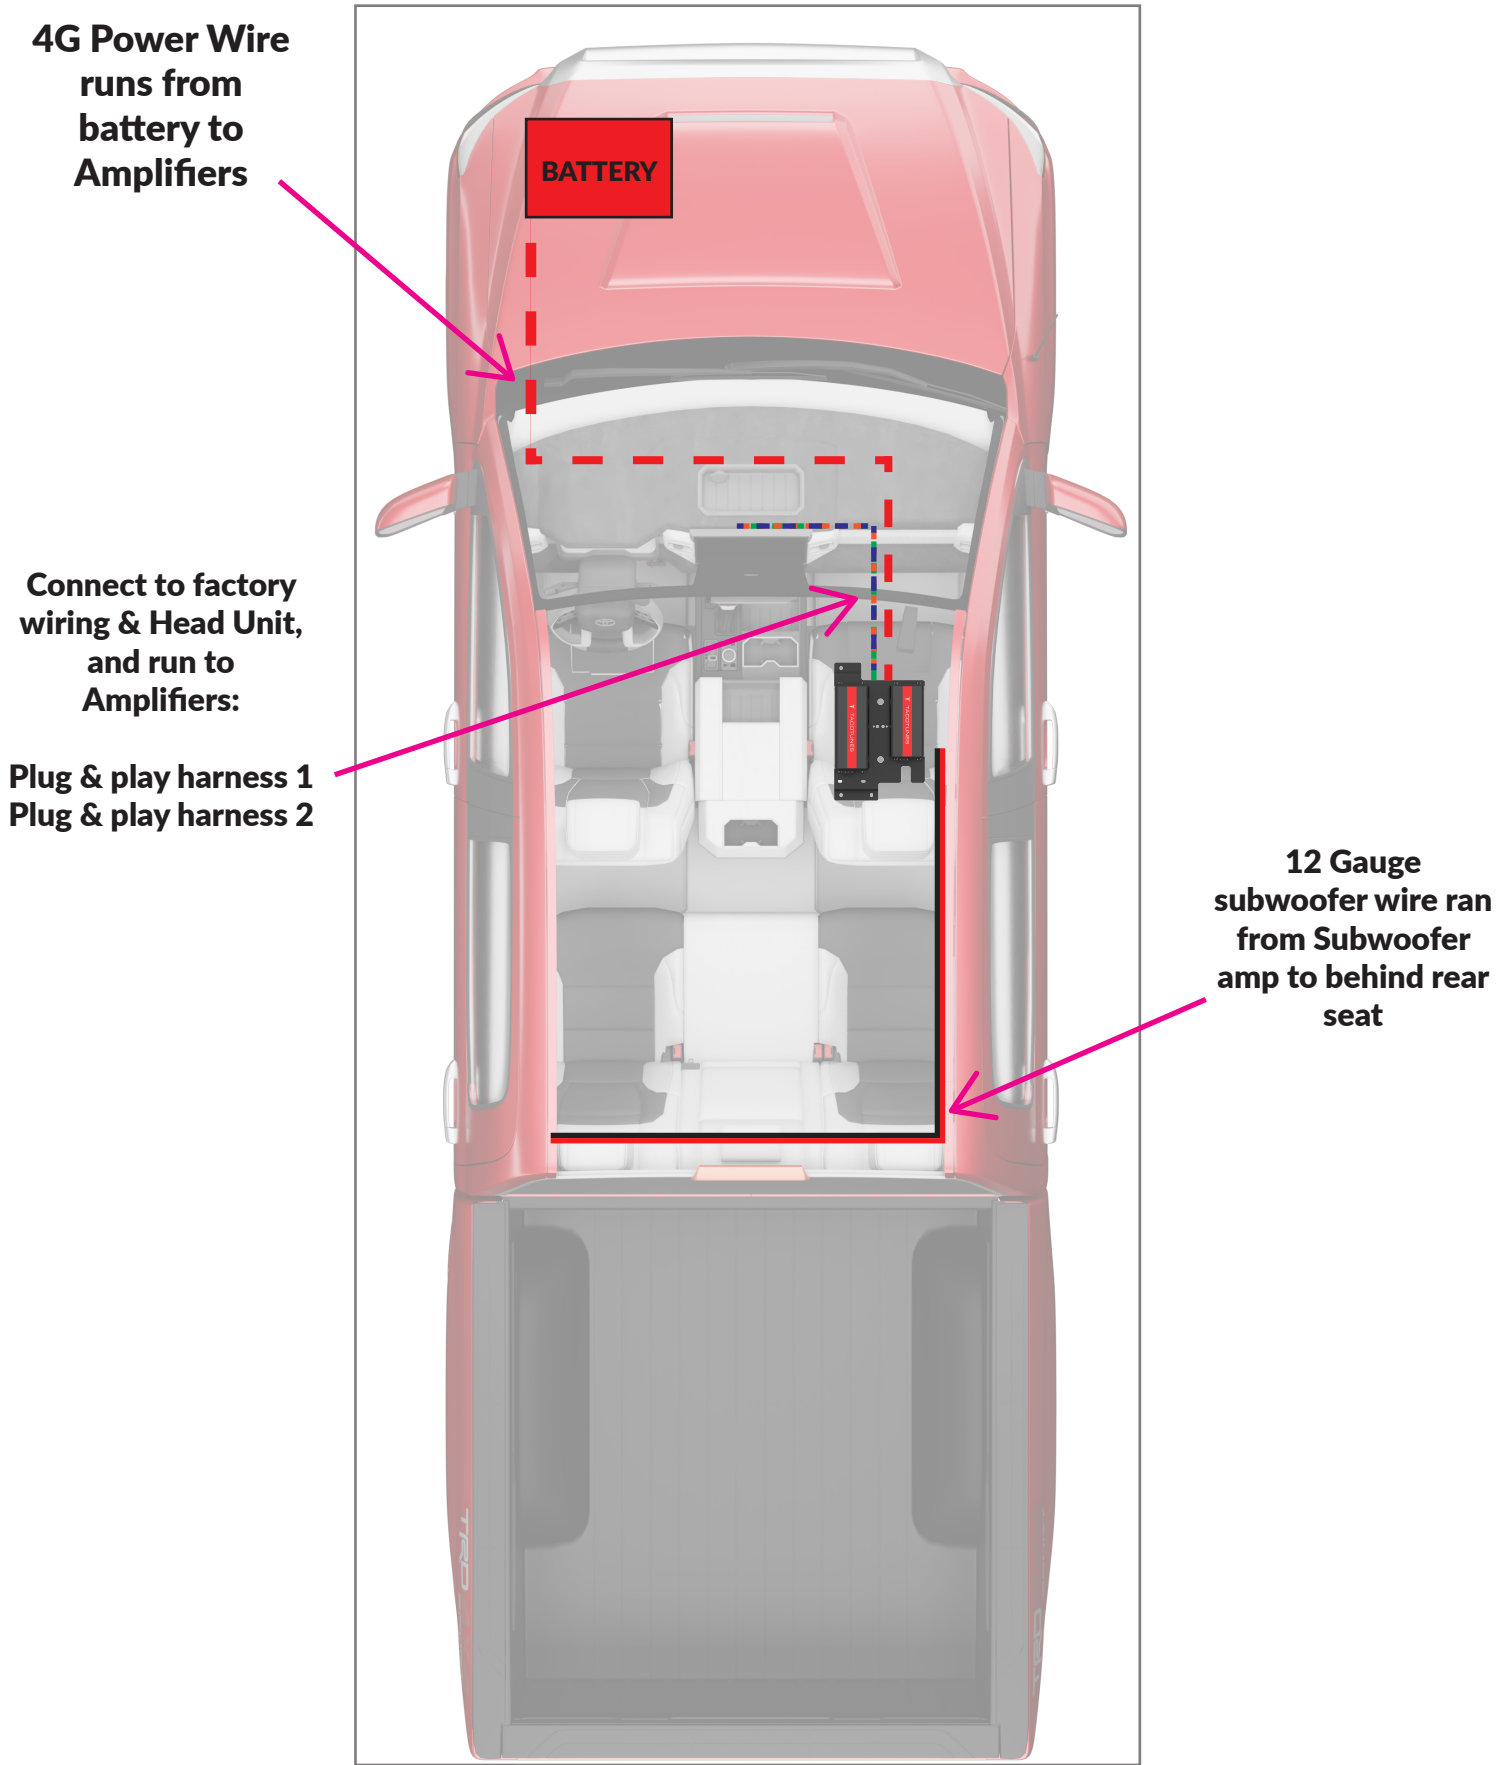


SECTION 1 -

Plug and Play Harness Integration

NO FACTORY AMP UNDER SEAT

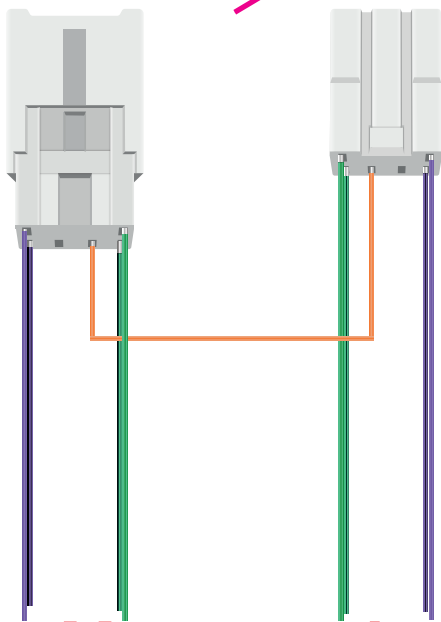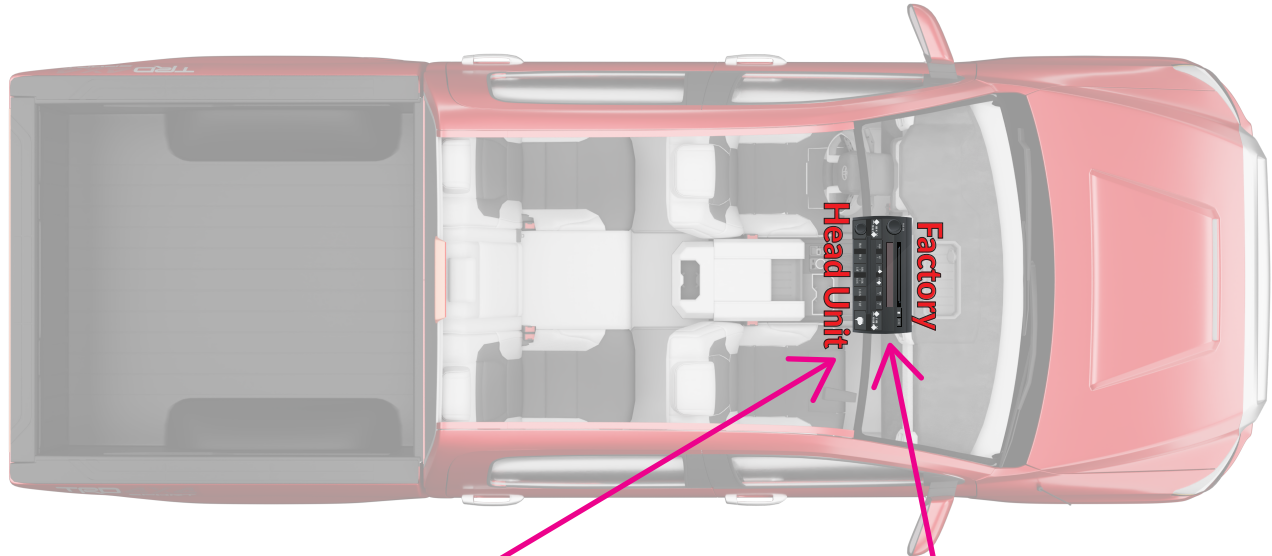

Harness 1

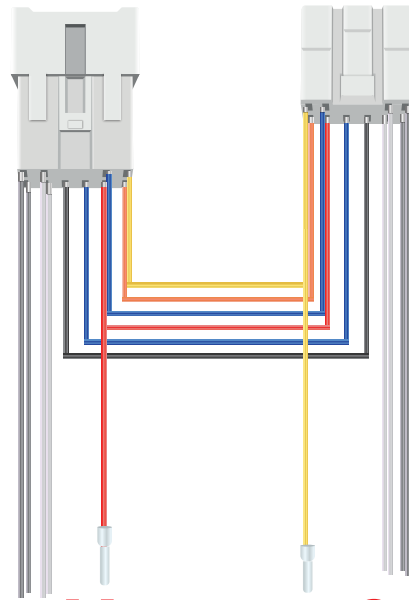


Harness 2


Harness 1 & 2 plug directly into the back of your factory head unit and dash wiring.

Install these harnesses according steps on the following pages

REMOVE CRIMP CAPS & MOLEX PLUGS

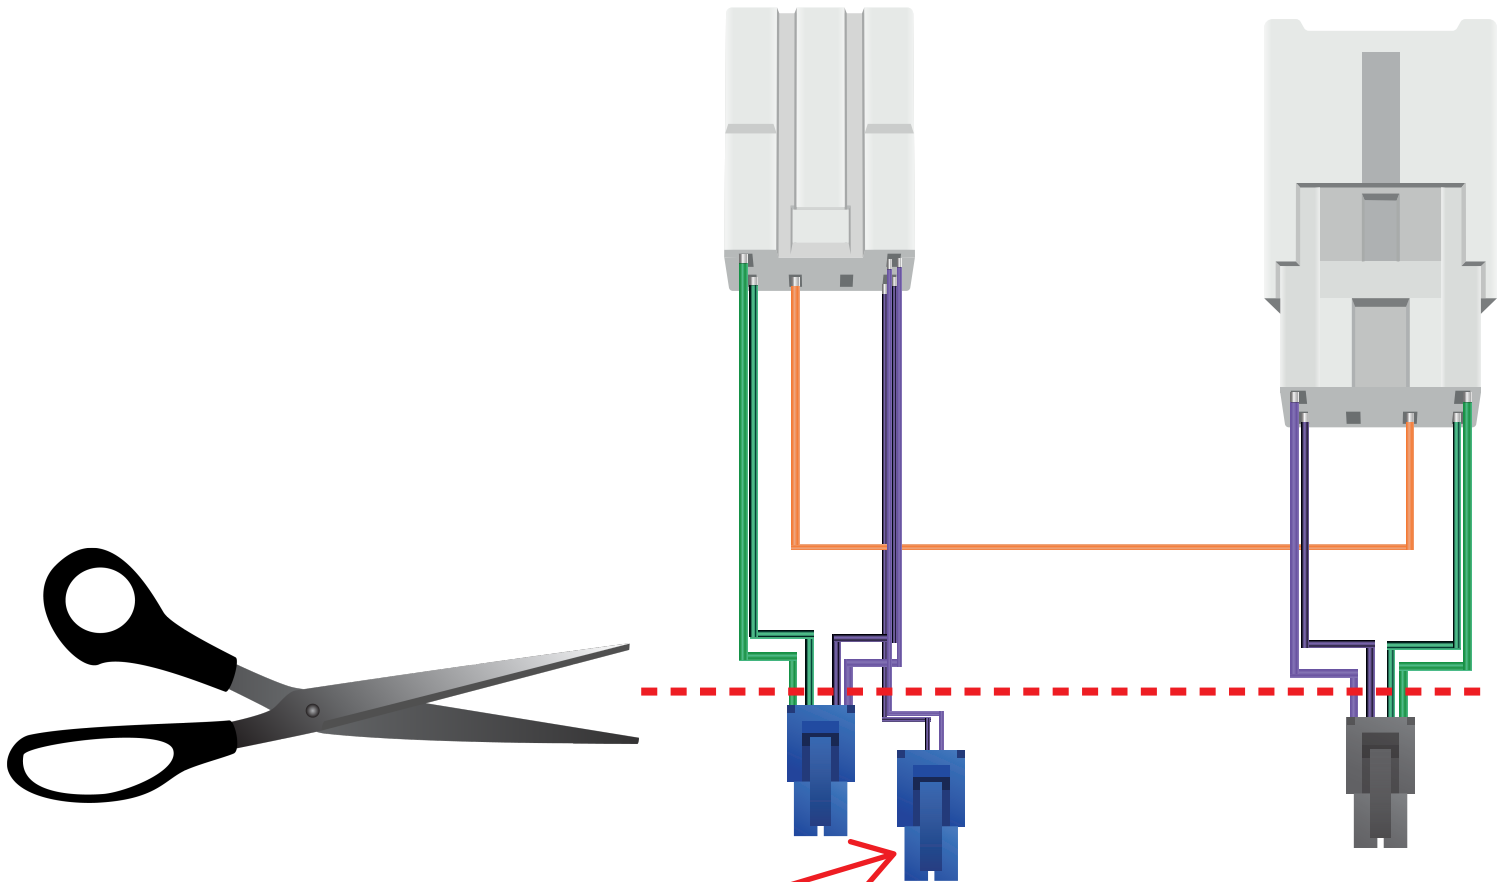

NOT USED - DO NOT REMOVE

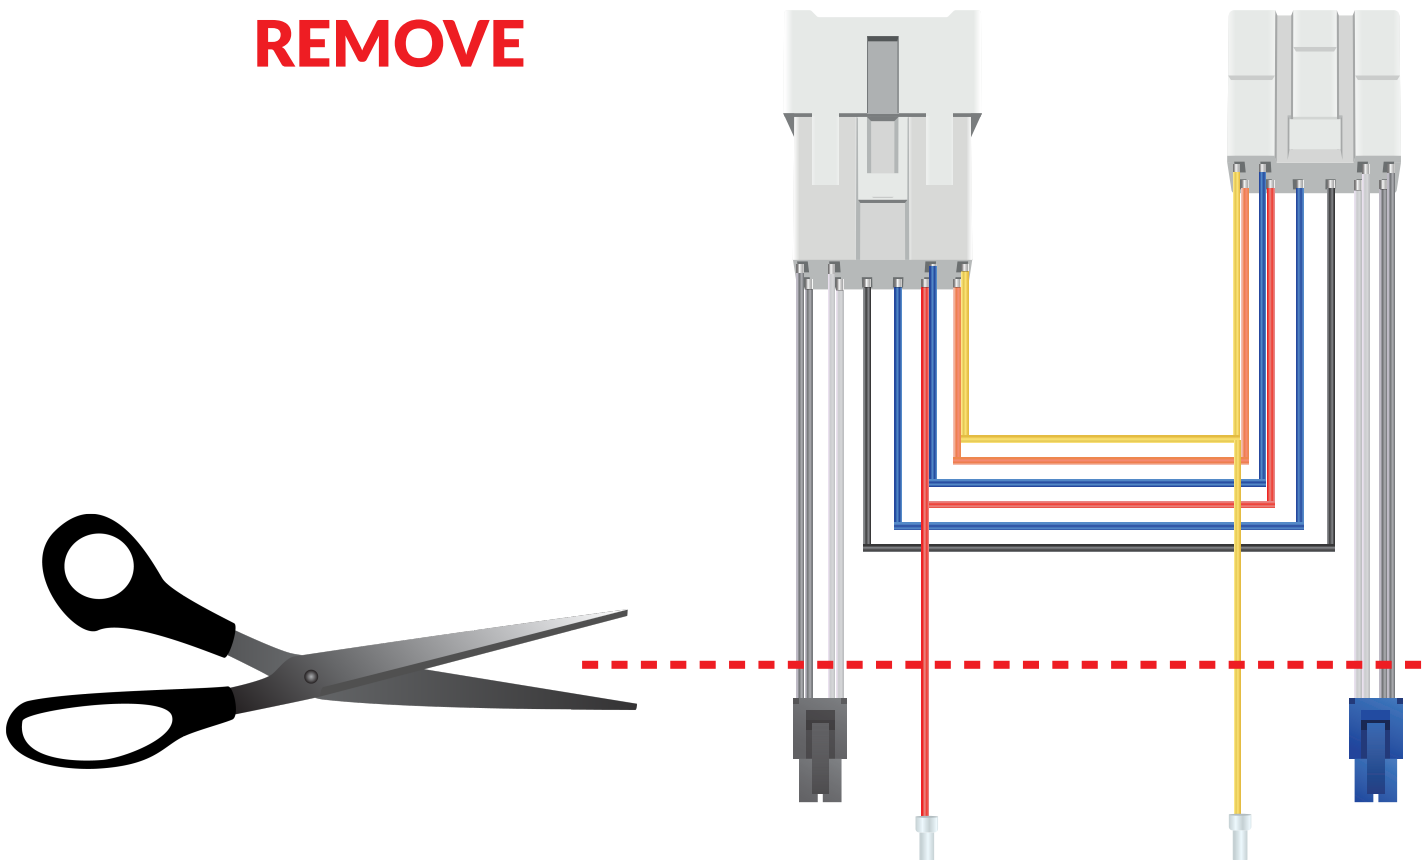


SECTION 1a -


REMOVE FACTORY AMP

Remove Factory Head Unit

Take photo of head unit connections for reference when re-installing

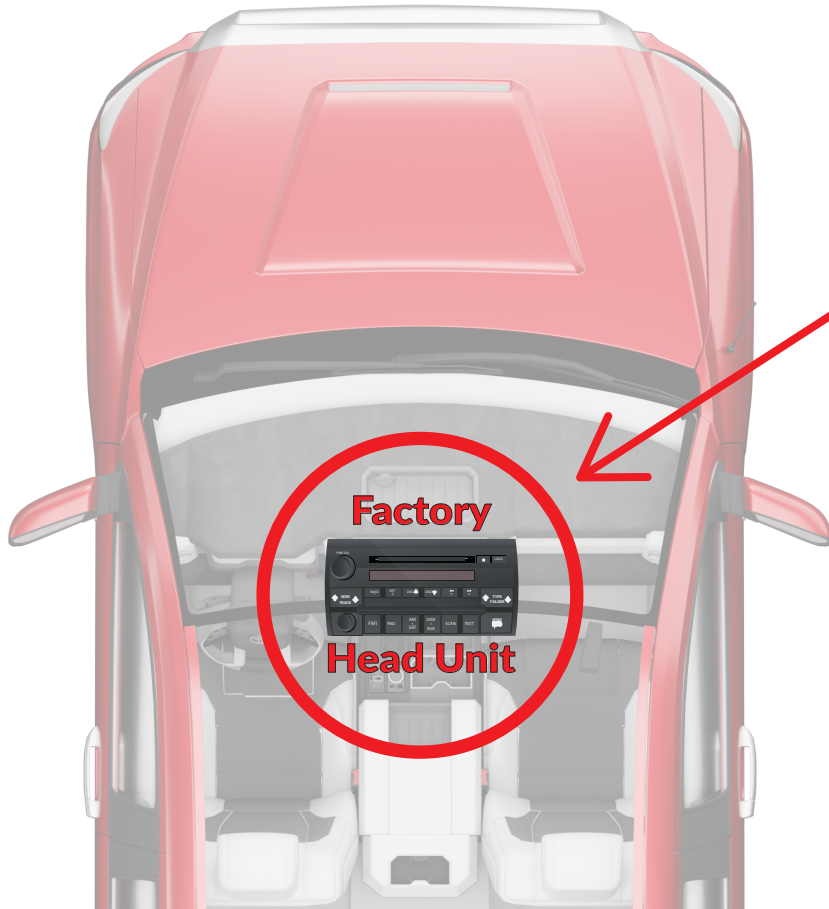

Plug and Play harnesses connect to 10 & 6 pin connections

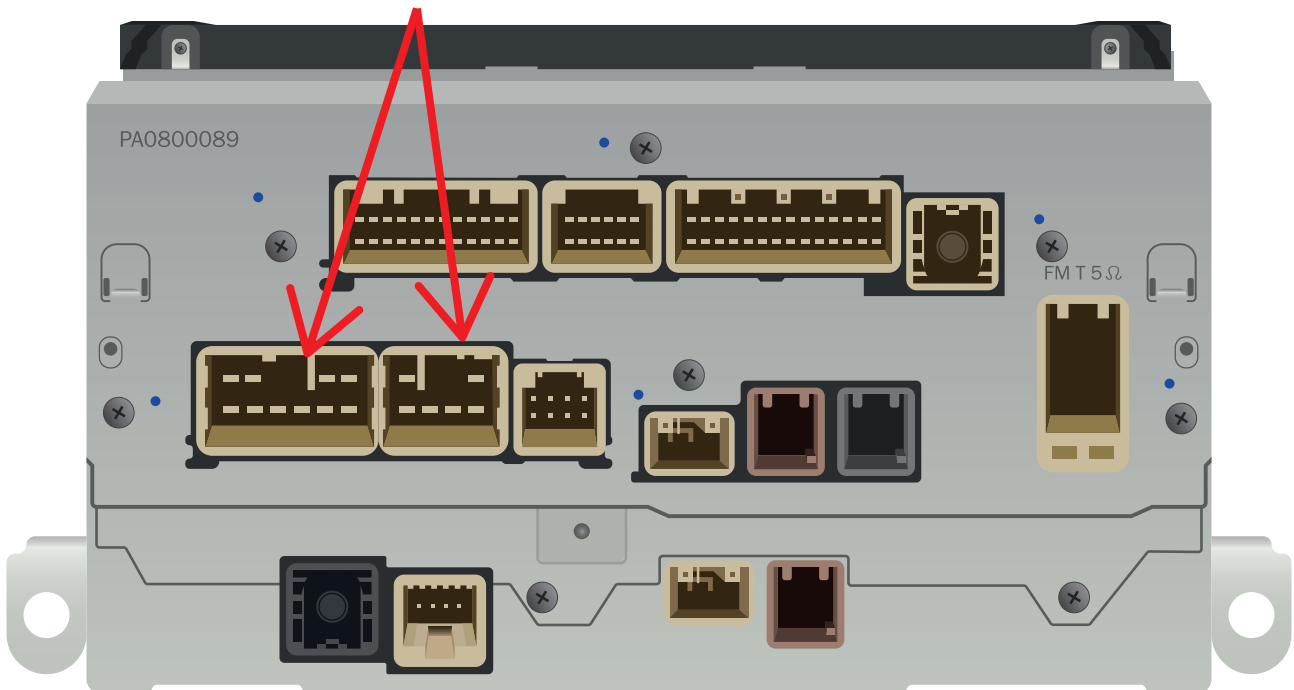


SECTION 1b -

CONNECT PLUG AND PLAY WIRING

Stock Wiring
(Inside dashboard)


Stock Wiring
(Inside dashboard)

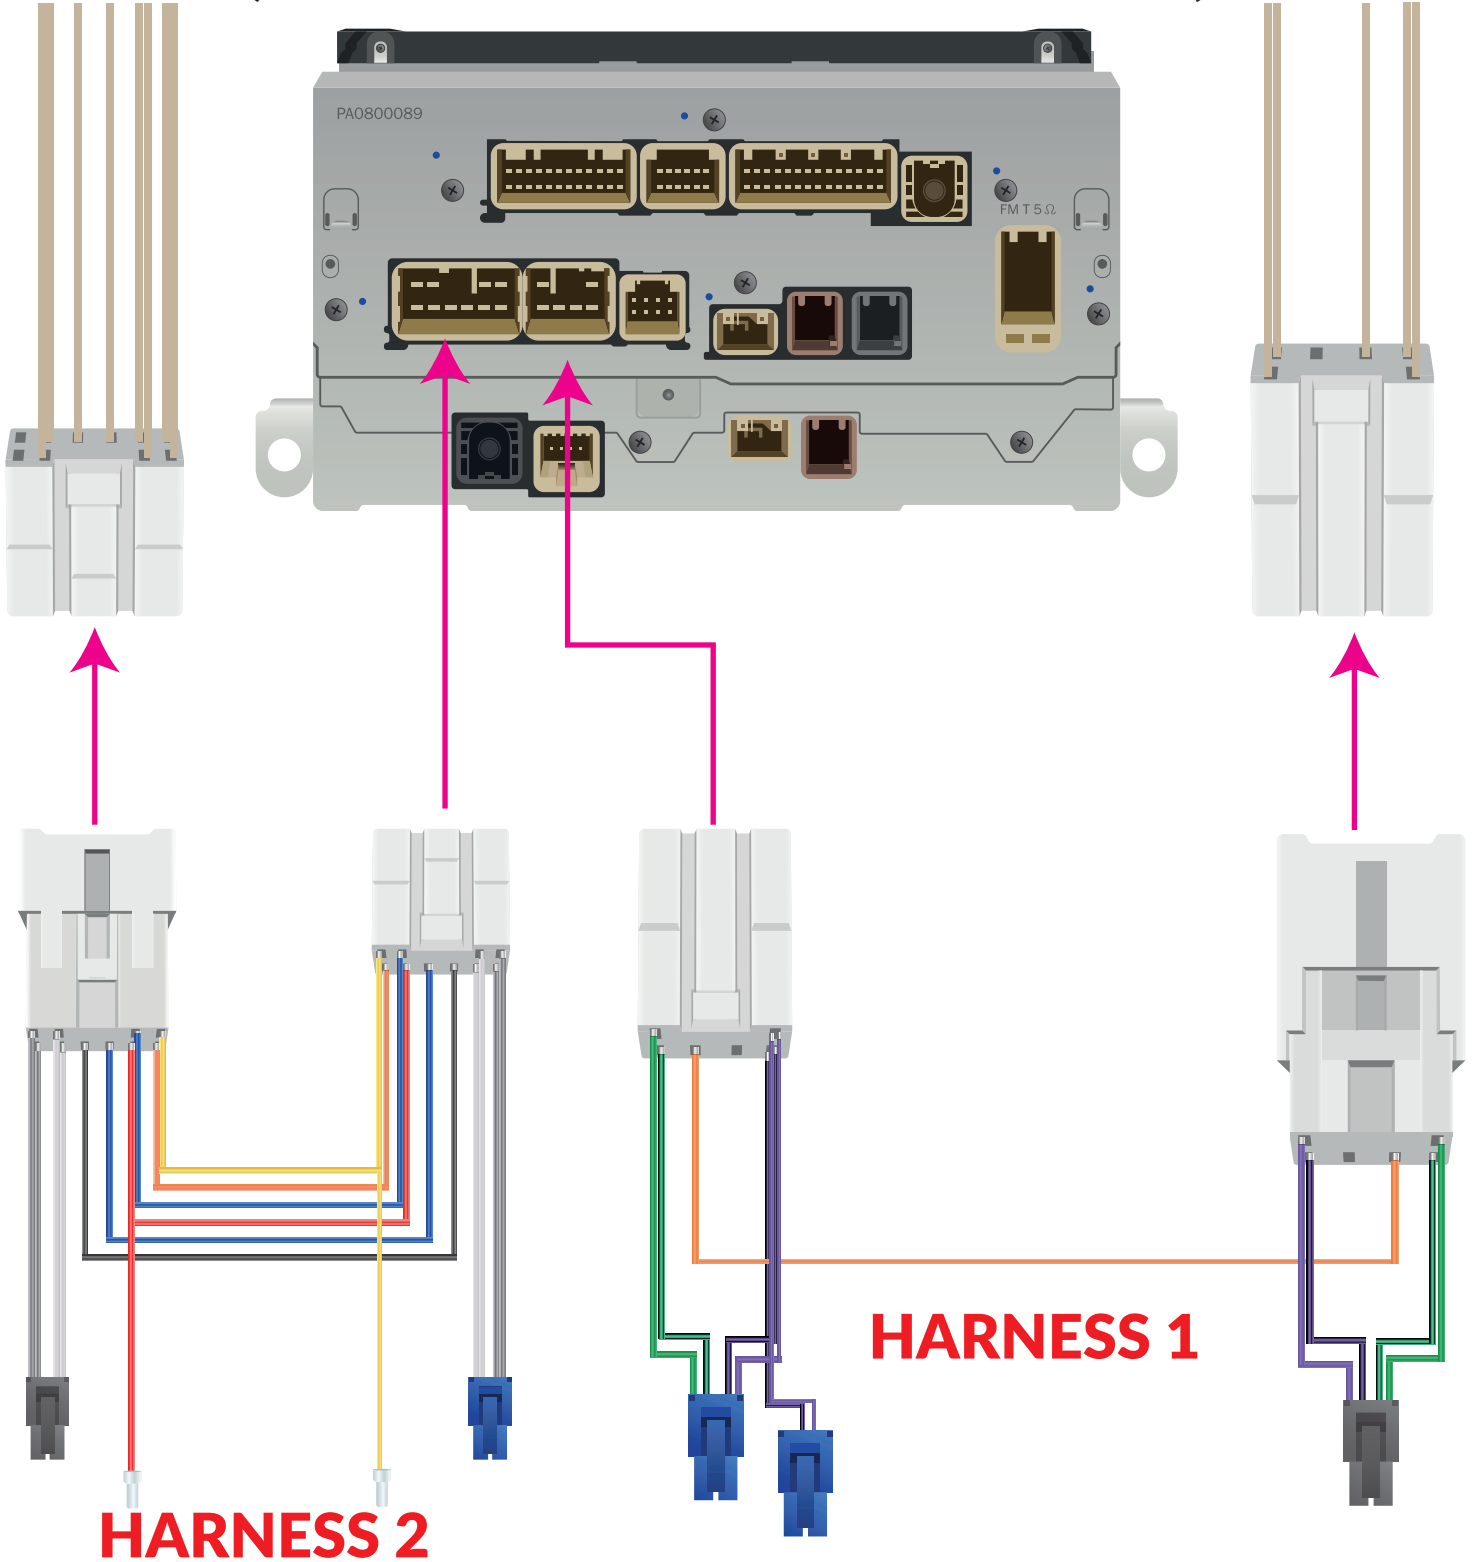

HARNESS 2


HARNESS 1

PLUG AND PLAY HARNESS CONNECTIONS - NTUNE6

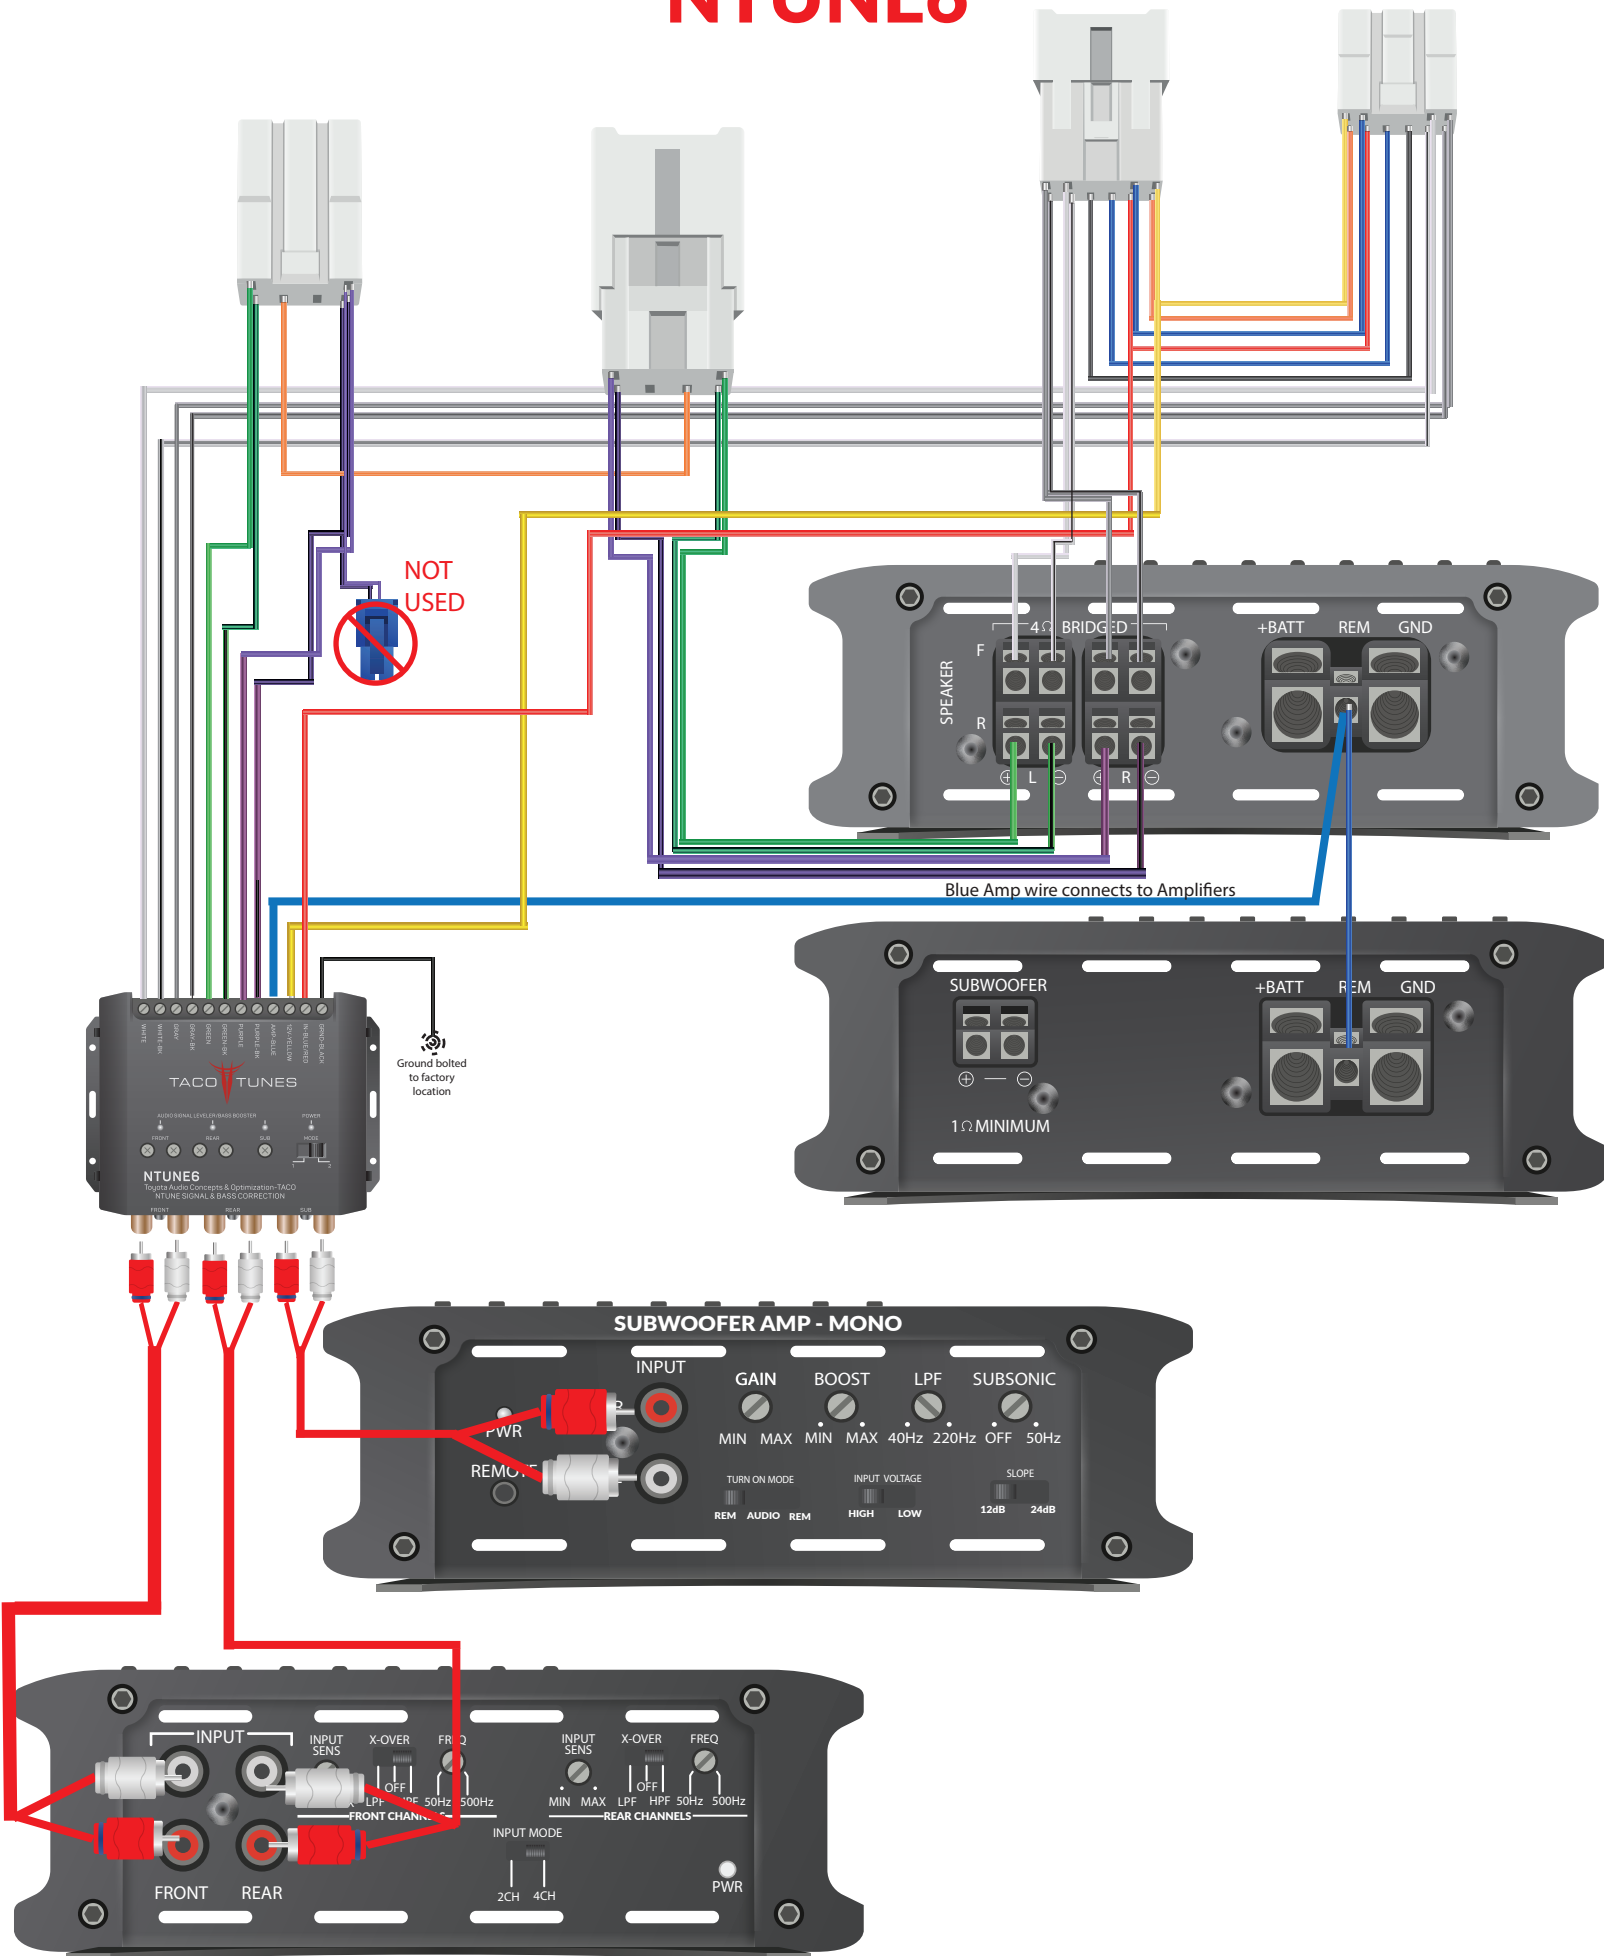


NTUNE6

Color Code/ wire harness connections

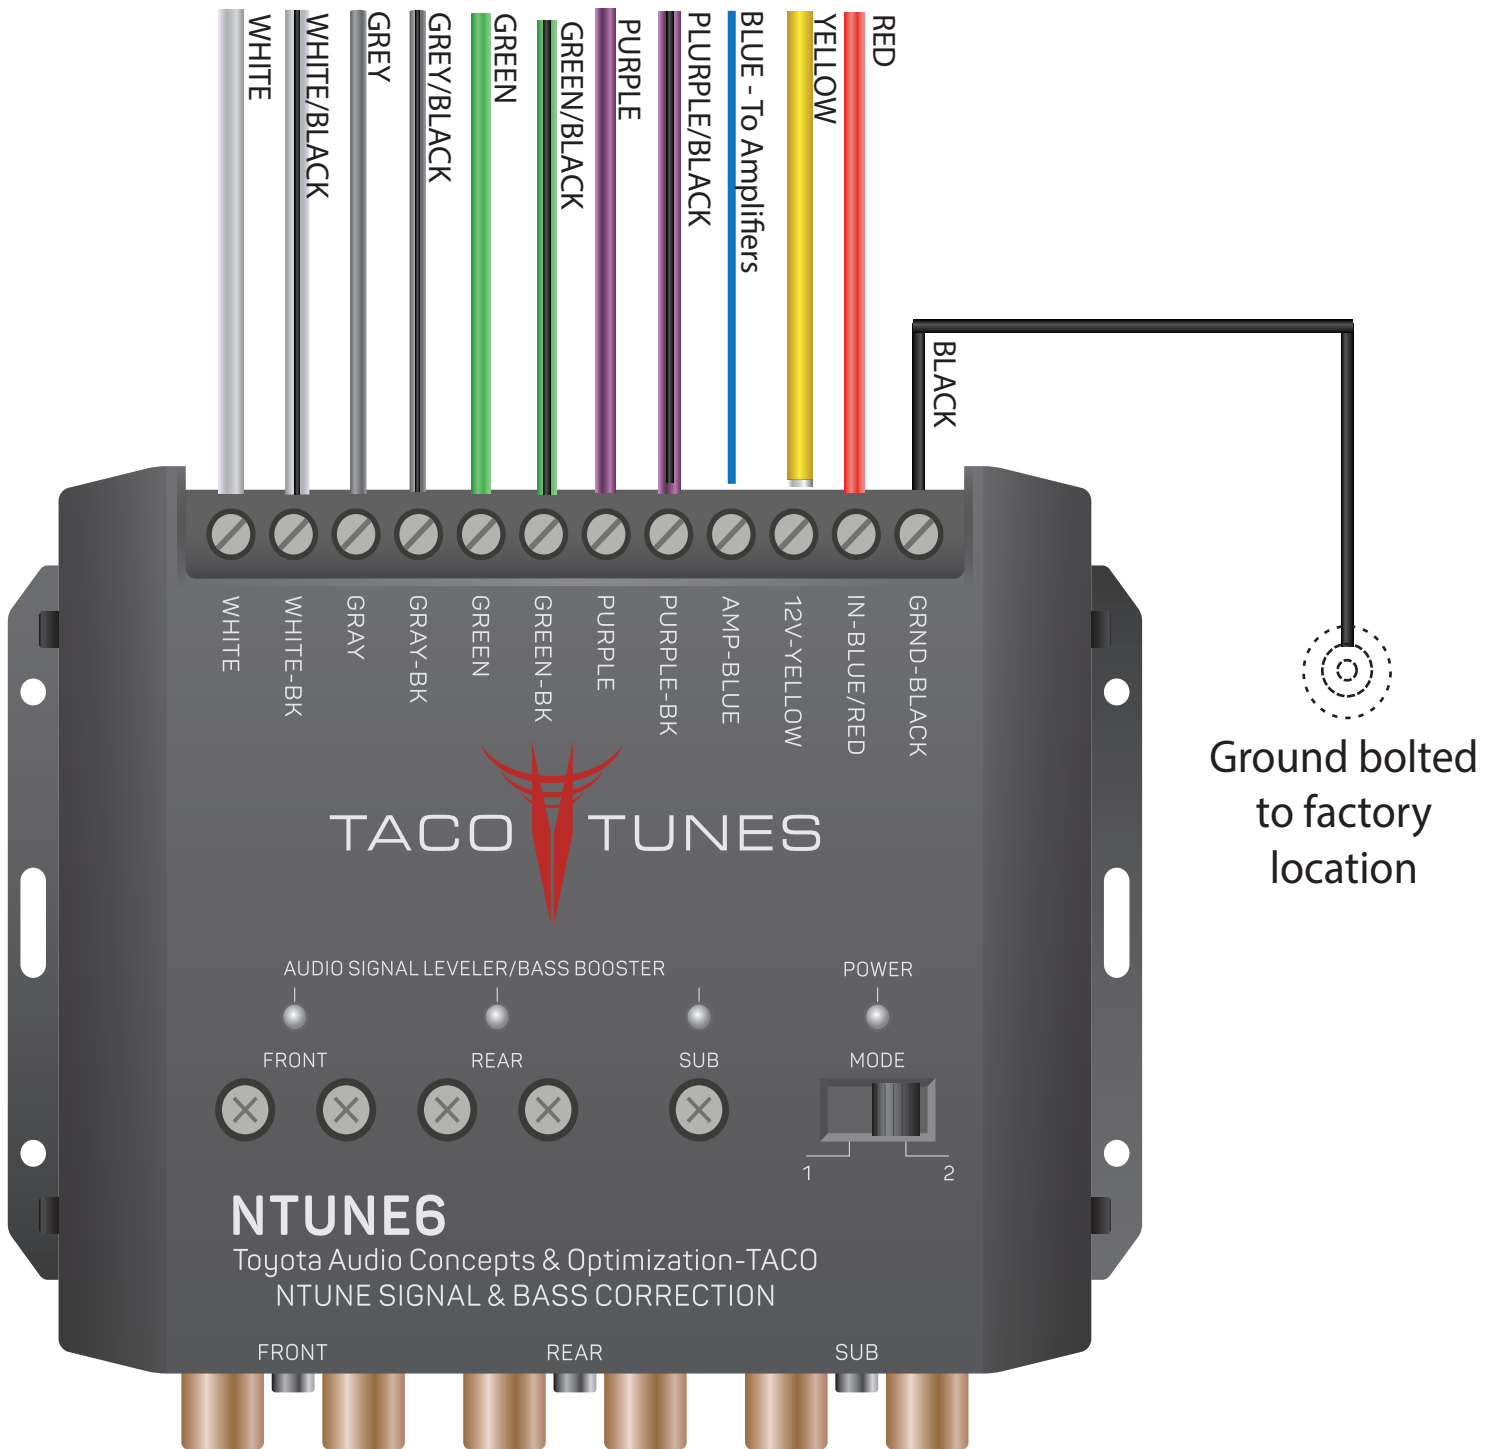

PLUG AND PLAY HARNESS CONNECTIONS -

LC5i Pro

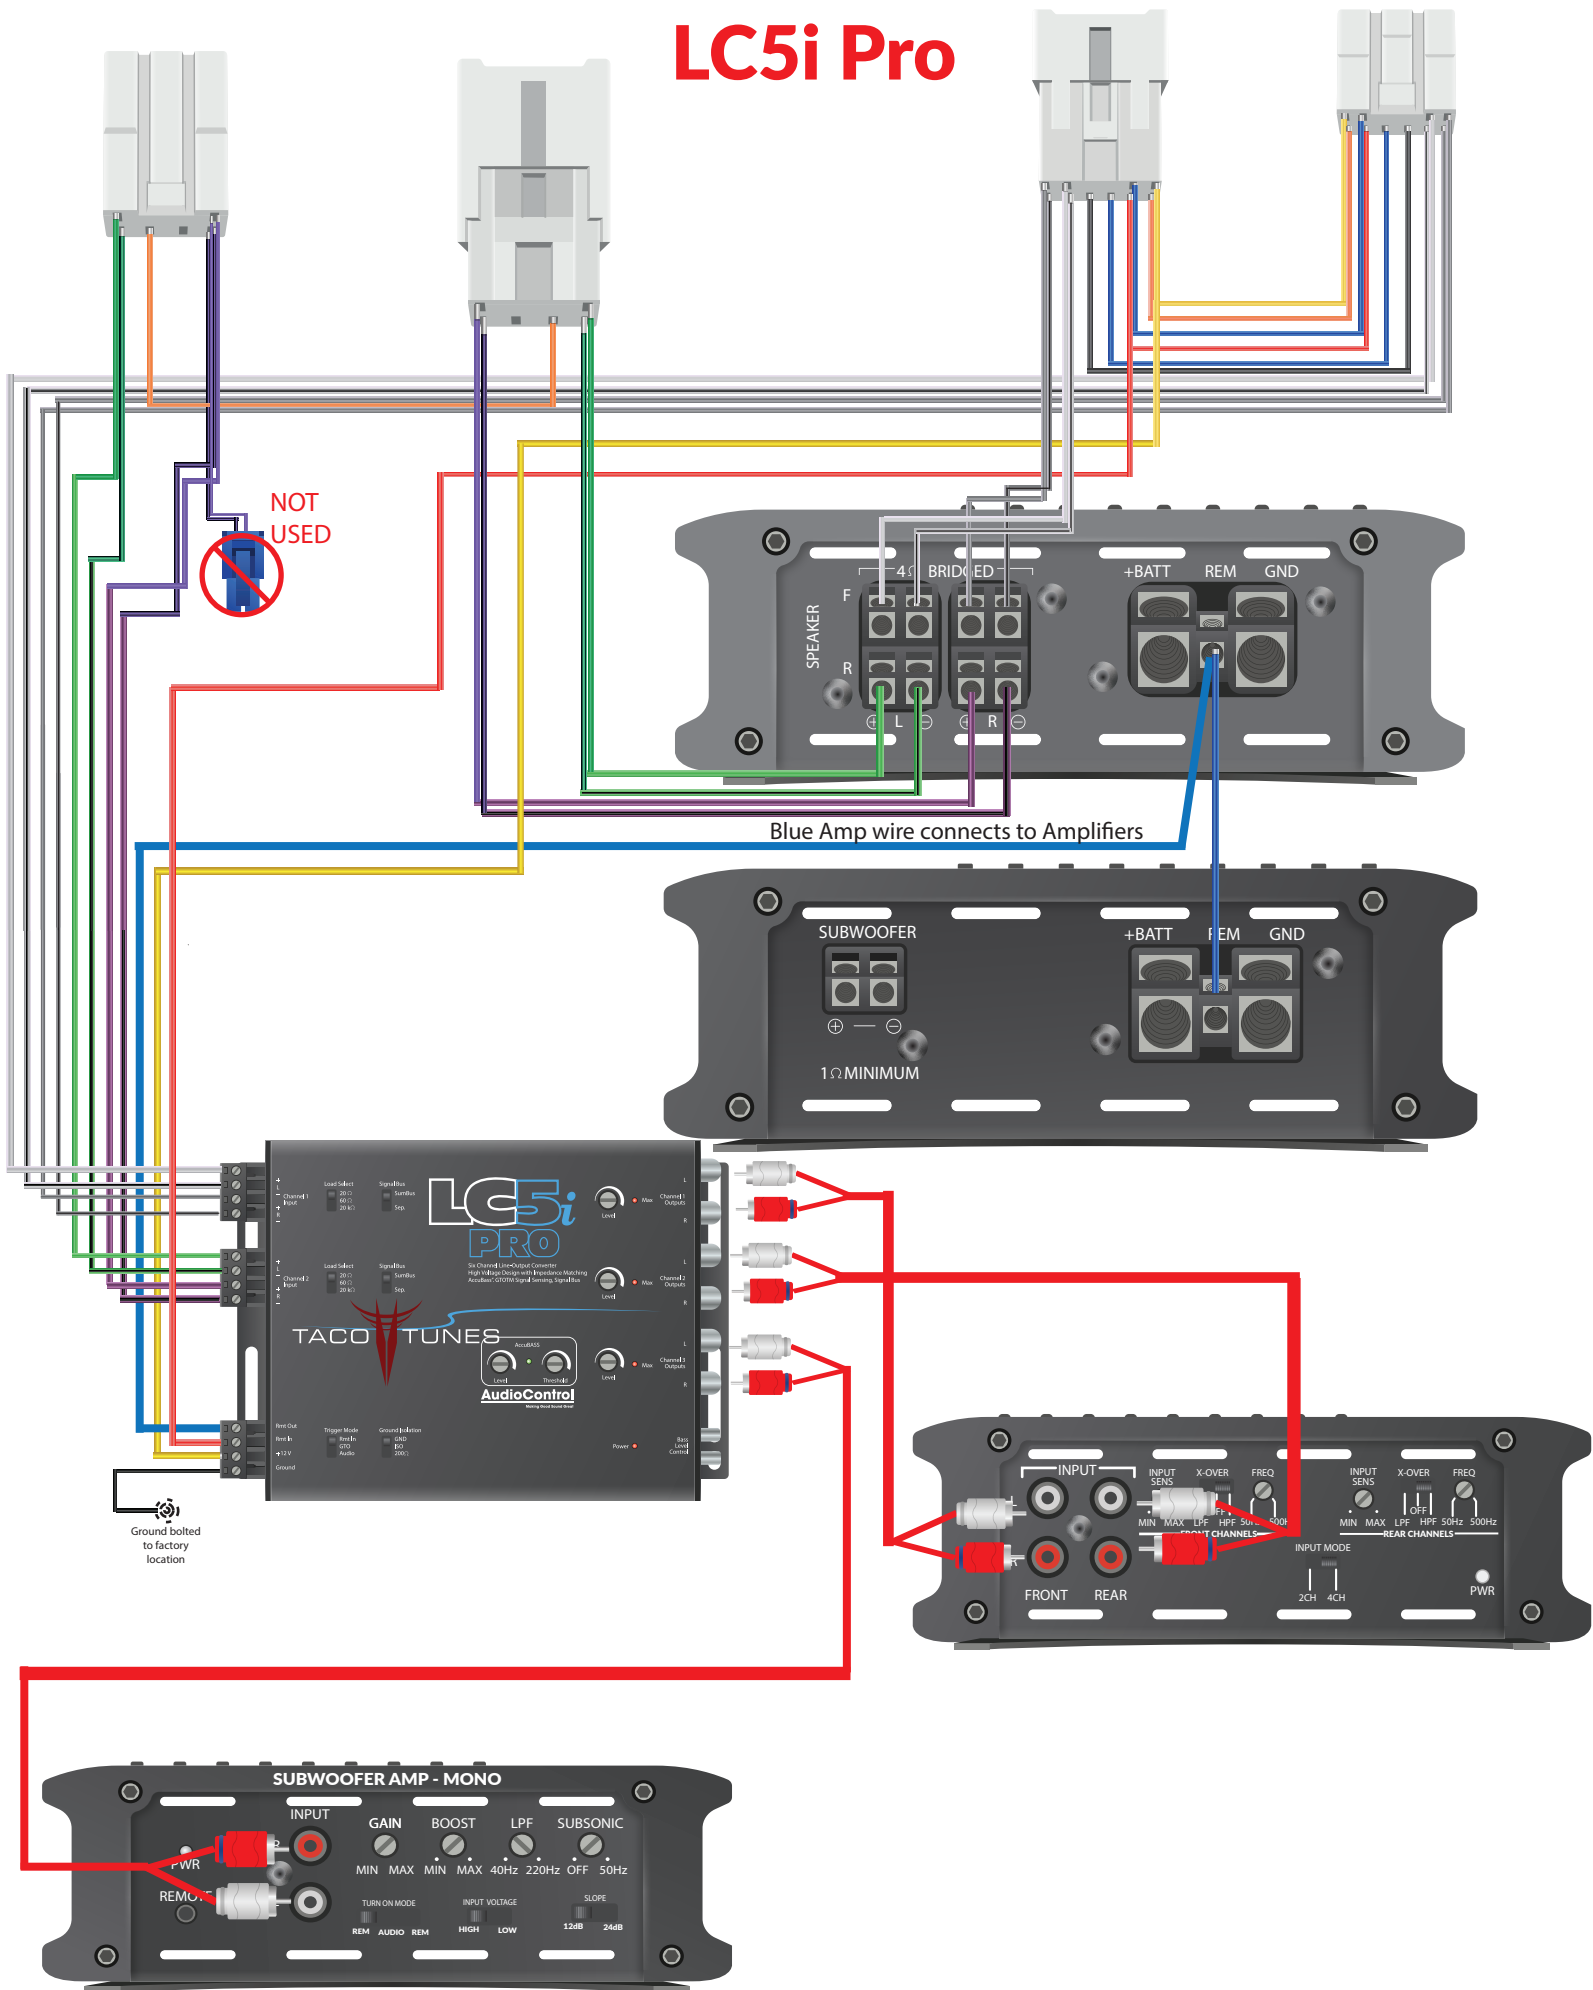

LC5i PRO

Color Code/ wire harness connections

