

2014-2021 CrewMax Tundra

BASE AUDIO


“STARTER”

Add a Subwoofer

WITH Factory Amp Under Passenger Seat



Installation Diagram

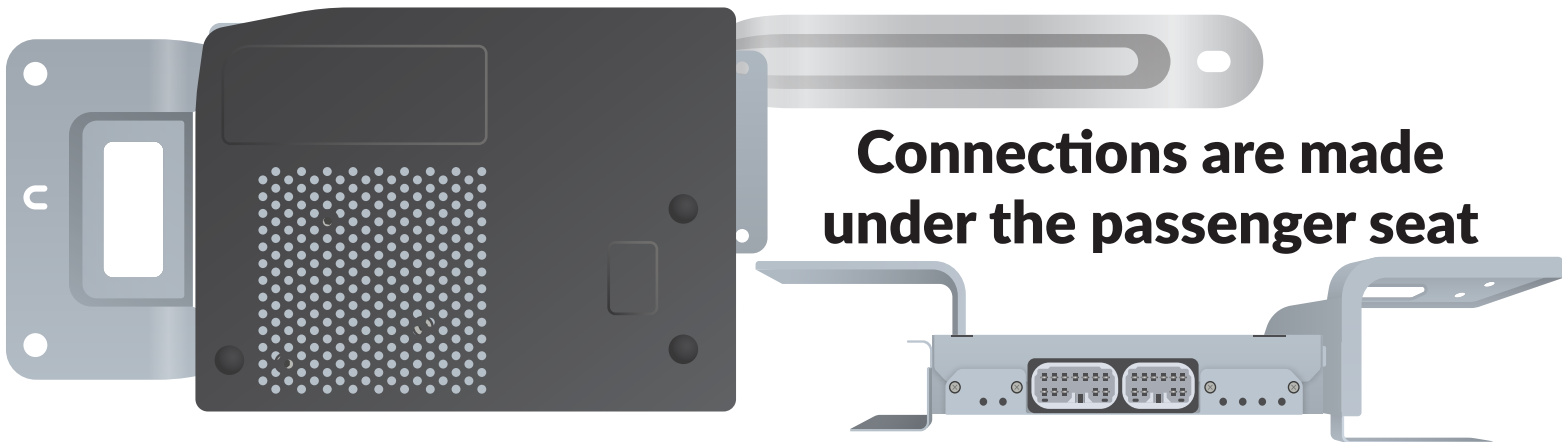

Connections are made
under the passenger seat



Base Audio

DUAL HARNESS KIT

WITH Factory Amp Under Passenger Seat



FACTORY WIRING

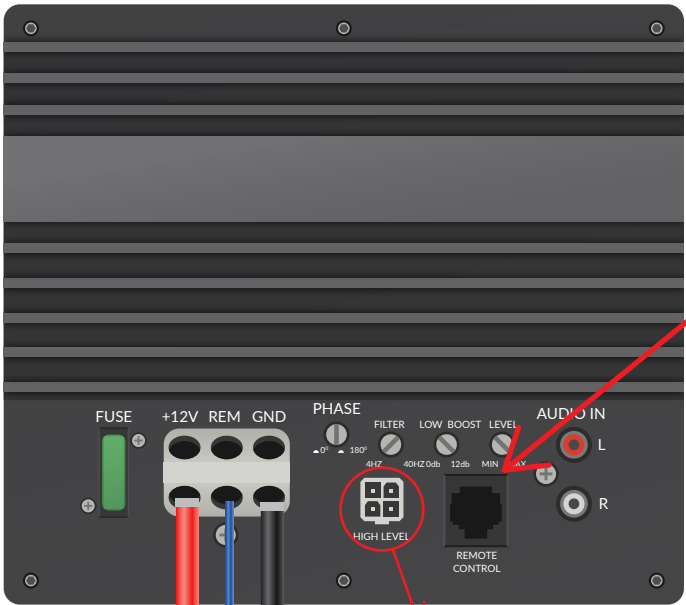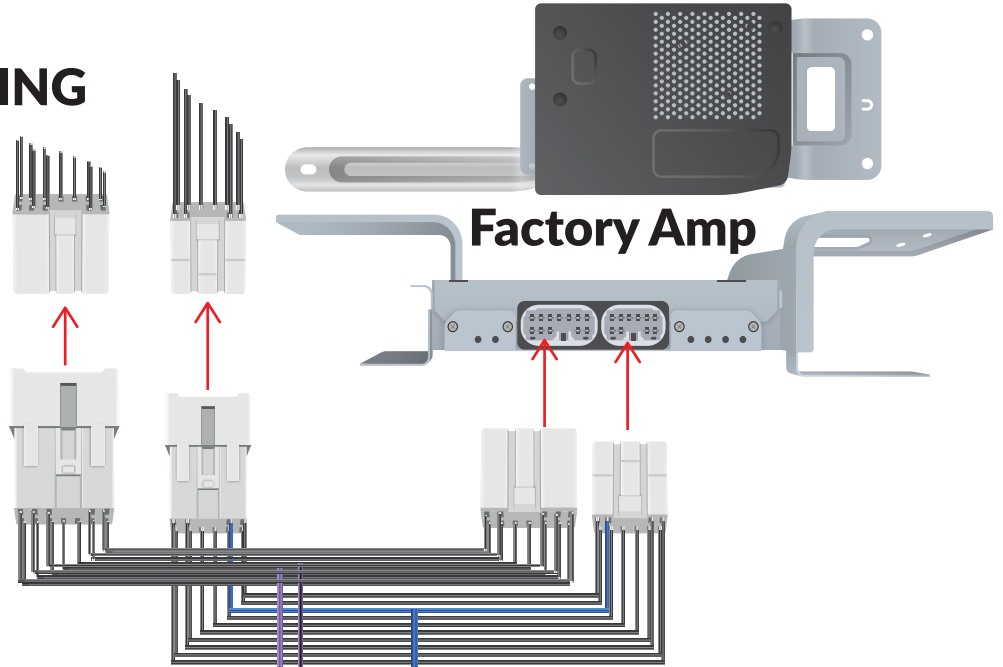

Power
(From Battery)

Ground



Base Audio

SINGLE HARNESS KIT


WITH Factory Amp Under Passenger Seat



FACTORY WIRING

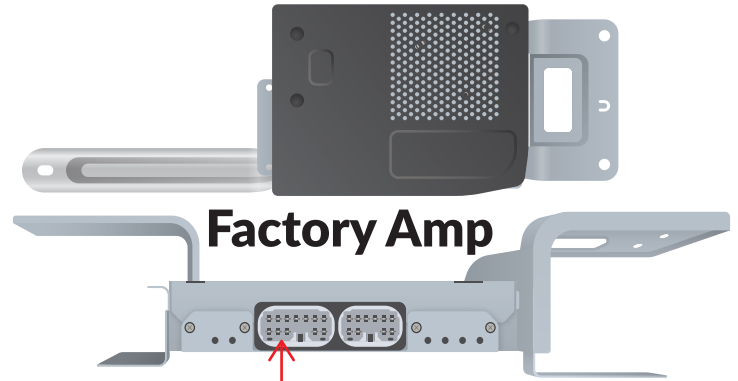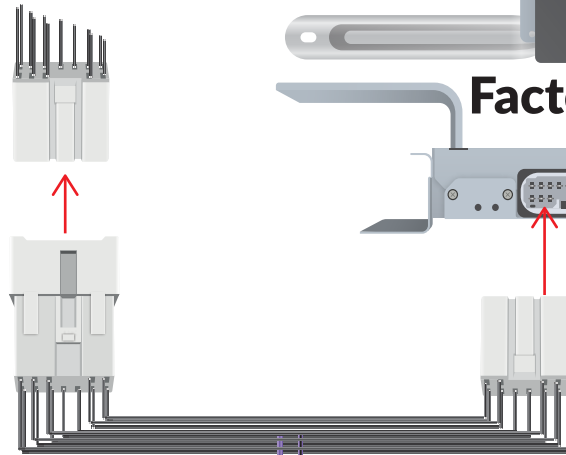


Factory Amp

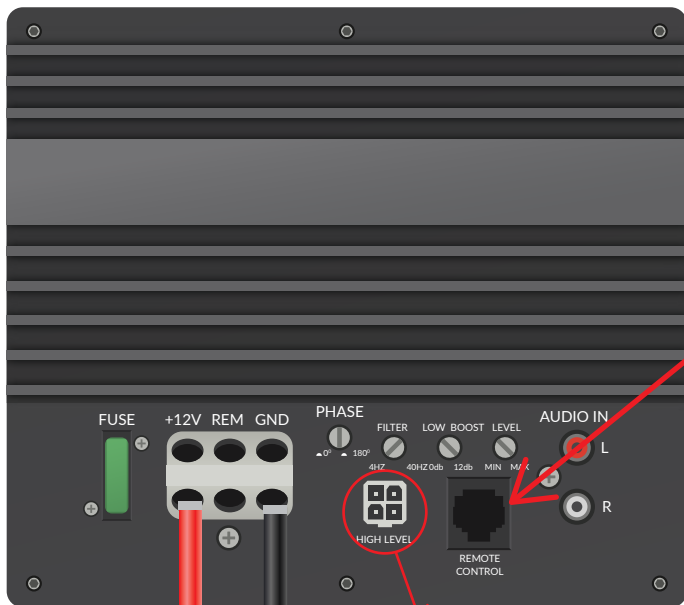

Power
(From Battery)

Ground


Base Audio Wiring Overview

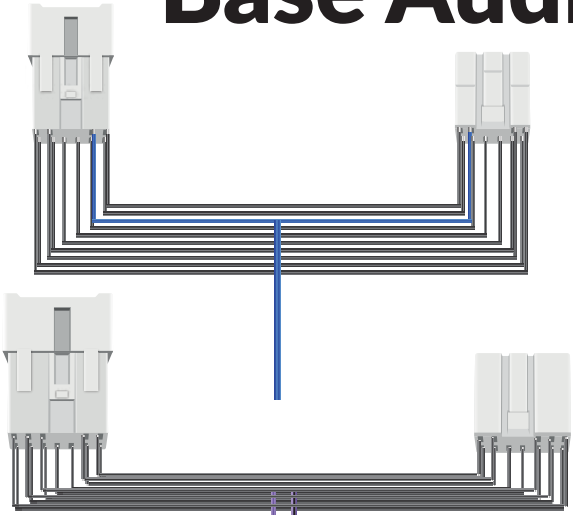

Plug & Play Harnesses Connect to factory Amplifier/wiring



Plug & Play Harness connects to powered Subwoofer integrated Amplifier

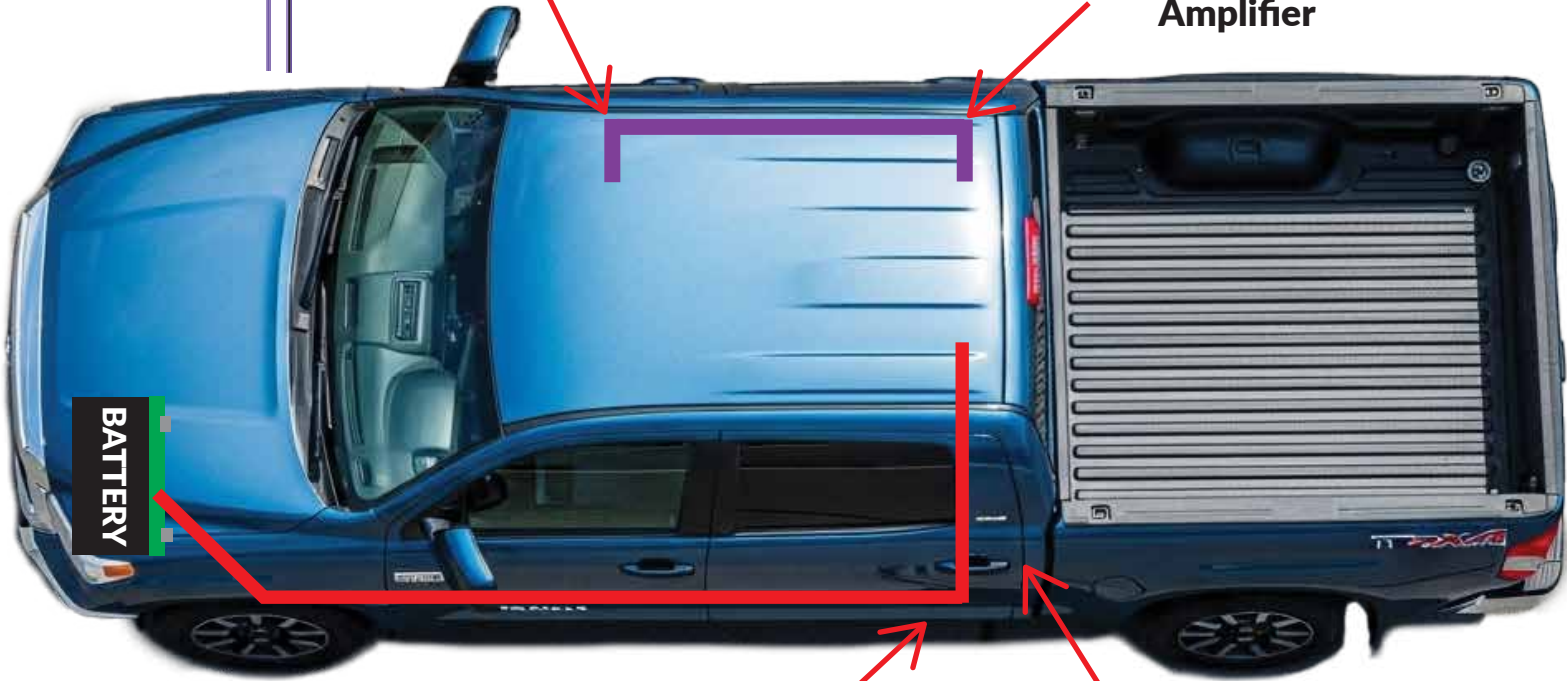

Power wire connects to integrated amplifier



Installs behind rear seat