

2014-2021 CrewMax Tundra

BASE AUDIO

“STARTER”



Add a Subwoofer

WITHOUT Factory Amp Under Passenger Seat



Installation Diagram

Connections are made behind the head unit

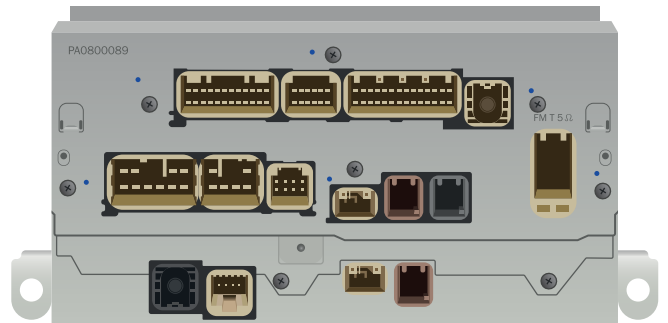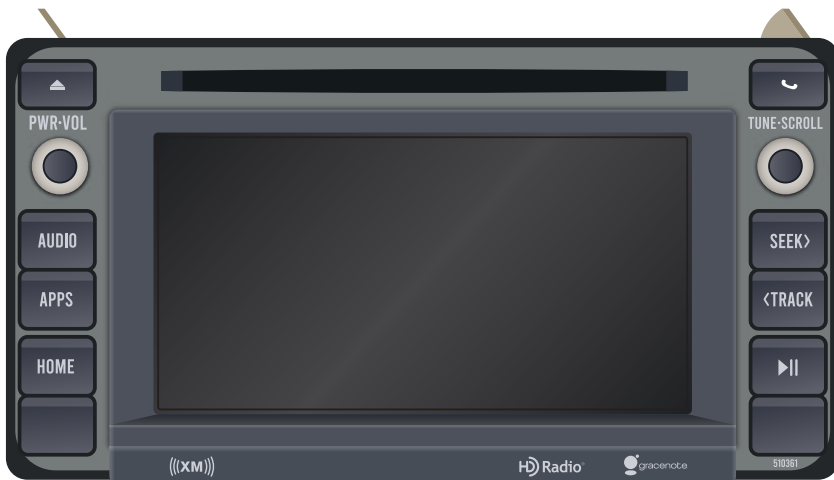


2014 -2021 Base Audio



WITHOUT Factory Amp under Passenger seat

DUAL HARNESS KIT

FACTORY WIRING

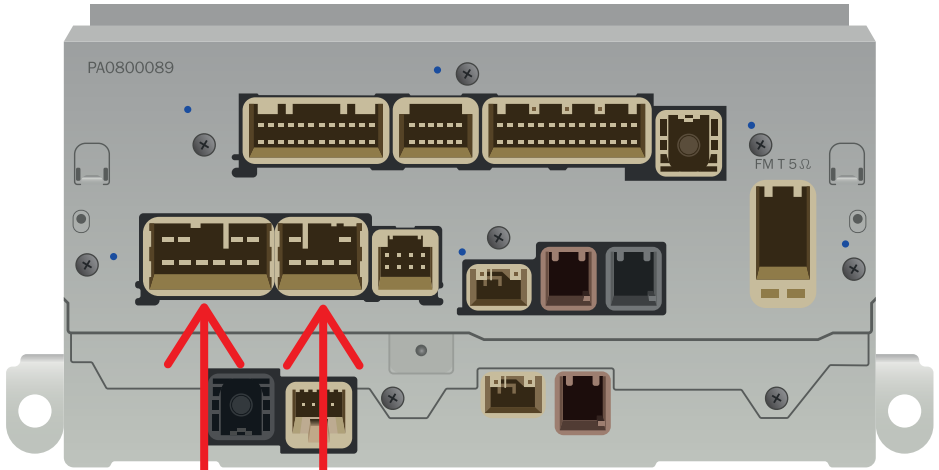

FACTORY HEAD UNIT

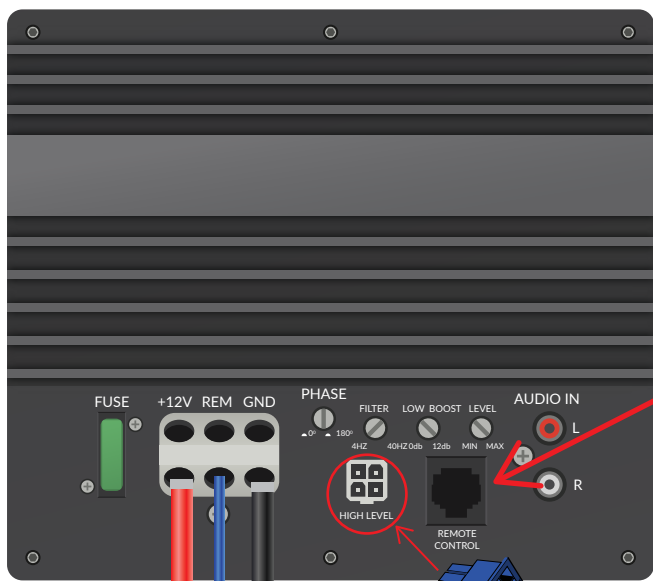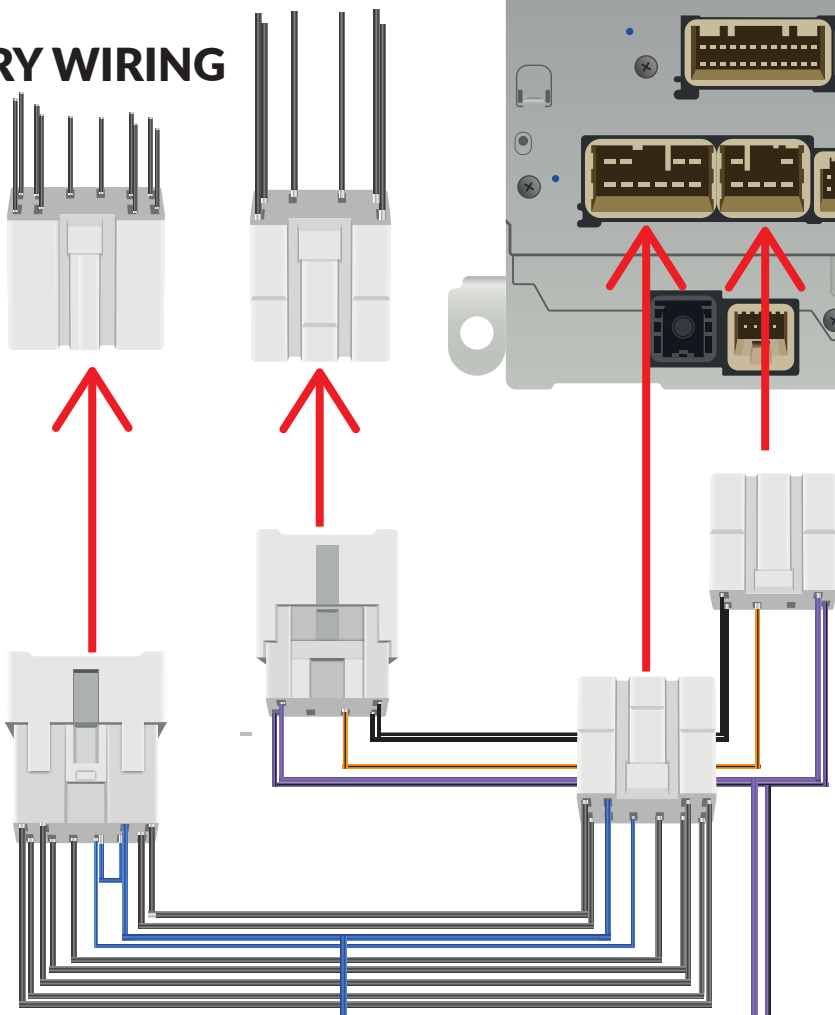

Power (From Battery) Ground





2014 -2021 Base Audio


WITHOUT Factory Amp under Passenger seat

SINGLE HARNESS KIT

FACTORY WIRING

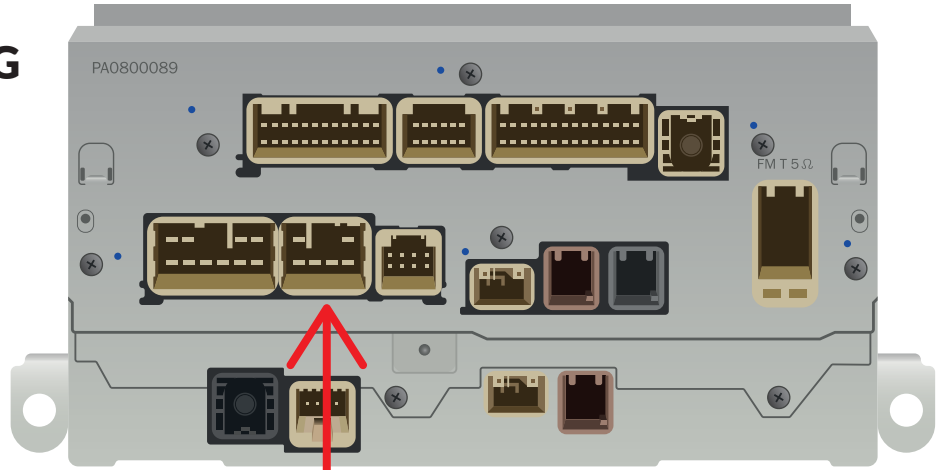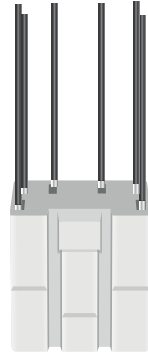


FACTORY HEAD UNIT

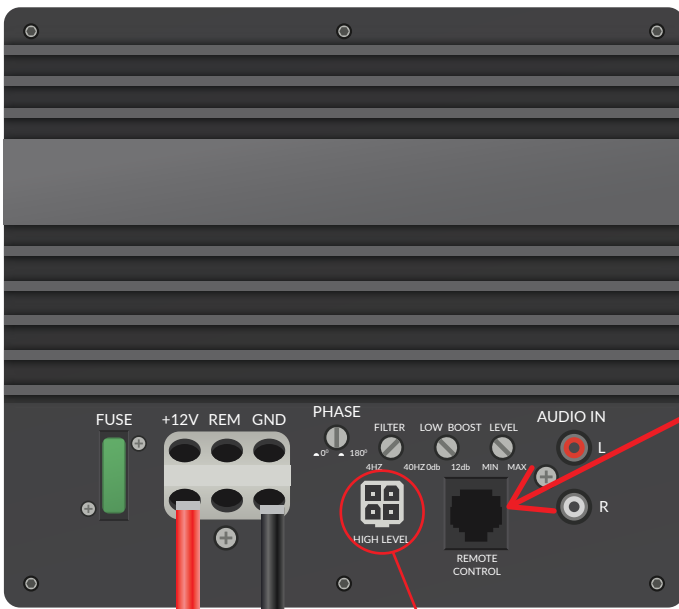

Power
(From Battery)

Ground

Base Audio Wiring Overview

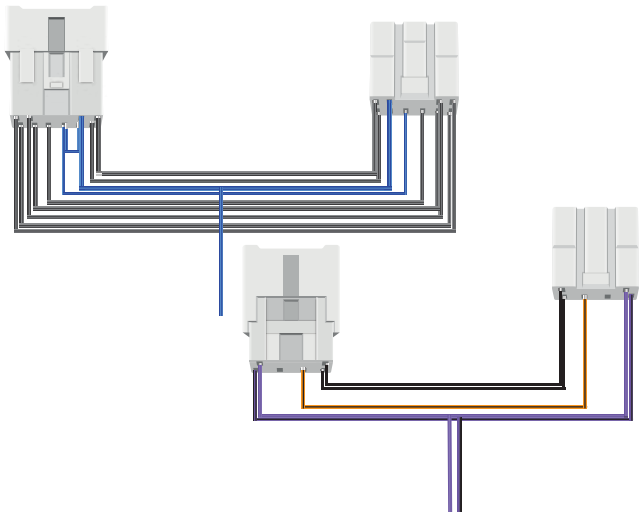

Plug & Play Harnesses Connect to factory Amplifier/wiring



Plug & Play Harness connects to powered Subwoofer integrated Amplifier



BATTERY

Power wire connects to integrated amplifier



Installs behind rear seat