

2007-2013 CrewMax Tundra

BASE AUDIO


“STARTER”

Add a Subwoofer


AFTERMARKET HEAD UNIT



Installation Diagram

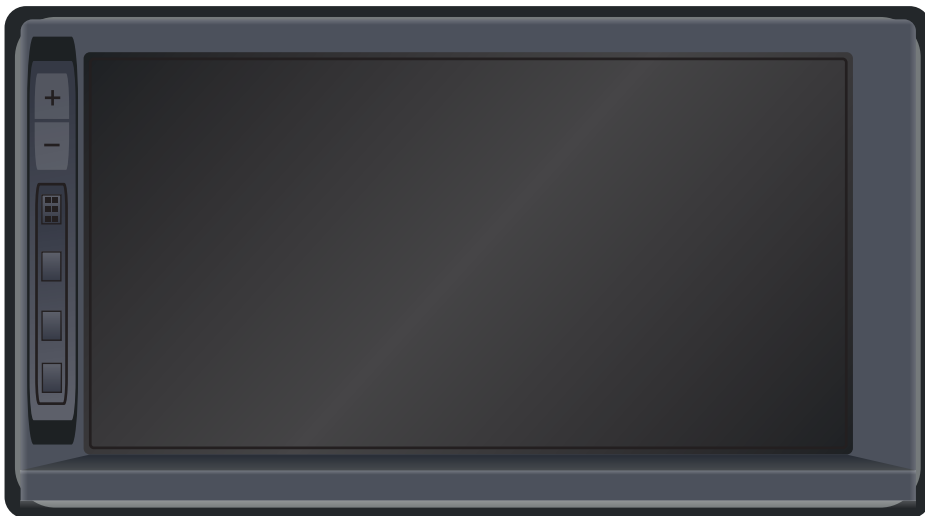


Connections are made behind the head unit

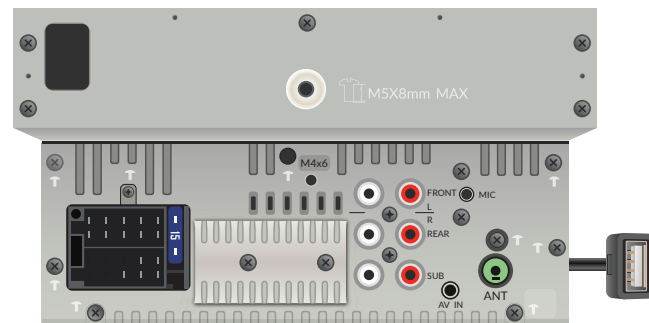

This installation process is for 2007-2021 with OR without the factory JBL system and have an Aftermarket head unit installed.

2007-2021 Aftermarket Head Unit


AFTERMARKET HEAD UNIT

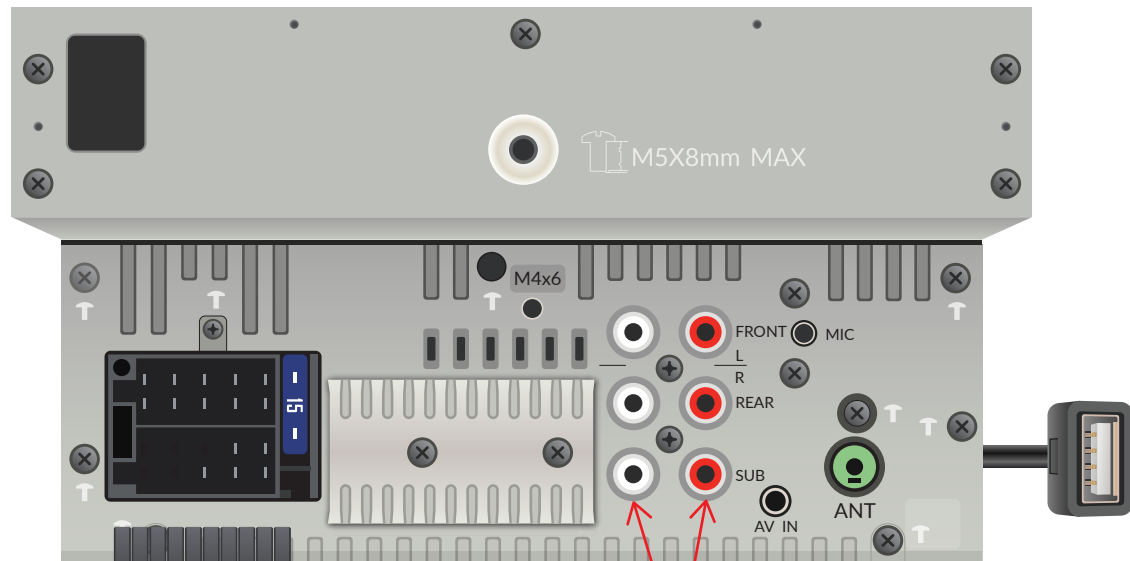

Bass Control Knob



**17ft RCA Cable
Connects to SUB
connections on back
of head unit**

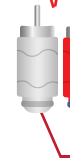

**Blue remote wires connects
to corresponding "remote
turn on wire"
provided by
your headunit manufacturer
Installation manual.**




**Power
(From Battery)**

Ground

2007-2021 Aftermarket Head Unit

AFTERMARKET HEAD UNIT

Bass Control Knob

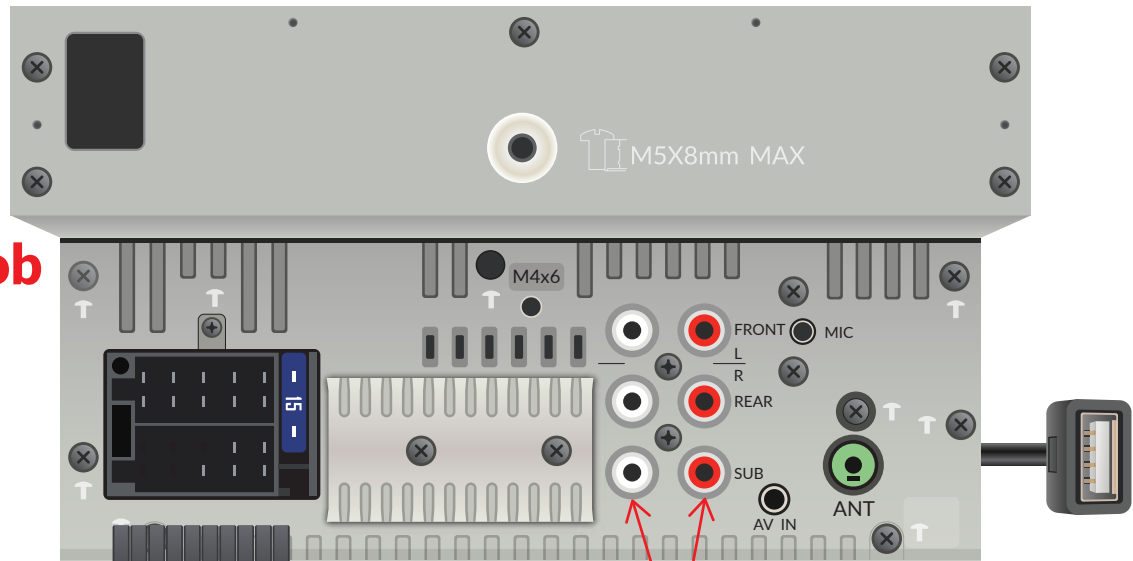

**17ft RCA Cable
Connects to SUB
connections on back
of head unit**


**Blue remote wires connects
to corresponding "remote
turn on wire" provided by
your headunit manufacturer
Installation manual.**

Amp Version 2




**Power
(From Battery)**

Ground

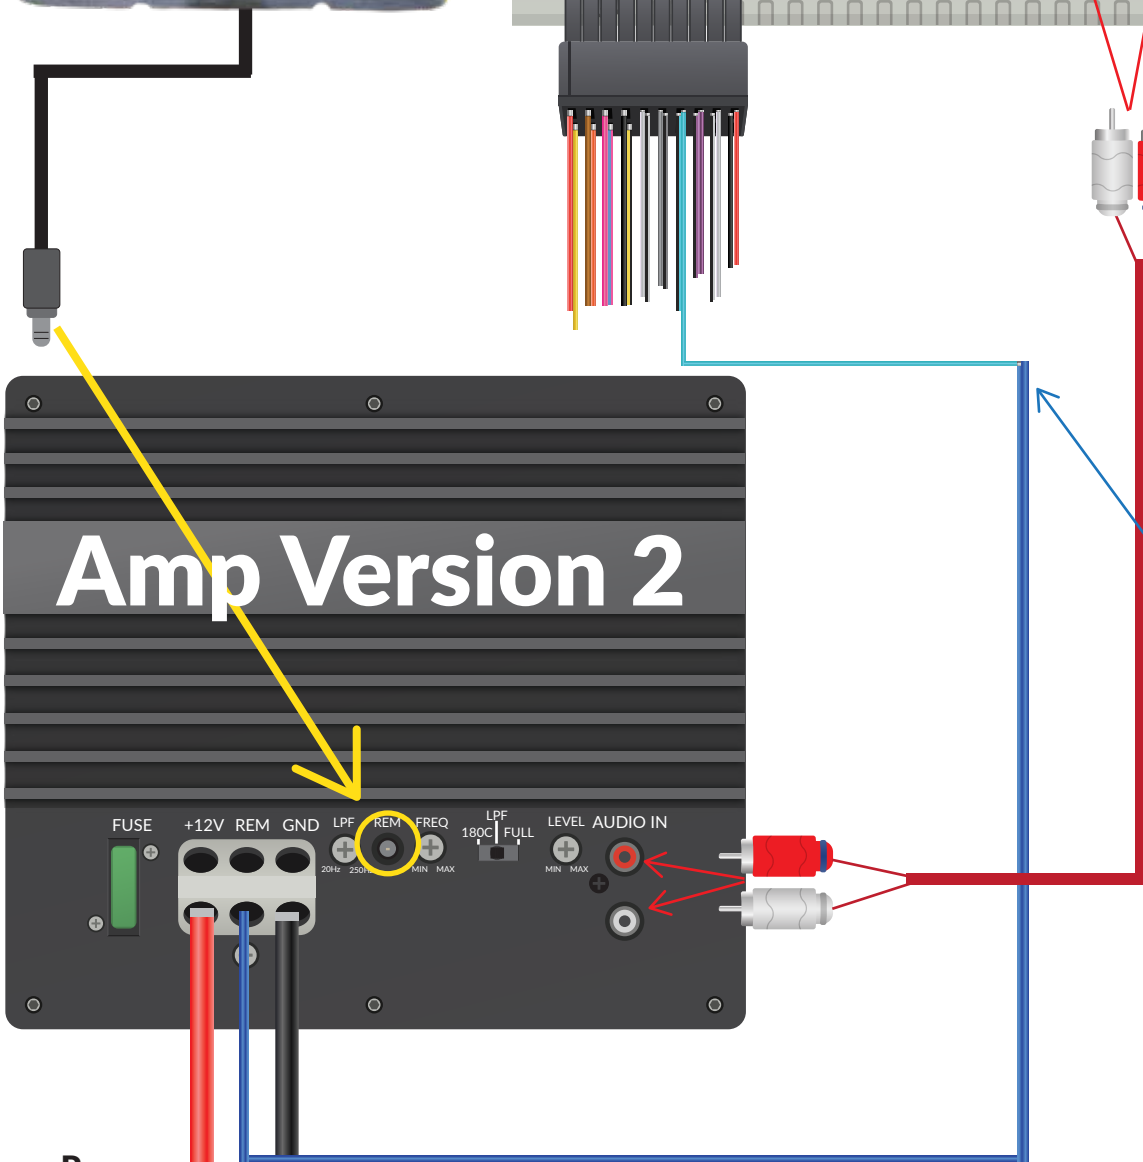

BLUE REMOTE TURN ON WIRE

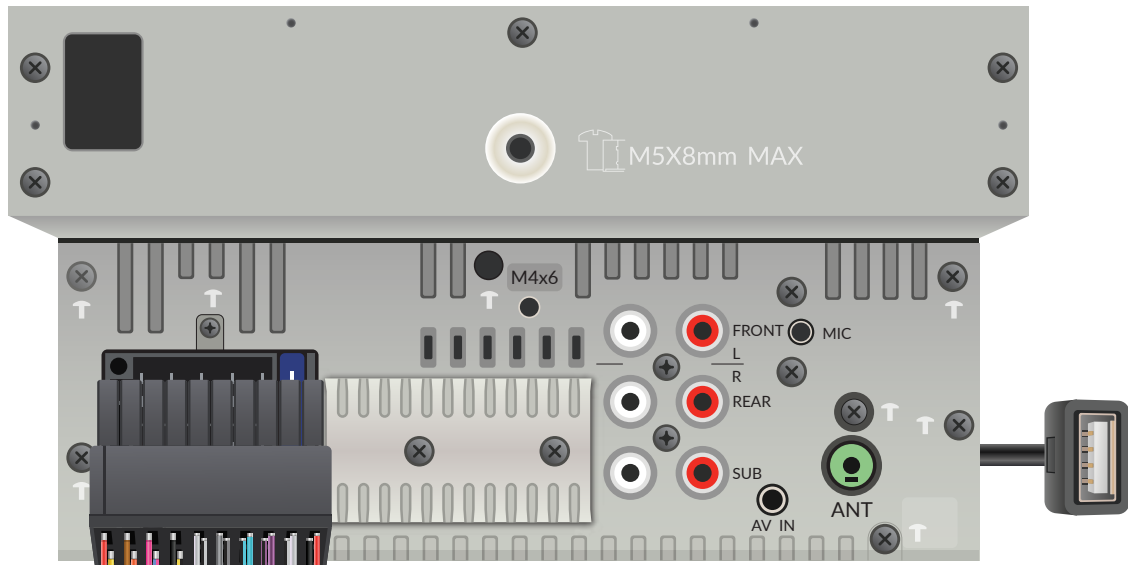

Connect blue remote turn on wire to your head unit

Refer to your head unit's manual for the correct connection




Connect blue remote wire to REMOTE connection on amplifier

Wiring Overview



RCA Cable & Blue Remote Wire connect to powered Subwoofer integrated Amplifier

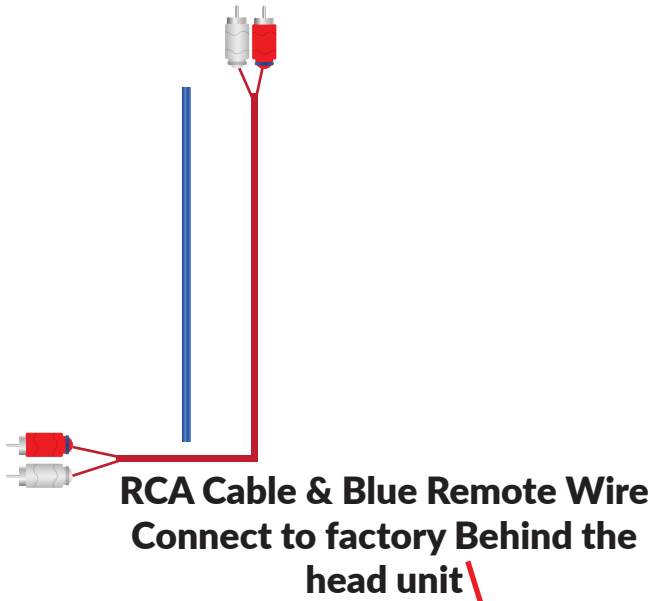

RCA Cable & Blue Remote Wire Connect to factory Behind the head unit



BATTERY

Power wire connects to integrated amplifier



Installs behind rear seat