How to add aftermarket Amplifiers to

2024+ Tacoma

Non JBL : ANC Equipped








Recurve Evo


Using tacotunes TXD20005v2

Harness 1 & Harness 2 Connections

Factory Wiring

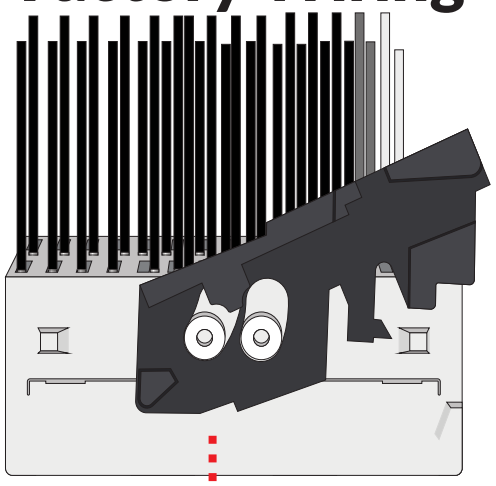


Factory ANC Module
REMOVED FROM VEHICLE

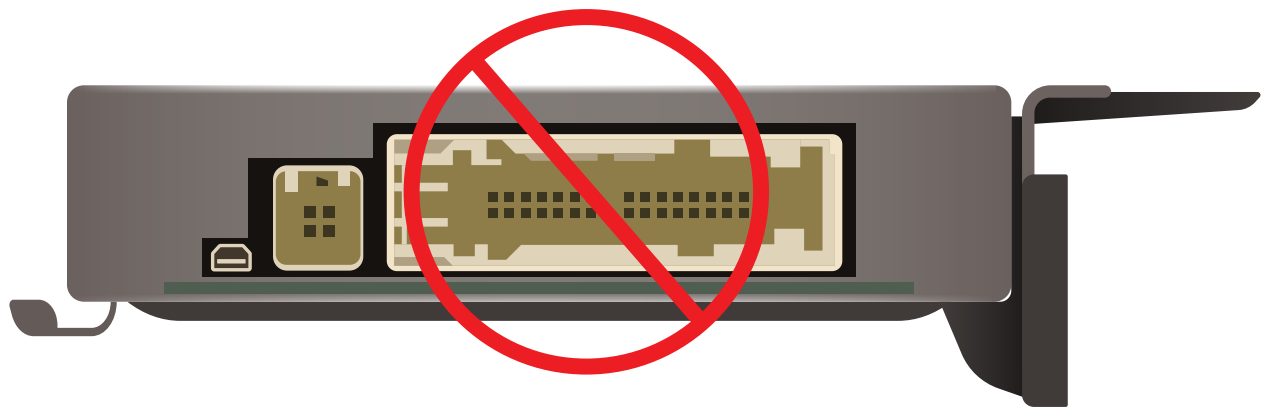


Connect
Harness 1 To
Factory Wiring

Connect
Harness 1 &
Harness 2
(12v & Ground)

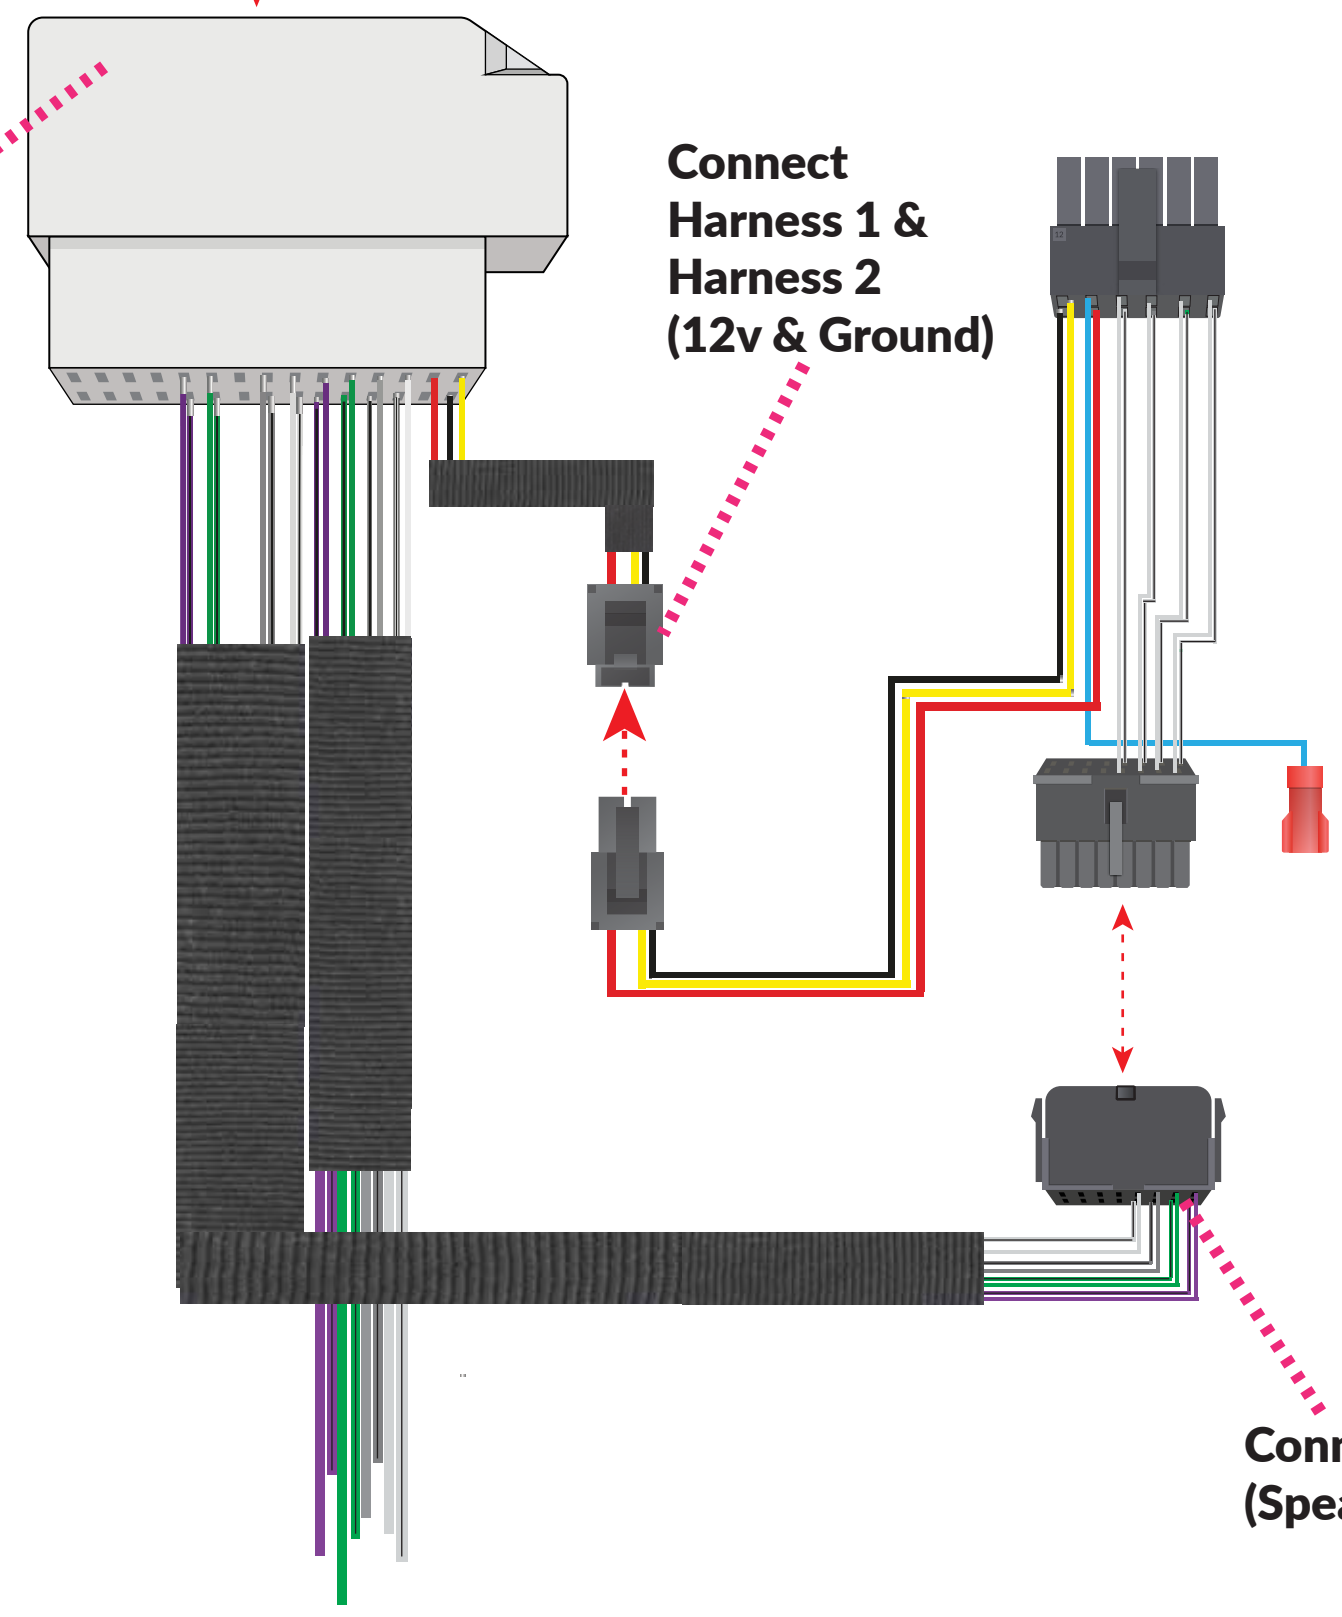

Connect Harness 1 & Harness 2
(Speaker Signals)


Harness 2 & Remote Wire

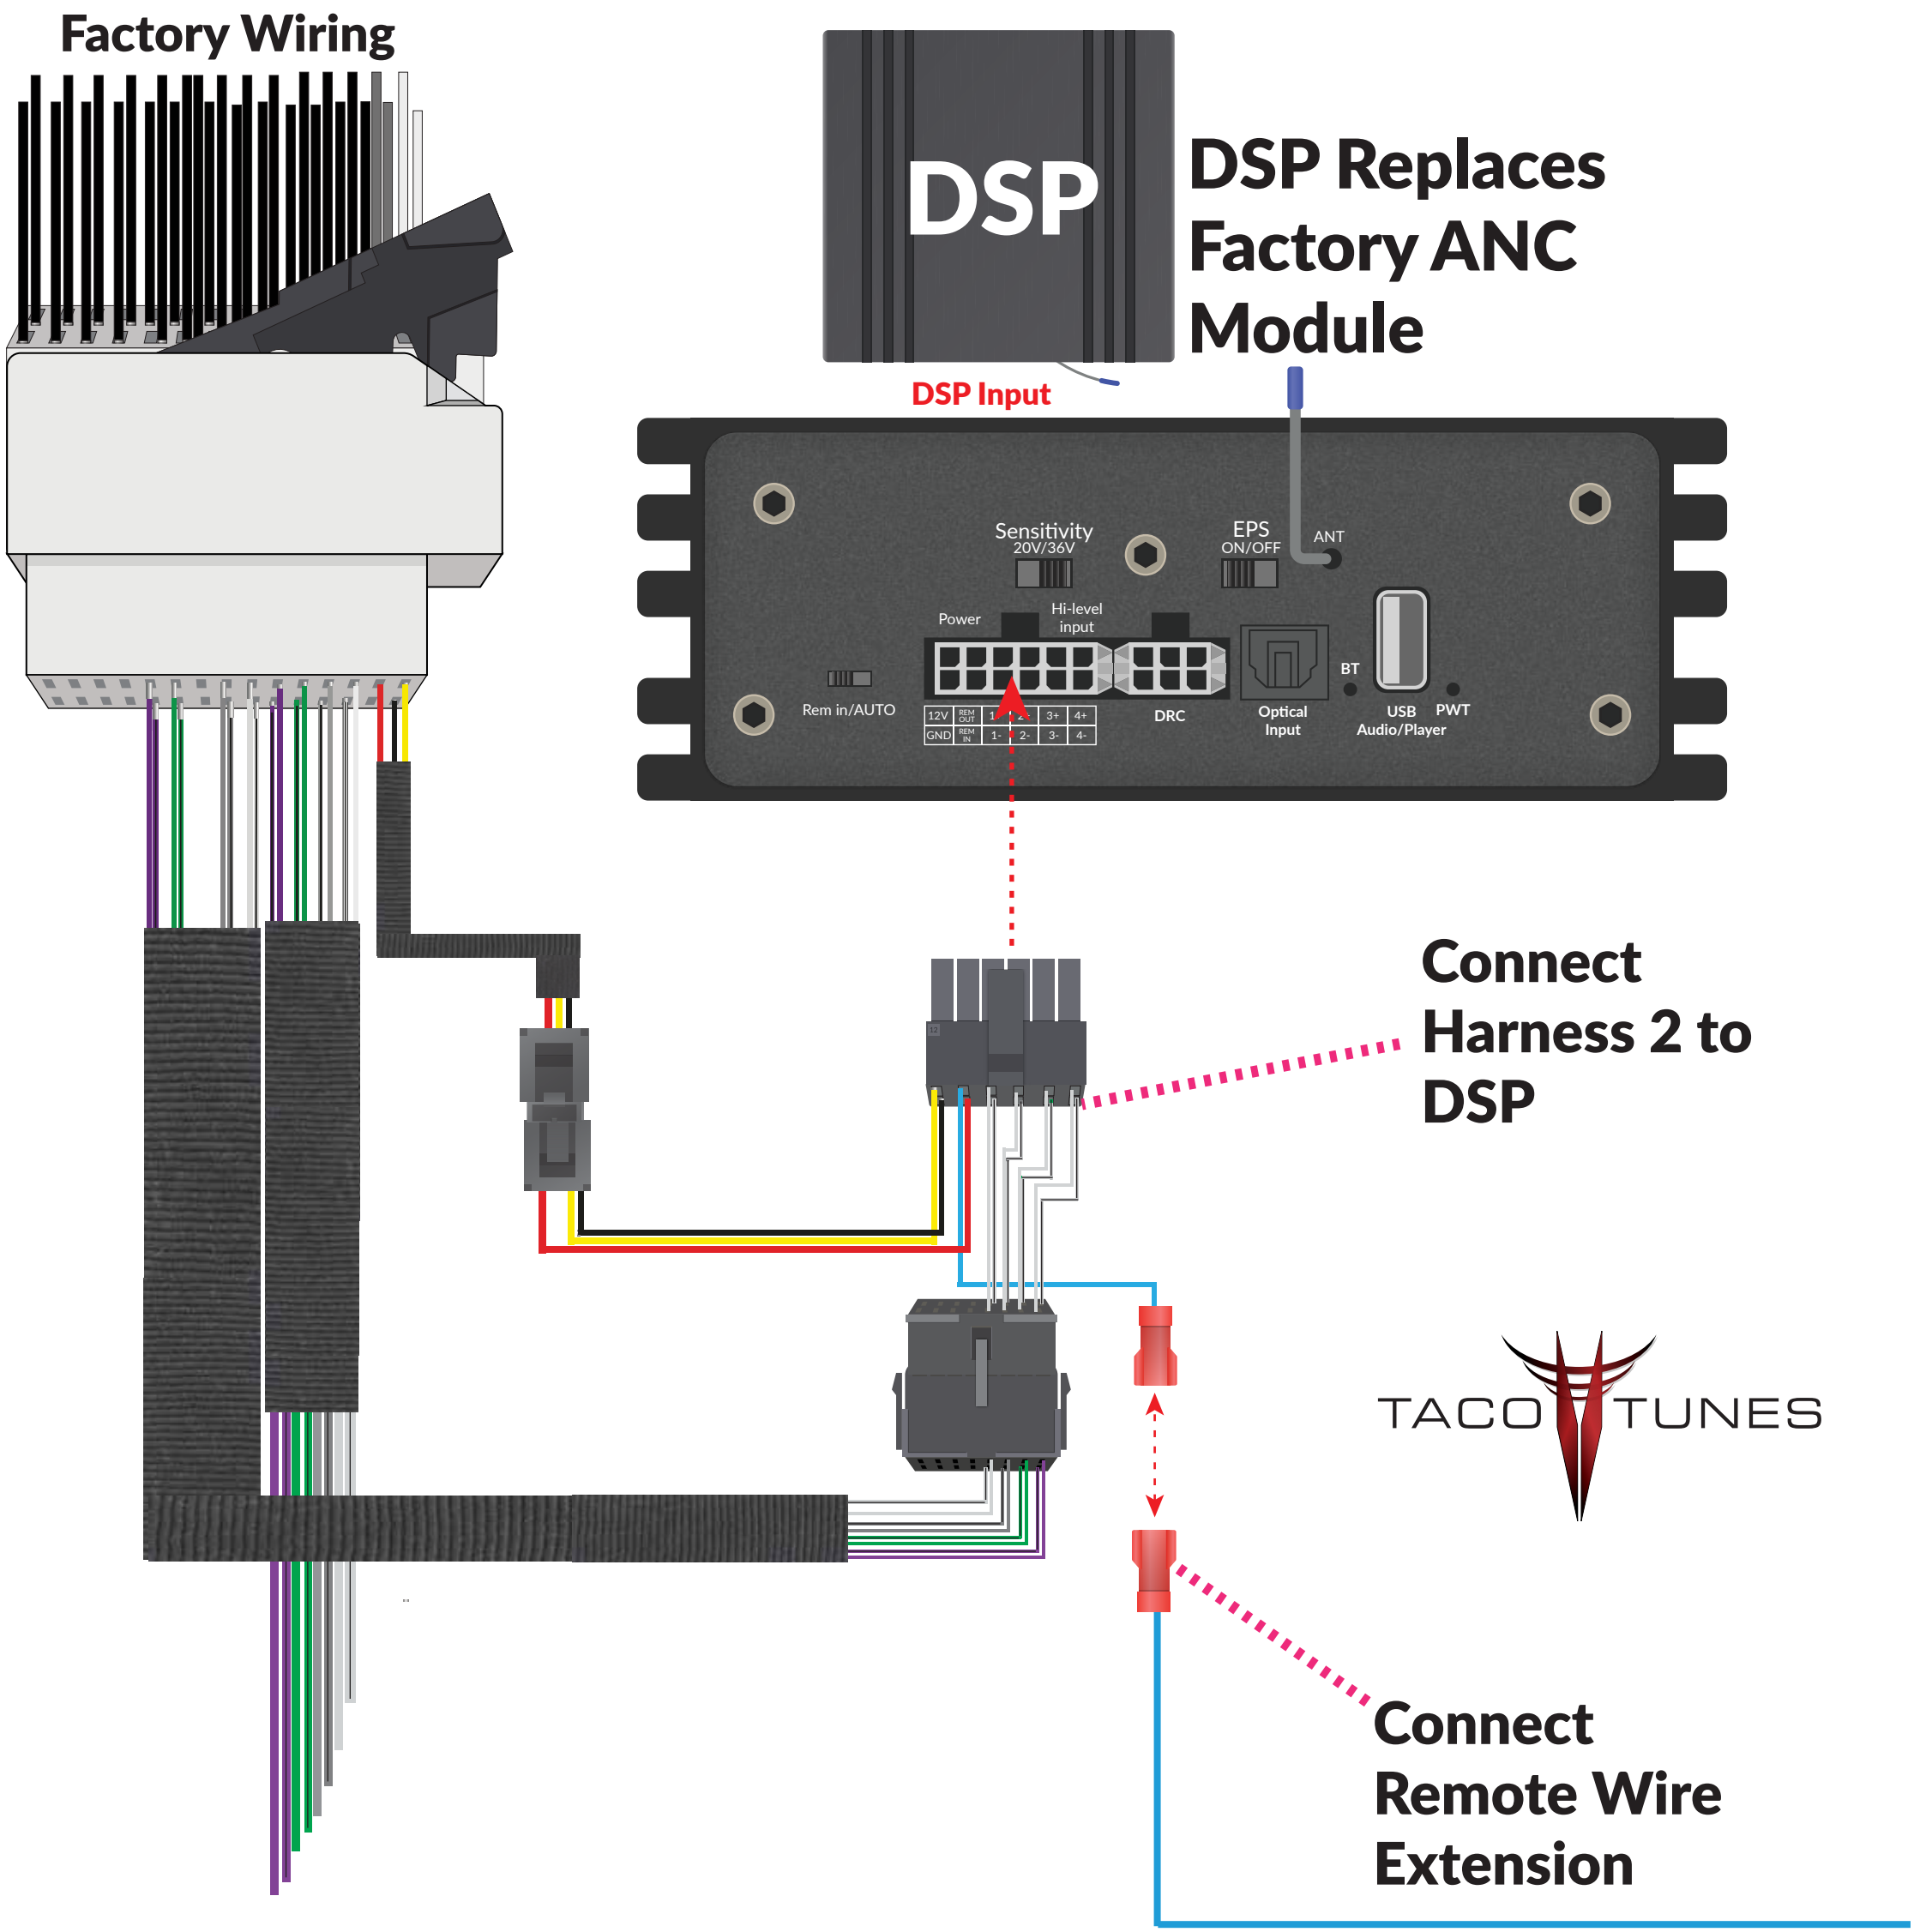


DSP to Amplifier Connections

(RCA Cables)

DSP Outputs	Amplifier Inputs
Front L (1)	Front L
Front R (2)	Front R
Rear L (3)	Rear L
Rear R (4)	Rear R
Sub L (5)	Sub L
Sub R (6)	Sub R

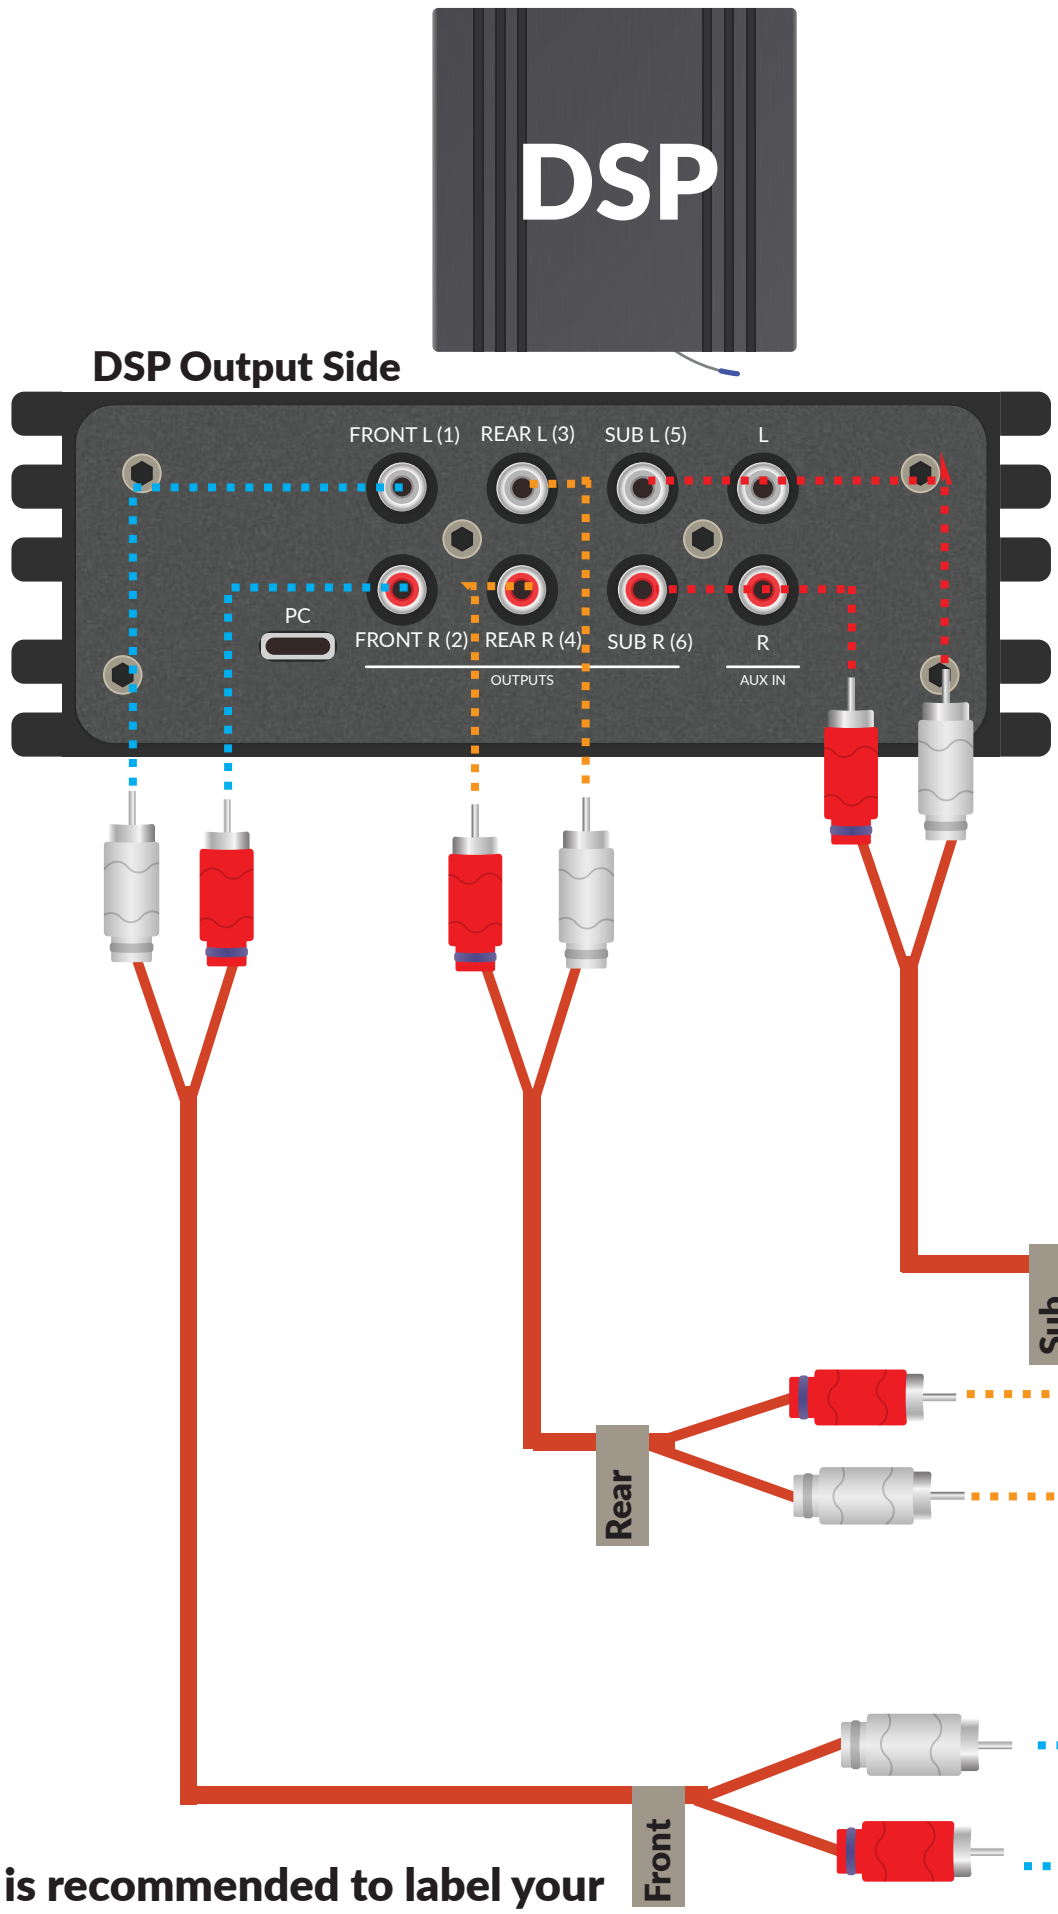

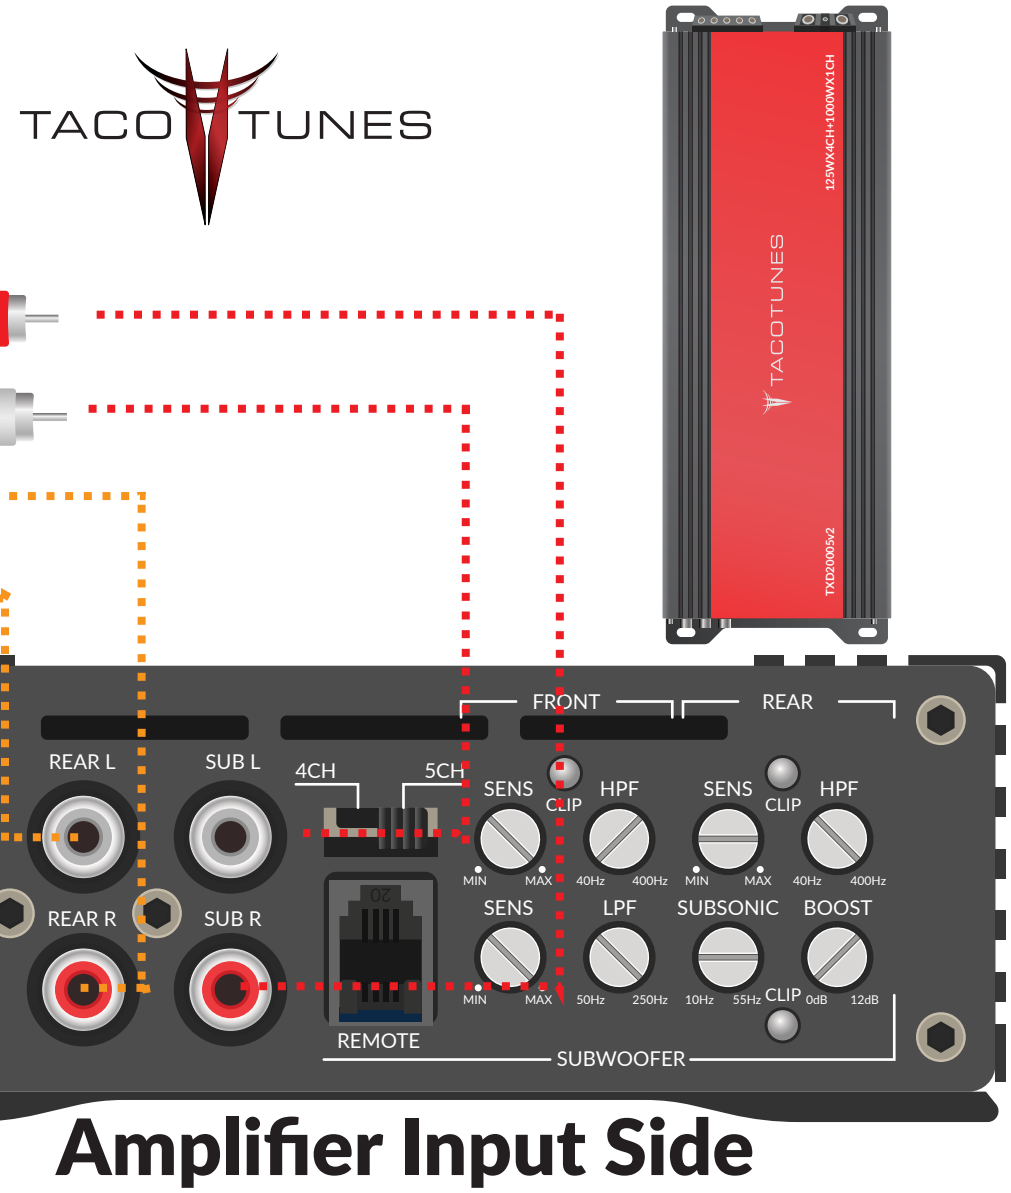


Amplifier Input Side

It is recommended to label your RCA Cables Front, Rear, Sub prior to running them inside your vehicle.

This Ensures you connect them to the proper Amplifier Inputs.

Amplifier Output Connections


Factory Wiring

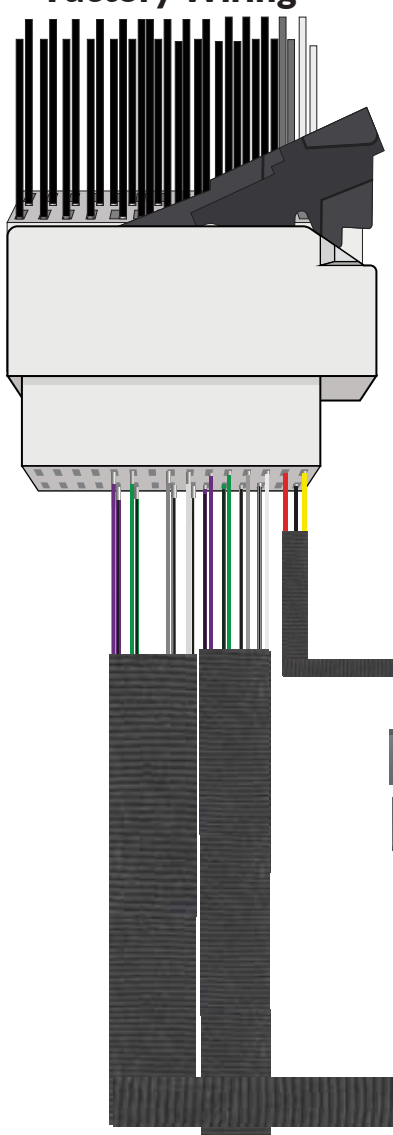

TACO TUNES




Amplifier Output Side

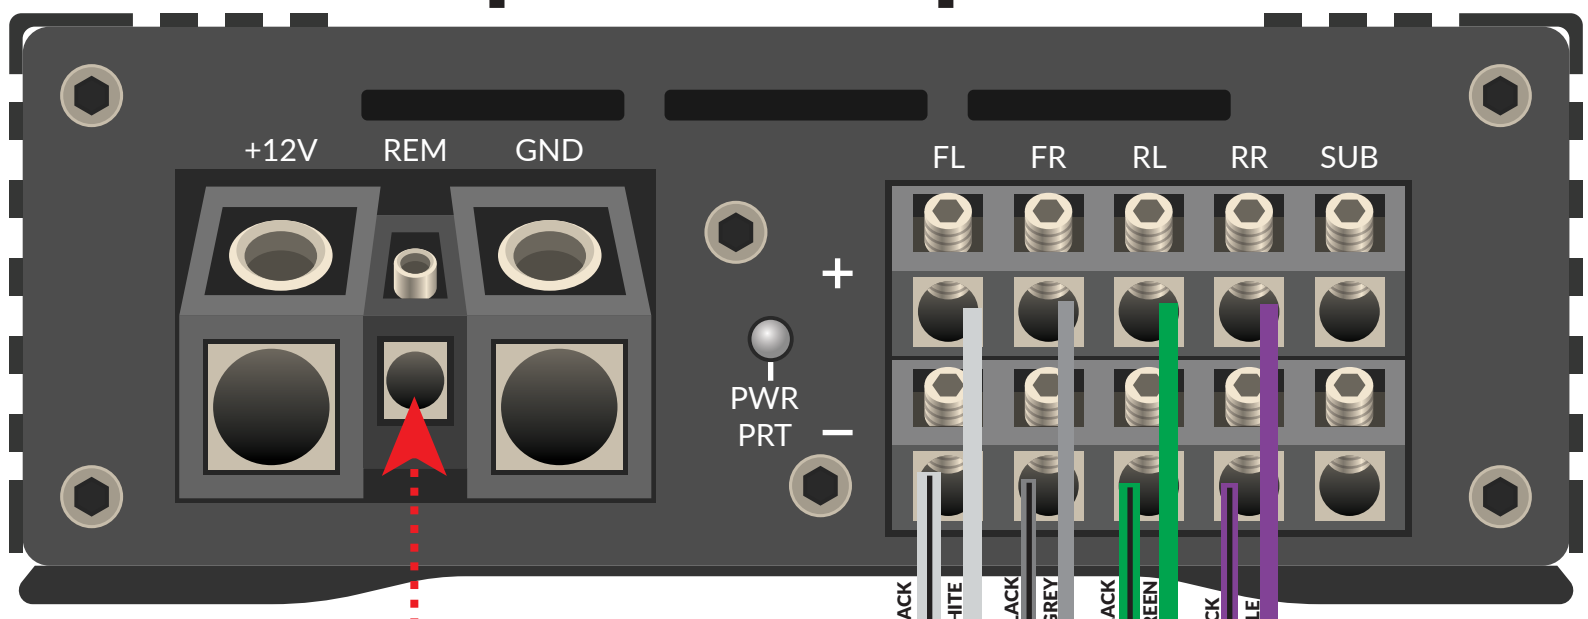


Blue Remote Wire Connects to REM

Output Wires


Connections Overview

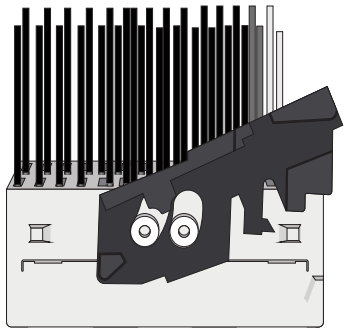


Factory ANC Module
REMOVED FROM VEHICLE

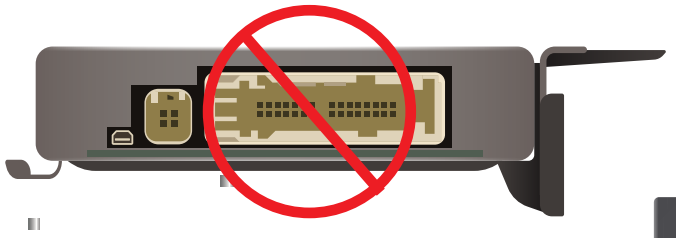


TACO TUNES

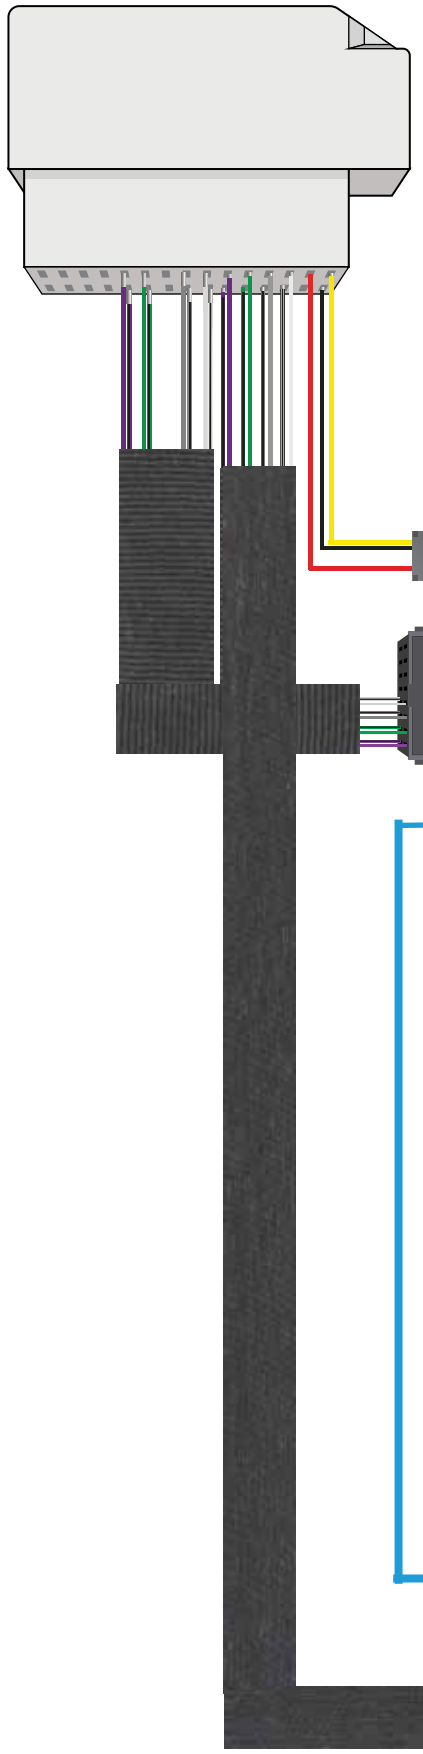


DSP

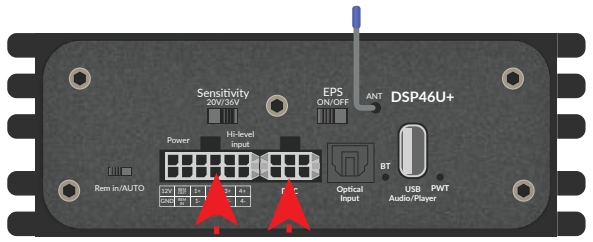

DSP Output Side

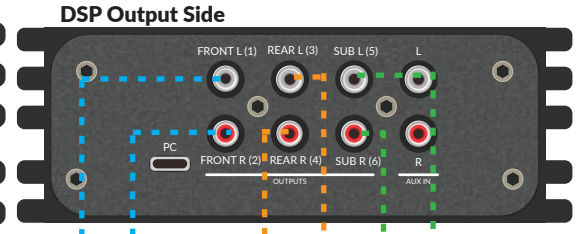

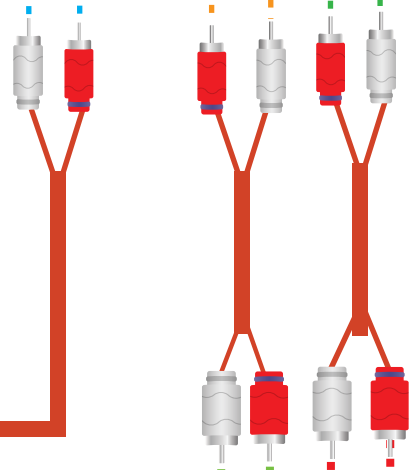



Amplifier Input Side



Amplifier Output Side

